



OWNER'S GUIDE


SMART ATTIC GABLE FAN



AFG SMT PRO-2.0



AFG SMT PRO-3.0

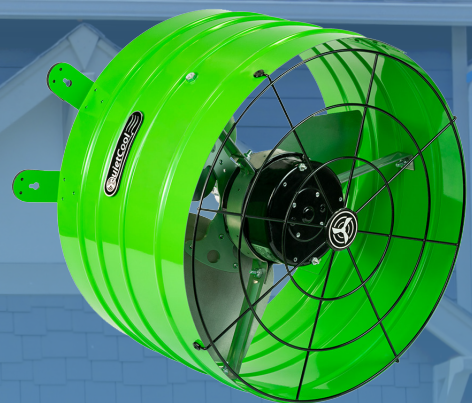

AFG SMT ES-3.0

! DO NOT THROW AWAY!

SERIAL NUMBER FOR FAN IS LOCATED ON THE BACK COVER OF THE OWNER'S GUIDE.

■ LEAVE WITH HOMEOWNER

CONTENTS

1. SYSTEM OVERVIEW	3
1.1 Introduction	3
1.2 Features	3
1.3 System Venting Requirements	4
2. INSTALLATION	5
2.1 Installing AFG Model Fans	5
2.2 Installing AFG Vent Covers	6
3. WIRING	7
3.1 Two Speed Wiring - AFG SMT PRO-2.0 & 3.0	7
3.2 Three Speed Wiring - AFG SMT ES-3.0	8
3.3 Smart Control Hub - LED Indicators	9
4. SYSTEM OPERATING INSTRUCTIONS	10
4.1 Download Smart Control App	10
4.2 Operating the Smart Control App	10
4.3 Frequently Asked Questions	18
WARRANTY	19

WARNINGS

- ⓘ **CAUTION:** This unit has an unguarded impeller. Do not use in locations readily accessible to people or animals.
- ⓘ **CAUTION:** Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- ⓘ **CAUTION:** Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- ⓘ **CAUTION:** Automatically started device. To reduce the risk of injury, disconnect from power supply before servicing. Do not use fan with any solid state speed control device. For residential use only.

QC MANUFACTURING, INC.

26040 YNEZ ROAD
TEMECULA, CA 92591

PHONE 1-888-QUIETCOOL

WEBSITE WWW.QUIETCOOLSYSTEMS.COM



1. SYSTEM OVERVIEW

1.1 INTRODUCTION

CONGRATULATIONS

on the purchase of your new QuietCool Smart Attic Fan!

QuietCool Attic Fans are the best in the business. New for 2020, our Smart Line of attic fans have gotten even smarter! Now through the use of a smartphone app, you can control all the settings of your Smart Attic Fan right from your couch!

With the QuietCool Smart Control App, you can see your current attic temperature and humidity, modify the temperatures for the multiple speeds of the fan, setup presets for the different seasons of the year, and even operate your fan on a timer!

QuietCool Attic Fans work almost everywhere, anytime. During the summer, an attic can be 40-50 degrees hotter than the outside temperature, which in turn heats up the house much faster. With an attic fan, you can cool the attic to the same temperature as it is outside, greatly reducing the house from heating as quickly.



1.2 FEATURES

- + High Efficiency Multi-Speed Motors
- + App Based Smart Control
- + Integrated Mounting Tabs with Anti-Vibration Pads
- + Designed and Built in California
- + 15 Year Warranty

 
1.3 SYSTEM VENTING REQUIREMENTS

ⓘ **VERY IMPORTANT:** 1 SQUARE FOOT OF NET FREE VENT AREA PER 750 CFM

ⓘ **RECOMMENDED:** 2 TO 4 SQUARE FEET OF INLET VENTS PER FAN

Venting plays a very significant role in the performance of QuietCool fans. QuietCool recommends a minimum of 1 SQ. FT. of venting for every 750 CFM in the QuietCool system. If an attic has at least 1:750 attic venting, the QuietCool system will operate efficiently and effectively. If an attic has less than 1:750 attic venting, the system may not operate as efficiently, or effectively, as it could with 1:750 attic venting. But don't worry, the system will still operate if there is not enough venting.

Insufficient venting is a very simple problem to fix. Roofing contractors can add extra venting to most homes simply and easily. The most common types of venting is shown in the chart below.

Vent Type	Model Type	Average Size	Venting Sq. Ft.
Gable vent		12" x 19.5"	1.20
Dormer Vent		14" x 8"	0.70
Eave Vent		4" 5" 6"	0.03 0.04 0.07
Ridge Vent		4' - 12'	0.125 per ft
Soffit Vent		16" x 4" 16" x 6" 16" x 8"	0.19 0.29 0.39
O'Hagin Vent		Low/Medium Profile Tapered Low Profile Low Profile Flat High Profile	0.5 0.6 0.68 0.68
Turbine Vent		8" 12" 14"	.35 .79 1.1


*Note: This table is only a guideline and is not a guarantee of venting capacity.

2. INSTALLATION

2.1 INSTALLING ATTIC GABLE FAN

Installation Video:

Watch the video by scanning the QR code or visit
www.QuietCoolSystems.com/support

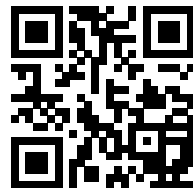

NOTE: The AFG model fans are designed to mount behind existing vents. If no vent exists, one must be installed. Vent should be installed in the upper center section of the gable.

1. Installing the QuietCool AFG is very easy. To install the AFG, simply mount the gable fan to your gable vents as shown in the following steps:

Flush Mount: The AFG can be mounted flush to a rectangular type louver by fastening through the mounting brackets to the frame of the louver (as shown in Figure 2.1A).


As stated in the note above, any area of the louver that is not covered by the AFG must be sealed off in order to prevent air leakage, which may hinder performance.

This is the most conventional method of mounting the AFG. We recommend using the Flush Mount option if possible for all applications.

Figure 2.1A



Figure 2.1B

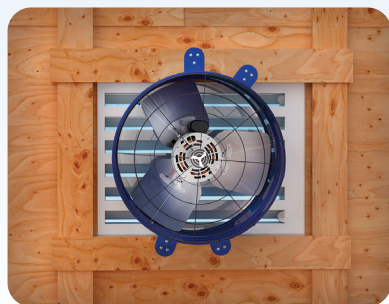

Wide Mount: The AFG can be mounted on a wide louver, but additional mounting steps must be taken in order for the fan to work properly. As shown in Figure 2.1B, two additional boards must be fastened to the boards framing the gable vent so the AFG can be mounted securely.

As stated in the note above, any area of the louver that is not covered by the AFG must be sealed off in order to prevent air leakage, which may hinder performance.

Odd Mount: The AFG can also be mounted off center for an odd shaped louver (as shown in Figure 2.1C).

As stated in the note above, any area of the louver that is not covered by the AFG must be sealed off in order to prevent air leakage, which may hinder performance.

While this is not the most ideal way to mount the gable fan, it is possible. However, since the fan is not completely covering the vent, maximum airflow will not be achieved.

Figure 2.1C




NOTE: The AFG can be mounted on many other types of louvers, including triangle vents, round vents, half-round vents, etc. If the vent is smaller than the area of the fan, we recommend constructing a chamber that surrounds the vent, and then mount the AFG to the chamber to ensure maximum airflow and performance.

2.2 INSTALLING AFG VENT COVERS

Installation Video:

Watch the video by scanning the QR code or visit www.QuietCoolSystems.com/support

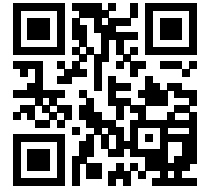

Included with your QuietCool Attic Gable Fan are four vent covers that are designed to be installed around the attic fan housing to block any air backdrafting into the attic through a gable vent that is larger than the attic fan cylinder, causing air to cycle in and out around the vent.

1. Take the vent cover and match it to one of the sides around the attic fan housing.
2. Using the two provided screws, attach each corner to the wood framing around your gable vent. (See picture for screw locations)
3. Repeat step 1 and 2 for the three additional covers.

Figure 2.1A

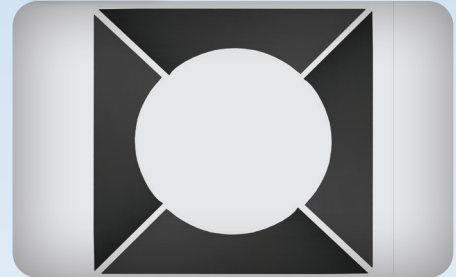


Figure 2.1B



3. WIRING


❗ IMPORTANT: Wiring Diagrams are for examples ONLY. Wiring should be done by a licensed electrician following local building and electrical codes and/or NEC guidelines.

❗ NOTE: Your fan came with the Smart Control Hub pre-wired to a power cord for testing purposes before installation. If you would like to hard-wire the fan, or it is required by your local building codes, please follow the wiring instructions below.

3.1 TWO SPEED WIRING - (AFG SMT PRO-2.0 & AFG SMT PRO-3.0)


1. Using a wire nut, connect the black wire from the power source to the black wire from the Hub.
2. Connect the white wire from the power source and the white wire on the fan to the white wire from the Hub.
3. Connect the black wire from the fan to the blue wire on the Hub
4. Connect the red wire from the fan to the red wire on the Hub
5. Cap the yellow wire from the Hub.
6. Ground the green wire from the fan and the green wire from the power cord to the ground screw in the Hub.
7. Set the dip switch positions inside the Hub as shown in the Figure B.
8. Power-on the Hub. The Power LED indicator will be lit.
9. Press the Test button to make sure the fan works. The Test LED indicator will blink three times every two seconds indicating 2-speed and the fan will be on high. Press the Test button again and the fan will switch to low speed and the Test LED indicator will blink once every two seconds. Press the Test button again and the fan should shut off and the LED will be off.
10. If the fan doesn't operate as described in step 9, please check the dip switch position/wiring.

Figure 3.1A

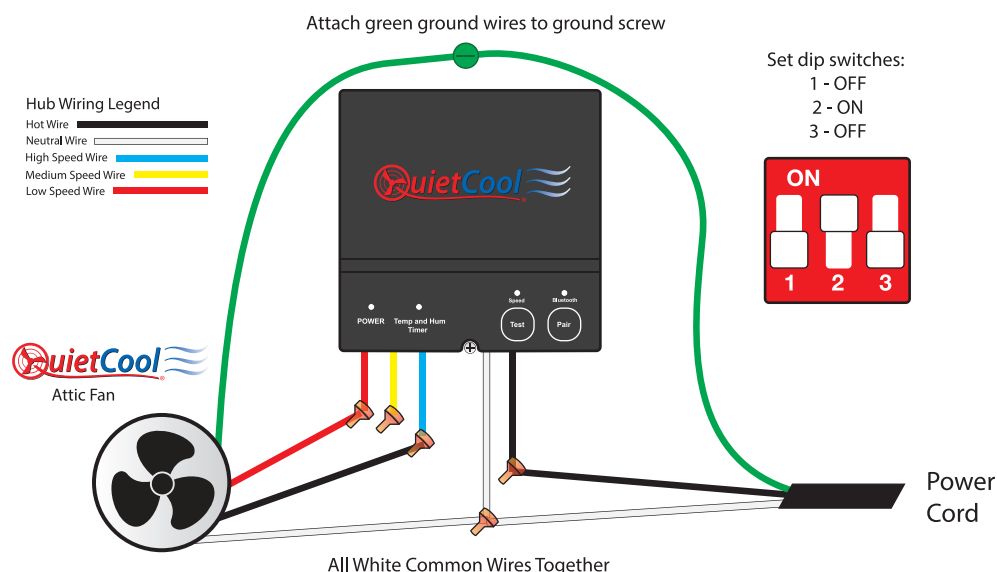

3.3 SMART CONTROL HUB - LED INDICATORS

- **POWER Indicator**
 - The Power LED indicator will always be lit when the Hub is connected to Power.
 - If this LED is not lit, check the power source.
- **Temp and Hum | Timer Indicator**
 - This LED indicator will light up as shown below:
 - Blinking: Timer Mode Active
 - Solid: Smart Mode Active
- **Test Indicator**
 - The Test LED indicator will light up as shown below when the Test button is pressed:
 - Two Speed Fan: blink three times every 2 seconds on HIGH, blink once every 2 seconds on LOW
 - Three Speed Fan: blink three times every 2 seconds on HIGH, blink twice every 2 seconds on MED, blink once every 2 seconds on LOW
- **Pair Indicator**
 - The Pair LED indicator will blink when making pair operations. Please see **SETTING UP YOUR FAN on page 12** for details on pairing.
 - The indicator will be lit up solid when a device is connected via Bluetooth.
 - The indicator will not be lit when no pairing operations are being made or no device is connected.

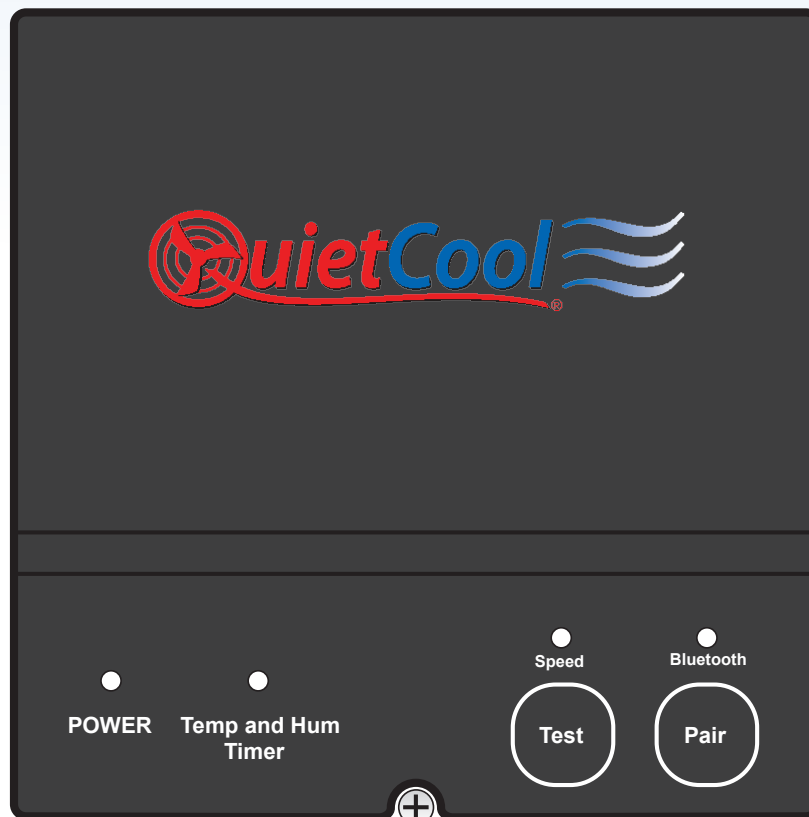

4. SYSTEM OPERATING INSTRUCTIONS

4.1 DOWNLOADING THE QUIETCOOL SMART CONTROL APP



Download the QuietCool Smart Control App onto your iOS or Android device.



Scan the QR code above or visit QuietCoolSystems.com/smart-control/ and click the link to download the app to your device.




4.2 OPERATING THE QUIETCOOL SMART CONTROL APP

HOME PAGE

This is the home page of the app and is presented as soon as the app is opened.

If you have not yet paired your phone to your Hub, it will state **SETUP REQUIRED**.

If you have paired your phone to your Hub, it will show a picture of the fan as well as the name of your fan.

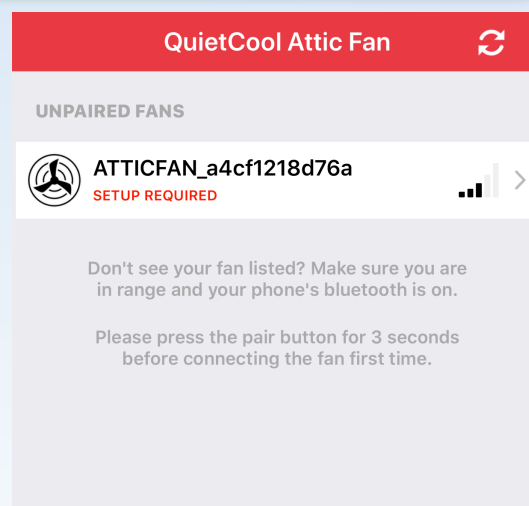




FAN SETUP PAGE

This page is used to setup the fan for the first time.

You can quickly change the Fan Name, check if the speeds are set properly, change the Fan Model, enter the Serial Number and adjust the Climate Settings & Presets.

These settings can be accessed again after setup is done by clicking the Settings button on the Fan Control Page.

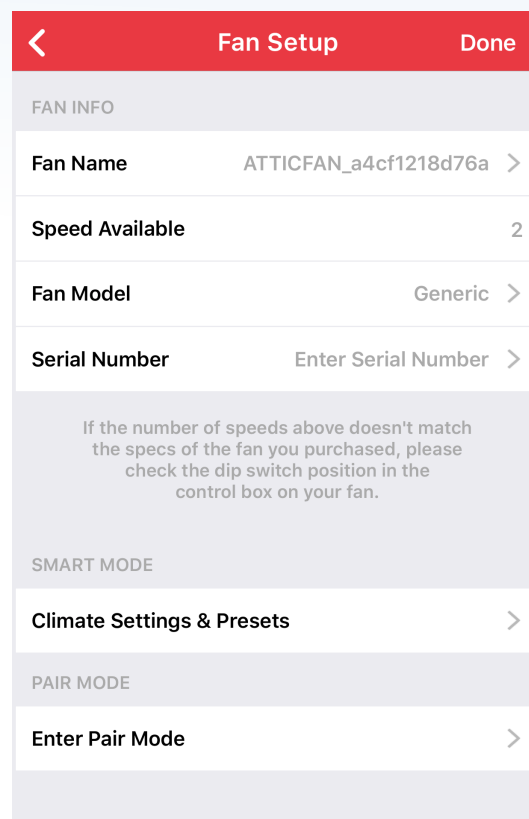

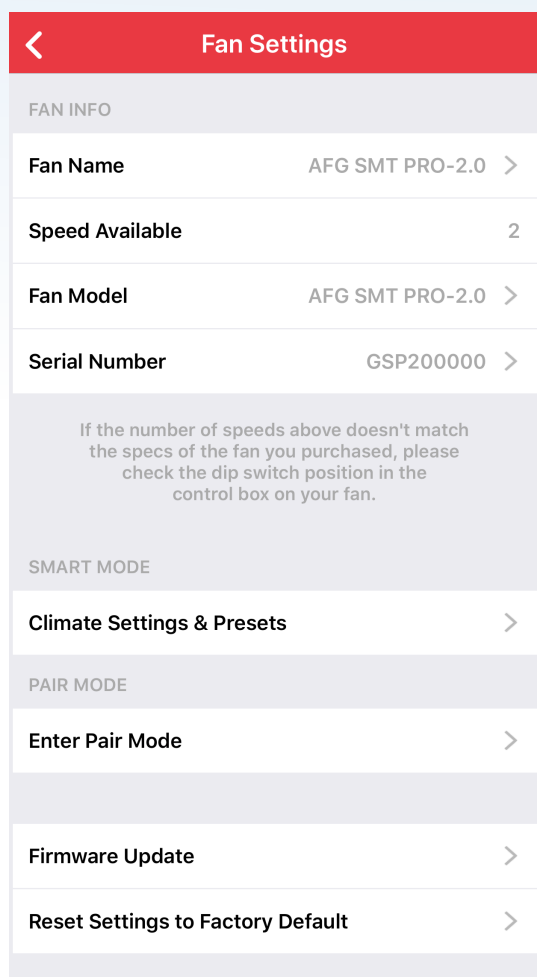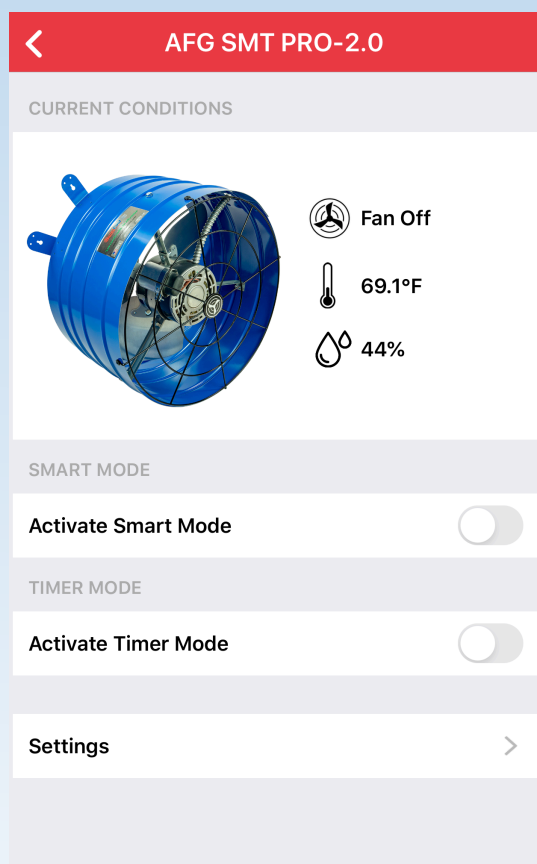

FAN CONTROL PAGE

This page is accessed when you tap on your fan from the Home Page.

On this page you can see the current conditions in your attic, activate the different modes of the fan, and get to the Fan Settings page.

FAN SETTINGS PAGE

This page is used to adjust the settings of the fan.

You can quickly change the Fan Name, check if the speeds are set properly, change the Fan Model, enter the Serial Number and adjust the Climate Settings & Presets.

You can also enter Pair Mode for remote pairing of devices, perform a Firmware Update, as well as reset all settings to factory defaults.

SETTING UP YOUR FAN

Once your attic fan has power, open up the QuietCool Smart Control app. You will be taken to the Home Page. You should see your attic fan show up in the list of available fans.

A message indicates that setup is required. Press and hold the Pair button on the Hub until the LED indicator begins to blink.

ⓘ NOTE: You will need to initiate this Pairing process on each device you want to use to control your attic fan. Once the initial device is paired, you can use the "Enter Pair Mode" function from the app described on page 16. This will prevent you from having to access the Hub physically in the attic in order to perform pairing operations.

Tap on the fan to start the setup process. Once you tap on the fan, you will be taken to the Fan Setup page.

On this page, you will be able to change the following settings:

- Fan Name
- Fan Model
- Serial Number


The Speeds Available section will tell you if you have connected the fan and set your dip switch properly.


Make sure that this number matches the specification of the fan you purchased.

In this example, we are setting up an AFG SMT PRO-2.0 which is a 2-speed fan.

The QuietCool Smart Attic Fan Control has an innovative Smart mode that allows the fan to adjust the speed based on the temperature and humidity conditions in your attic. Tap Climate Settings & Presets to adjust these settings.

Within this mode there are two standard presets, Summer and Winter. You can modify these presets and add your own custom presets to allow quick setting changes on the fly.

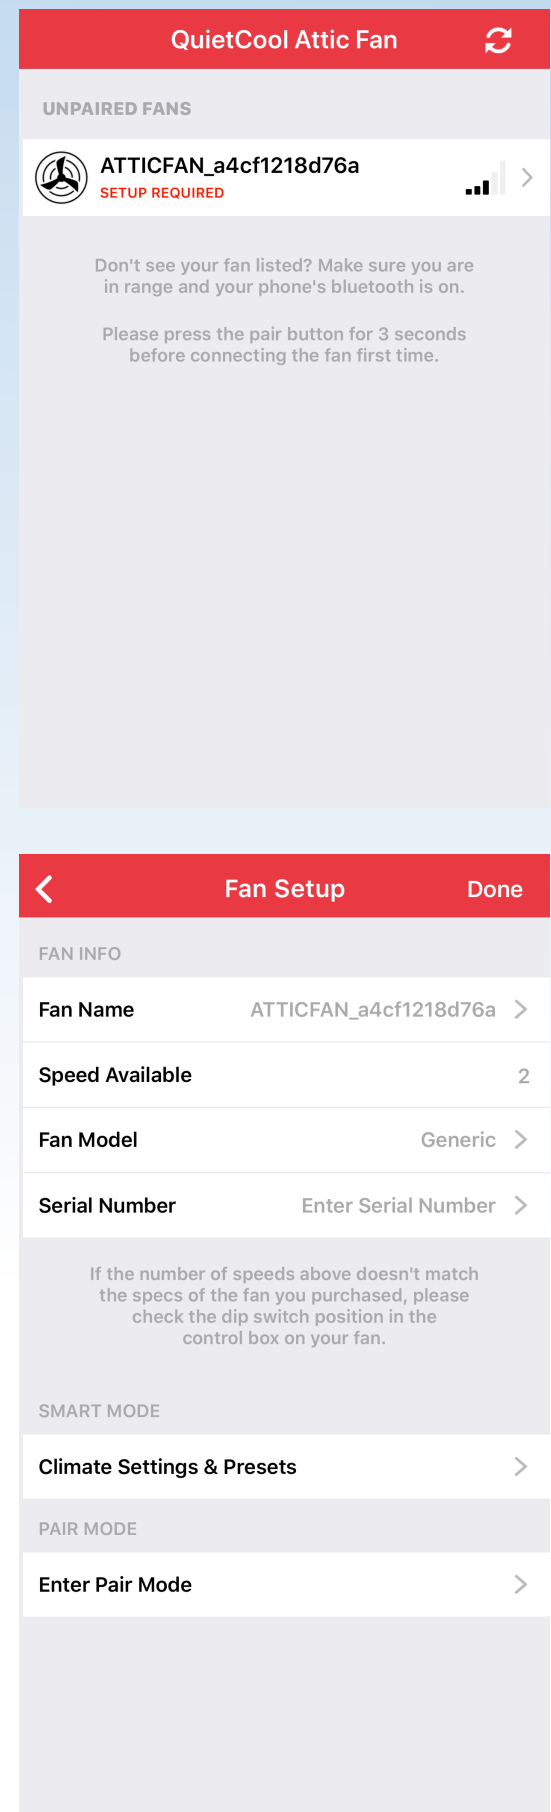

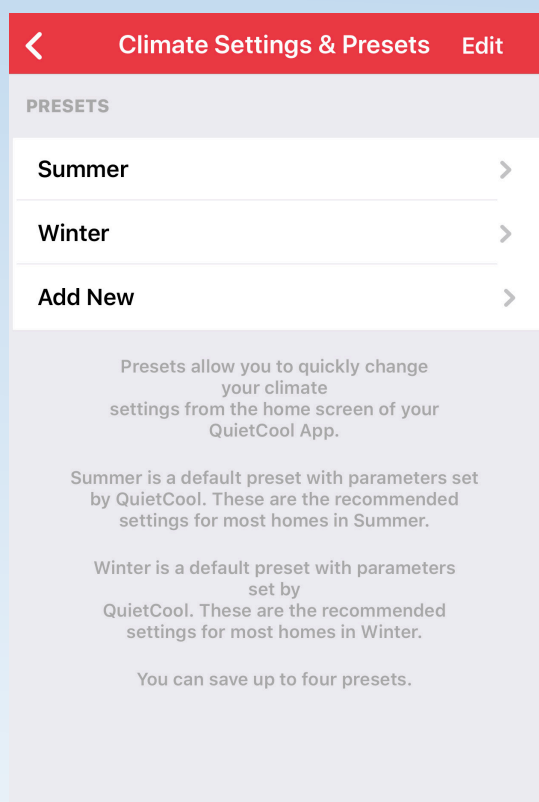

TEMPERATURE

- The settings you choose in this section will change what temperature the fan will come on at each set speed.
- Tap on any speed to adjust the temperature for each speed.

HUMIDITY

- **Turn Fan Off:** This is the humidity percentage that will cause the fan to turn off. For example, the factory setting is set at 90%, meaning the fan will turn off if the humidity in the attic is 90% or higher. Tap this setting if you would like to adjust the percentage. If you do not want this feature, you can select OFF at the top of the list.
- **Turn Fan On:** This is the humidity percentage that will cause the fan to turn on, regardless if the temperature settings are not met. For example, the factory setting is set at 70%, meaning the fan will turn on if the humidity in the attic is higher than 70%, even if the temperature in the attic is below the temperature settings in the app. If you do not want this feature, you can select OFF at the top of the list.
- **Desired Speed:** This is the speed the fan will use if the humidity causes the fan to turn on.

These settings will be saved into the memory of the Hub meaning all settings will sync between any additional devices you pair to the Hub.

Click Done to complete Fan Setup. You can always access these settings again from the Settings option on the Fan Control Page.

FAN CONTROL PAGE

On the Fan Control page, you will see the current fan status, the current attic temperature, as well as the current attic humidity level.


You also have the option to Activate Smart Mode or Activate Timer Mode. You can also go into the Fan Settings page and adjust the settings that you setup in the first step.

TIMER MODE

Timer Mode is a simple way to turn your attic fan on for a set amount of time at a set speed.

To activate Timer Mode, simply tap Activate Timer Mode. Once activated, you can select your speed by tapping Set Speed. You can also select your runtime by tapping Set Time.

When Timer Mode is active, you will see your remaining time left on the timer at the top of the screen.

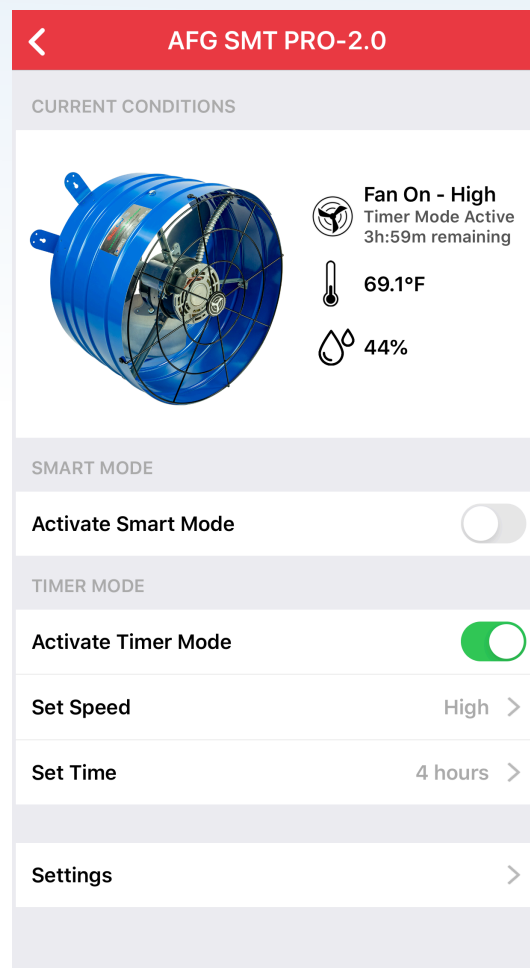

AFG SMT PRO-2.0

CURRENT CONDITIONS

Fan On - High
 Smart Mode Active

69.1°F

44%

SMART MODE

Activate Smart Mode

Set Preset

Winter >

TIMER MODE

Activate Timer Mode

Settings >

Preset Settings

Save

PRESET NAME

Name

Summer >

TEMPERATURE

Low Speed

Turn on at 80°F >

High Speed

Turn on at 100°F >

HUMIDITY

Turn Fan Off

90% >

The fan will turn off if the humidity conditions are above the set humidity percentage, regardless of the temperature.

Turn Fan On

70% >

The fan will turn on if the humidity conditions are at or above the set humidity percentage, regardless of the temperature.

Desired Speed

Low >

If the humidity conditions are met, the fan will turn on at this speed.

SMART MODE

Smart Mode will automatically change the speed based on the attic temperature and humidity.

To activate Smart Mode, simply tap Activate Smart Mode.

In Smart Mode, the first parameter that is checked is the Turn Fan Off humidity level. Regardless of the temperature in the attic, if the Humidity level in the attic is above the Turn Fan Off humidity setting, the fan will not turn on, or if it is already running, the fan will shut off.

If the humidity in the attic is below the Turn Fan Off humidity setting, the second parameter that is checked is the Attic Temperature. If the temperature inside the attic is within the set parameters in the app, the fan will turn on at the appropriate speed.

If the temperature in the attic is below any of the temperature parameters, the last parameter that is checked is the Turn Fan On humidity level. If the humidity level in the attic is above the Turn Fan On humidity parameter but below the Turn Fan Off humidity parameter, the fan will turn on at the Desired Speed.


PAIR MODE


Pair Mode is a feature that was designed to prevent users from having to get into the attic to access the physical Hub in order to pair additional devices.

NOTE: In order to use this feature, you must have one device that is already paired to the Fan Hub. If you do not have any devices that are currently paired to the Fan Hub, you will have to press the physical Pair button.

In the Fan Settings page, tap Enter Pair Mode. An alert box will come up on your screen indicating you are about to enter Pair Mode. Tap OK.

Now, on the device you are trying to pair, open up the Smart Control app and tap the fan. You will now be taken to the Fan Setup page and you are now paired.

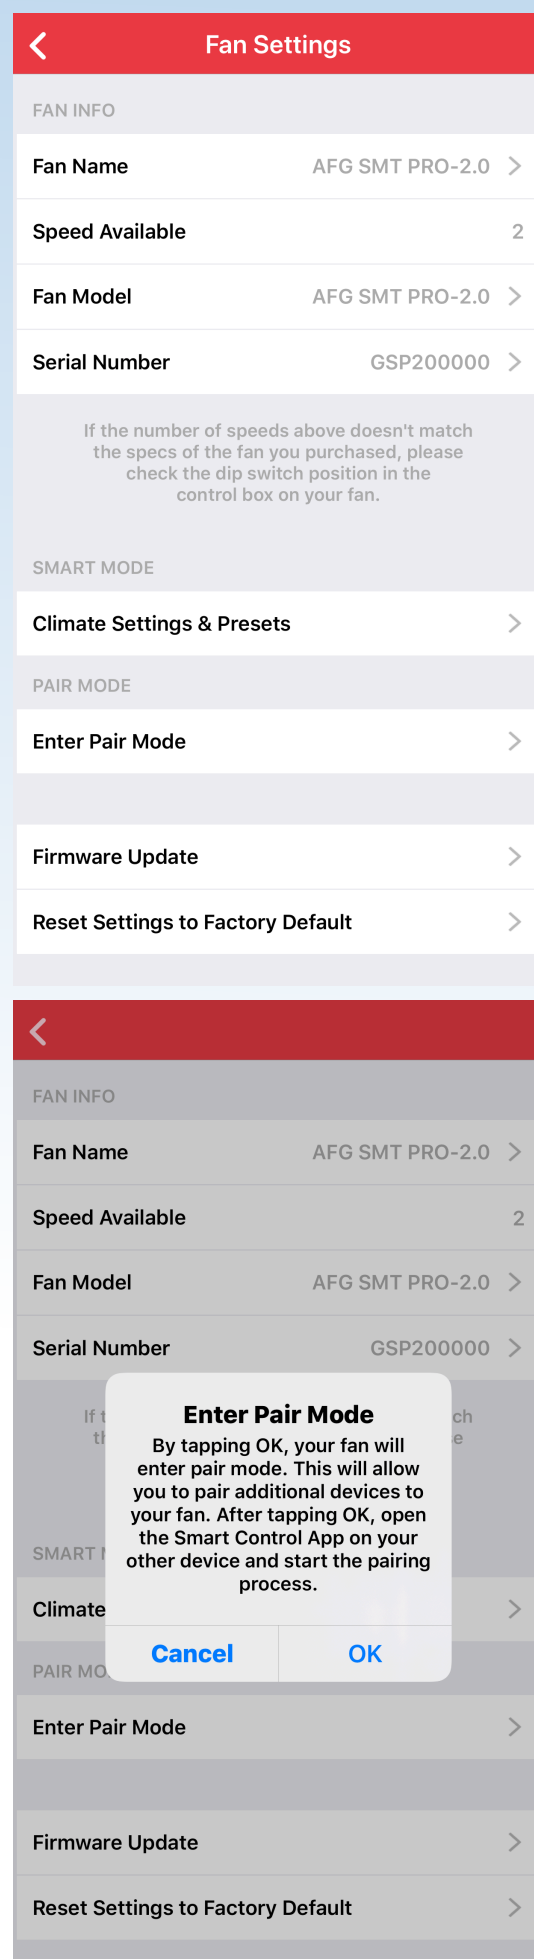

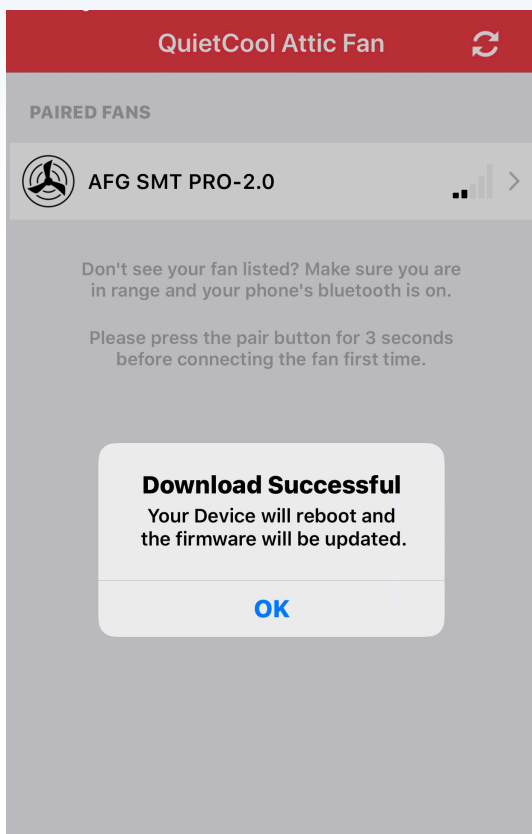

FIRMWARE UPDATE

Your attic fan includes a Firmware Update feature in order for us to update your Fan Hub to include bug fixes and additional features in the future.

We recommend checking for a new firmware update a few times per year.

To check for an available firmware update, go into the Fan Settings page and tap Firmware Update.

If there is no update available, an alert will popup indicating there is no available firmware update. At the top of the page you will see your current device version as well as what the available version is.

If there is an update available, you will be able to tap the Update button. Once you tap Update, an alert will popup asking you to type in your Wi-Fi details.

You cannot initiate a firmware update while your phone is on cellular so if you are not currently connected to a Wi-Fi network on your phone, tap Choose Wi-Fi. This will take you to your phone settings. Connect to your home Wi-Fi network and go back to the Smart Control app.

Once back in the app, your Wi-Fi network name will be pre-filled. Type in your Wi-Fi password and tap Save. The firmware update will now begin.

Once completed, an alert will popup indicating that the download was successful and your Hub will reboot. Your Hub is now updated.

4.3 FREQUENTLY ASKED QUESTIONS

WHAT PROTOCOL DOES THIS CONTROL USE?

This control operates over Bluetooth to connect to your phone. The control uses Wi-Fi for firmware updates.

WILL MY NEIGHBOR BE ABLE TO CONTROL MY FAN IF THEY HAVE THE SAME SET UP AS ME?

No. In order to connect to your Smart Attic Fan Control Hub, you must first pair your device by using the Pair button on the Hub.

WHAT IS THE RANGE?

The range restriction between your phone and the attic fan is 50 ft through average household obstructions.

WHY ARE ALL MY LIGHTS BLINKING ON THE HUB AND NOTHING IS WORKING?

If you're experiencing blinking lights on all LED indicators on the hub then it is an indication that your DIP switches are not selected, or multiple DIP switches are selected. Disconnect power, adjust your DIP switches, and the only light that should be lit is your RED power light.

HOW DO I CHANGE THE DIP SWITCH TO THE CORRECT SPEED OF MY FAN?

You will need to disconnect power, make your adjustment inside the hub, and then reconnect power.

CAN YOU CONNECT THE ATTIC FAN SMART CONTROL TO A SMART HOME SYSTEM LIKE ALEXA, GOOGLE HOME, OR APPLE HOMEKIT?

No, in the current configuration the Smart Attic Fan Control cannot connect to a smart home system. Smart home system control is not necessary as the fan runs on its own and hardly ever needs manual control.

WHAT HAPPENS IF I GET A NEW PHONE?

If you get a new phone, you will need to pair your new phone to the Hub. This is very easy to do if you still have your old phone, or have another phone in the home that is currently paired to the Hub. If you have another device that is paired to the Hub, follow the instructions on **page 16 for Pair Mode**. If you do not have any other devices in the home that are paired to the Hub, you will need to press the physical Pair button on the Hub.

4.4 SAFETY

This control features an innovative fire safety shut-off that will automatically turn the fan off if it detects a temperature above 182°F in your attic. The purpose of this is to shut off in the event of a house fire to prevent the spread of flames.

ATTIC FAN LIMITED WARRANTY

QC Manufacturing Inc. extends this warranty to the original purchaser of the following QuietCool Specialty Series Fans - AFG SMT ES-3.0, AFG SMT PRO-3.0, AFG SMT PRO-2.0, and AFR SMT ES-2.0 - installed and used in a residence under normal conditions within the United States:

A. Fifteen year coverage applies to the QuietCool motor fan assembly. At our option we will repair or replace any part of the assembly should it fail to operate during the first fifteen years from the date of original purchase.

B. One year coverage for all other components including grilles, housings, controls and accessories furnished by QC Manufacturing, Inc. At our option we will repair or replace any part which fails as a result of defective material or workmanship during the first year from the original date of purchase.

C. This warranty does not cover any of the following:

1. Accidental or consequential damage resulting from the operation of our equipment or any malfunction thereof.
2. Cost of service calls to diagnose the cause of problems or the labor charge to un-install any components.
3. Product failure or damage due to faulty installation, abuse, misuse, unauthorized alteration to factory specs, lack of maintenance, or transportation damage.
4. Shipping or postage for warranty claims.

D. To obtain service under this warranty, first contact the dealer where you purchased the equipment. If you are unable to find or reach your dealer, contact Customer Service at QC Manufacturing, Inc. at the number below.

E. Registration is no longer required for QuietCool fans. If service is required under this warranty, you must retain your proof of purchase.

This warranty is the only warranty extended by QC Manufacturing, Inc. to purchasers or suppliers of our equipment. QC Manufacturing Inc. disclaims all other warranties, express or implied, that arise by operation of the law. Where consumer may have additional warranty rights in accordance with federal and state law, such rights shall supersede those stated herein.

QC Manufacturing, Inc. Customer Service

26040 Ynez Rd.
Temecula, CA 92591
www.QuietCoolSystems.com
951-325-6340



FAN SERIAL NUMBER INFORMATION

RETAIN FOR YOUR RECORDS.

SERIAL NUMBER IS REQUIRED FOR WARRANTY PURPOSES.