

PRO

T721i Operation Manual



PRO

T721i Operation Manual



T721i

Pro1 Technologies

P.O. Box 3377
Springfield, MO 65808-3377

Toll Free : 888-776-1427

Web: www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern


Table of Contents	Page
Table of Contents	1
Thermostat Operation	2-3
Thermostat Quick Reference	4
Thermostat Warranty Information	5

Una version en español de este manual se puede descargar en la pagina web de la compañía.



Caution


Equipment damage hazard
Do not operate the cooling system if the outdoor temperature is below 50 °F (10 °C) to prevent possible compressor damage.

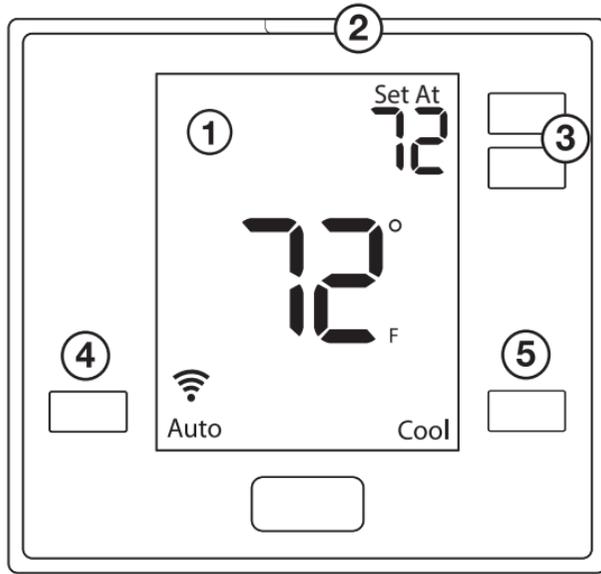

- ① LCD Display
- ② Glow in the Dark Light Button
- ③ Temperature Setpoint Buttons
- ④ Fan/ User Button
- ⑤ System/ User Button

- ① **LCD Display**
See page 2 for details about display and read out icons.
- ② **Glow in the Dark Light Button**
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- ③ **Temperature Setpoint Buttons**
Press the + or - buttons to select the desired room temperature.
- ④ **Fan Button:**
Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will run the fan only when the heating or cooling system is on.

Note: Some systems may have fan control disabled.
- ⑤ **System Button:**
Selects the operation mode on your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the cool mode. Selecting **OFF** turns both heating and cooling off. Selecting **EmH** (for heat pumps with auxiliary heat) will lockout the compressor and control emergency/ auxiliary heat.

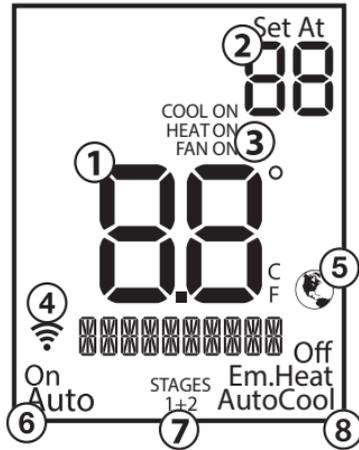

- ① **Indicates the current room temperature**
- ② **Setpoint:** Displays the selected setpoint temperature.
- ③ **System Operation Indicators:** The COOL ON, HEAT ON or FAN ON will display when the COOL, HEAT, or FAN is on. **The compressor delay feature is active if these are flashing.**
- ④ **WIFI Indicator:** Shown when connected to WiFi.
- ⑤ **Globe:** Globe is displayed if an energy efficient temperature has been selected.
- ⑥ **Fan:** Indicates the current fan setting.
- ⑦ **Stages:** +1 will appear in the display when the first stage of heat or cool is on. +2 will appear for the second stage of heat.
- ⑧ **System:** Indicates current system mode setting.

Warranty Registration

Your new thermostat has a 5 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. Please register your new thermostat online.

Please Register Your Thermostat Here

www.pro1iaq.com/warranty





Scan Here

**For More Information
About Your Thermostat**



www.pro1iaq.com