## TC-PAC01, TC-PHP01 TC-NAC01, TC-NHP01 TCSNAC01, TCSNHP01 Comfort<sup>™</sup> Śeries Thermostat



# **Product Data**



A07051 Fig. 1 - Comfort Series Programmable Thermostat



A07050

Fig. 2 - Comfort Series Non-programmable Thermostat





The Carrier Comfort<sup>™</sup> series of thermostats consists of programmable and non-programmable air conditioner and heat pump controls. These units feature non-mercury, non-lead based electronic controls built into a subtle, slim plastic enclosure.

## **FEATURES/BENEFITS**

## **Programmable and Non-Programmable Models**

- Continuous display back-lighting configurable
- · Auto changeover available
- Non-volatile memory to retain settings during a power outage
- Optional battery operation
- English/Metric units selection
- · Keypad lockout
- RC / RH power compatible<sup>1</sup>
- Configurable setpoint limits

## **Programmable Models**

- Touch ·*H*·Go <sup>™</sup> programmability
- 5-2 or All Days programmable
- 4 or 2 periods per day selectable

### **Air Conditioner Control**

• 1-stage heat / 1-stage cool

### **Heat Pump Control**

- 3-stage heat / 2-stage cool (TC-PHP01, TC-NHP01)
- 2-stage heat / 1-stage cool (TCSNHP01)
  - Excludes standard screen

## **PRODUCT DATA INFORMATION**

## **Physical Characteristics**

- Dimensions: See drawing
- Mounting: Vertical or horizontal J-box provisions for programmable models, horizontal J-box provisions for non-programmable

### Electrical

1

• Input volts/amps: 24VAC, 3 VA, RC/RH compatible

#### Environment

- Operating temperature/Relative humidity: 32°F (0°C) to 104°F (40°C), 95% RH non-condensing
- Storage temperature/Relative humidity:  $-40^{\circ}$ F ( $-40^{\circ}$ C) to 134°F (57°C), 95% RH non-condensing

### Wiring Requirements

• Standard 18 to 22 gauge, local wiring codes supersede.

## Accessories

PART NUMBER	DESCRIPTION
TX-LBP01	Large decorative backplate for TC-Pxx
TX-MBP01	Medium decorative backplate for TC – Nxx





#### DIMENSIONS

A07136

Fig. 4 - Comfort Series Programmable Thermostat



A07135

A08615







## OPERATIONAL INFORMATION

#### Heating / Cooling Setpoints

The heating/cooling setpoint range is from  $50^{\circ}$ F ( $10^{\circ}$ C) to  $90^{\circ}$ F ( $32^{\circ}$ C). A selectable range of 1-6° is enforced between heating and cooling desired temperatures. This is done by allowing one setting to "push" the other, to maintain this difference. (This difference is adjustable in Installer settings.)

#### **Five-minute Compressor Time Guard**

This timer prevents the compressor from starting unless it has been off for at least 5 minutes. It can be defeated for 1 cycle by simultaneously pressing the FAN button and INCREASE TEMPERATURE (UP) button.

#### **Equipment On Indicators**

When cooling equipment is ON, a COOL ON icon is displayed. When heating equipment is ON, a HEAT ON icon is displayed. When auxiliary heating is ON (HP only), an AUX HEAT icon is displayed.

#### **Auto Changeover**

When Auto Changeover mode is selected, a change from heat to cool (or vice versa) will not occur until an opposite mode demand has existed for 20 minutes. When a setpoint is changed, Auto Changeover timing is ignored to allow the heating/cooling equipment to respond quickly. Auto Changeover mode can be disabled.

#### **Emergency Heat Mode**

When the thermostat is controlling a heat pump and emergency heat is selected, all Y signals are locked out, and W becomes energized upon a call for heat.

#### **Smart Recovery (Programmable models)**

With Smart Recovery selected, transition out of setback begins a fixed time period (Off, 30, 60, or 90 minutes selectable) before selected recovery time and gradually adjusts room temperature so that the desired temperature will be achieved at selected recovery time.

#### **Room Temperature Offset**

Room temperature may be deliberately offset by up to  $5^{\circ}$  in either direction.



Designed and Assembled in the USA.

Copyright 2012 Carrier Corp. • 7310 W. Morris St. • Indianapolis, IN 46231 Edition Date: 05/12