




MicroMetl

Burglar Bars Install Guide

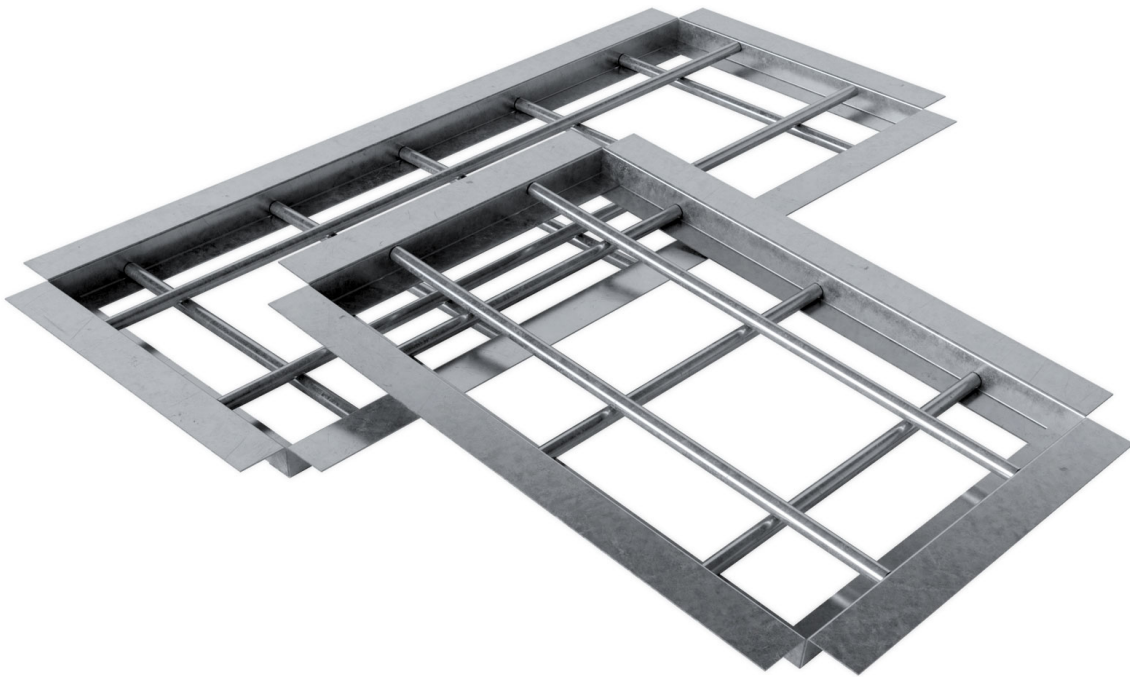

Foremost HVAC Accessory Manufacturer

SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform the basic maintenance functions. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags, and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations.

GENERAL

The 0310 Series product include the assembled roofcurb and the supply and return burglar bars. The 0404 Series or BBI Series product include only the burglar bar inserts.

INSTRUCTIONS

This is a generic instruction guide. Refer to provided submittal drawing for specific details.

1. For 0404 series and BBI series only: Assemble the unit roofcurb per curb instructions.
2. For 310 series only: Unscrew burglar bar inserts from curb and remove.
3. Install supply and return duct drops in curb duct openings. Note duct sizes must be large enough to allow the burglar bar inserts to slide inside. See Fig. 1.
4. Set the burglar bar inserts into the top of the duct drops. The top flange of burglar bar inserts will rest on top of curb.
5. Gasket around top perimeter of curb and around supply and return ducts.

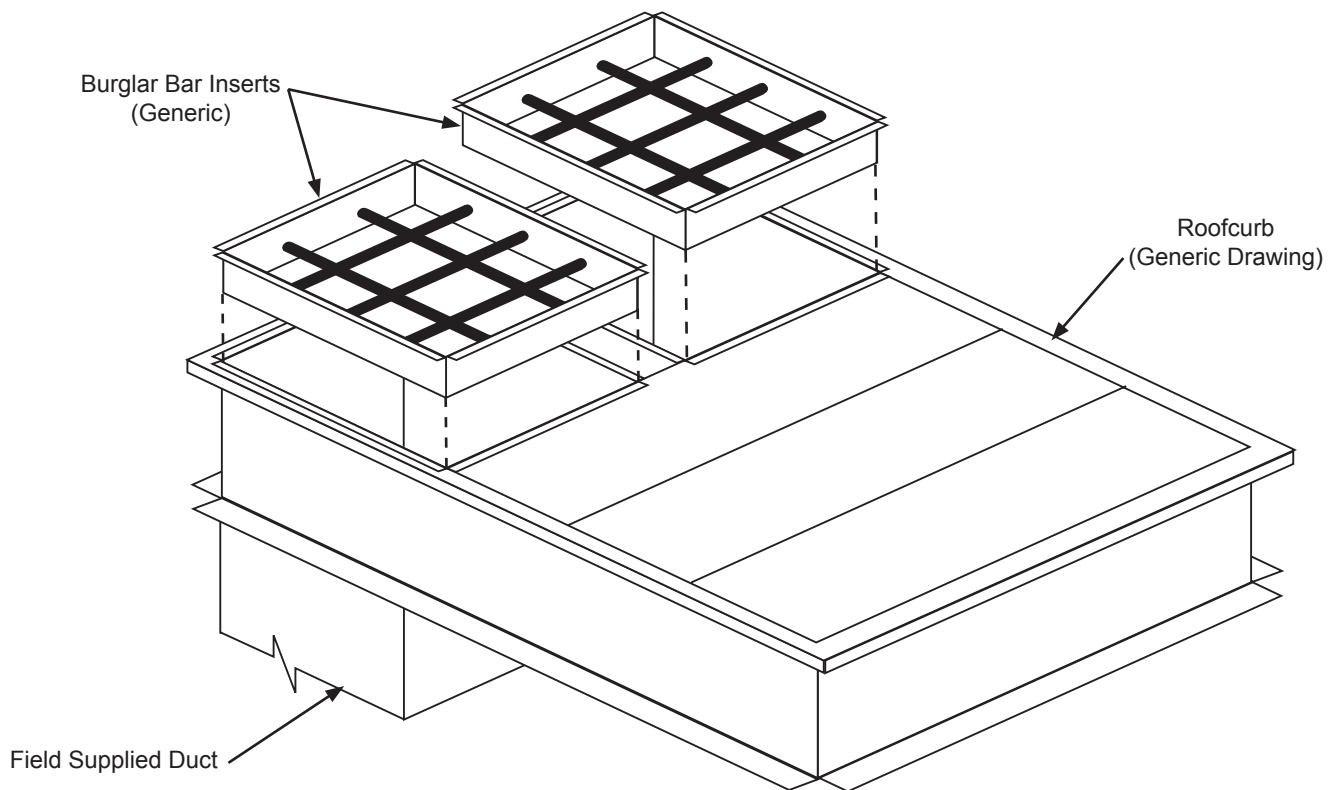


Figure 1



MicroMetl

MicroMetl Indianapolis
3035 N. Shadeland Ave., Suite 300
Indianapolis, IN 46226
1.800.MMC.HVAC (EST)
indycustomerservice@micrometl.com

MicroMetl Longview
201 Kodak Blvd.
Longview, TX 75602
1.903.248.4800 (CST)
longviewcustomerservice@micrometl.com

MicroMetl Sparks
905 Southern Way
Sparks, NV 89431
1.800.884.4662 (PST)
sparkscustomerservice@micrometl.com