Installation Instructions

Part No. CRLVHLGD017A00, CRLVHLGD018A00, CRLVHLGD019A00, CRLVHLGD026A00-CRLVHLGD031A00, CRLVHLGD042A00, CRLVHLGD043A00, CRLVHLGD044A00, CRLVHLGD052A00, CRLVHLGD053A00, CRLVHLGD054A00

IMPORTANT: Read these instructions completely before attempting to install the accessory louvered hail guard.

SAFETY CONSIDERATIONS

Installation of this accessory can be hazardous due to system pressures, electrical components, and equipment location (such as a roof or elevated structure). Only trained, qualified installers and service technicians should install, start-up, and service this equipment.

When installing this accessory, observe precautions in the literature, labels attached to the equipment, and any other safety precautions that apply:

- Follow all safety codes
- Wear safety glasses and work gloves
- Use care in handling and installing this accessory

It is important to recognize safety information. This is the safetyalert symbol: \triangle . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, CAUTION, and NOTE. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies hazards which **could** result in personal injury or death. CAUTION is used to identify unsafe practices, which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

Before performing service and maintenance operations on unit, turn off main power switch to unit. If gas unit, shut off gas supply before shutting off main power.

TAG DISCONNECT SWITCH WITH A SUITABLE LOCKOUT TAG AND WARNING LABEL.

GENERAL

Louvered hail guard packages are designed to protect the rooftop unit condenser coil from hail and general contact damage. Excessive damage to rooftop unit outdoor coils can result in diminished performance due to reduced air flow over the heat transfer surfaces. See Tables 1 and 2 for package contents and usage.

Table 1 — Package Contents

	OTV	DESCRIPTION
HAIL GUARD PART NO.	QTY	DESCRIPTION
CRLVHLGD017A00 CRLVHLGD018A00	2	Side Panel, Coil
	2	End Panel, Coil
	12	Plastic Grommet
	24	Screws 10AB x 3/4 LG
	4	4- Wire Tie
CRLVHLGD019A00	2	Side Panel, Coil
	2	End Panel, Coil
	18	Plastic Grommet
	30	Screws 10AB x 3/4 LG
	6	Wire Tie
CRLVHLGD026A00 CRLVHLGD027A00	2	Side Panel, Coil
	2	End Panel, Coil
	12	Plastic Grommet
	24	Screws 10AB x 3/4 LG
	4	Wire Tie
CRLVHLGD028A00	2	Side Panel, Coil
	2	End Panel, Coil
	18	Plastic Grommet
	30	Screws 10AB x 3/4 LG
	6	Wire Tie
CRLVHLGD029A00	4	Side Panel, Coil
	2	End Panel, Coil
	18	Plastic Grommet
	30	Screws 10AB x 3/4 LG
	6	Wire Tie
CRLVHLGD030A00	2	Side Panel, Coil
	2	End Panel, Coil
	12	Plastic Grommet
	24	Screws 10AB x 3/4 LG
	4	Wire Tie
	-	
	2	Side Panel, Coil
	2	End Panel, Coil
CRLVHLGD031A00	18	Plastic Grommet
	30	Screws 10AB x 3/4 LG
	6	Wire Tie
	2	Side Panel, Coil
CRLVHLGD042A00	2	End Panel, Coil
	16	Plastic Grommet
	16	Screws 10AB x 3/4 LG
	2	Side Panel, Coil
CRLVHLGD043A00	2	End Panel, Coil
UKLVILGDU43AUU	24	Plastic Grommet
	24	Screws 10AB x 3/4 LG
	•	

Table 1 — Package Contents (cont)

HAIL GUARD PART NO.	QTY	DESCRIPTION
CRLVHLGD044A00	2	Side Panel 6 Fan Unit, Coil
	2	Side Panel, Coil
	2	End Panel, Coil
	36	Plastic Grommet
	36	Screws 10AB x 3/4 LG
CRLVHLGD052A00	2	Side Panel, Coil
	2	End Panel, Coil
	16	Plastic Grommet
	16	Screws 10AB x 3/4 LG
CRLVHLGD053A00	2	Side Panel, Coil
	2	End Panel, Coil
	24	Plastic Grommet
	24	Screws 10AB x 3/4 LG
CRLVHLGD054A00	2	Side Panel, Coil
	2	End Panel, Coil
	26	Plastic Grommet
	26	Screws 10AB x 3/4 LG

Table 2 — Package Usage

HAIL GUARD		UNIT	
PART NO.	MODEL	SIZE	COIL TYPE
CRLVHLGD017A00	48/50HC	17	Round Tube Plate Fin
	48/50TC	17-20	Round Tube Plate Fin/ MCHX
	50TCQ	17	Round Tube Plate Fin
	580J/558J	17-20	Round Tube Plate Fin/ MCHX
	551J/581J	17	
	548J	17	Round Tube Plate Fin
	RGH/RAH	181-183	
	RGS/RAS	181-214	
	RHS	181-183	
	48/50TC	24	
CRLVHLGD018A00	580J/558J	24	MCHY
	48/50TC	28	MCHX
CRLVHLGD019A00	580J/558J	28	
CRLVHLGD026A00	50TCQ	24	
	548J	24	
	RHS	240-243	
CRLVHLGD027A00	48/50TC	24	
	580J/558J	24	
	RGS/RAS	240-244	
CRLVHLGD028A00	48/50TC	28	
	580J/558J	28	
	RGS/RAS	300-304	
CRLVHLGD029A00	48/50HC	28	
	48/50TC	30	1
	581J/551J	28	
	580J/558J	30	
	RGH/RAH	300-303	Round Tube Plate Fin
	RGS/RAS	333-336	
CRLVHLGD030A00	48/50HC	20	
	581J/551J	20	
	RGH/RAH	210-213	
CRLVHLGD031A00	48/50HC	24	
	581J/551J	24	
	RGH/RAH	240-243]
	48/50FC	20	
	50500	17	
	50FCQ		
	50FCQ 582K/559K	20	•
CRLVHLGD042A00			
CRLVHLGD042A00	582K/559K	20	

HAIL GUARD PART NO. UNIT SIZE MODEL COIL TYPE 50FCQ 28 48/50GC 24 50GCQ 24 547K 28 CRLVHLGD043A00 581K/551K 24 549K 24 RHV 300 RGW/RAW 300 RHW 240 48/50GC 28 50GCQ 28 581K/551K 28 CRLVHLGD044A00 549K 28 RGW/RAW 300 RHW 300 48/50FC 24 50FCQ 24 Round Tube Plate Fin 48/50GC 20 50GCQ 17 582K/559K 24 547K 24 CRLVHLGD052A00 581K/551K 20 549K 17 RGV/RAV 240 RHV 240 RGW/RAW 210 RHW 181 48/50FC 28 CRLVHLGD053A00 582K/559K 28 RGV/RAV 300 48/50FC 30

RGV/RAV NOTE: Not all unit sizes may be available at this time.

582K/559K

30

336

CRLVHLGD054A00

Table 2 — Package Usage (cont)

INSTALLATION

- 1. Verify the correct hail guard part number is provided for the desired rooftop unit size. See Package Usage table.
- 2. Remove shipping covers from unit.
- 3. Remove wire grills from unit and save screws. For 3 and 4 fan units see Fig. 1. For 6 fan units see Fig. 2.
- 4. Insert (4) plastic grommets in the square holes of each corner post as shown in Fig. 3.
- 5. Insert 2 plastic grommets in the square holes of the two side guards of the kit. (See Fig. 4.)
- 6. Using screws provided with kit, install end panels. Engage top notch in each panel to top cover flange as shown in Fig. 5. Drive screws through panel and into basepan and plastic grommets in post.
- 7. Install side panels engaging notch in top of panel as shown in Fig. 5. Install screws through panel into basepan and grommets previously installed.
- 8. Re-install wire guards using wire ties provided in kit. Wrap wire tie around spine of grill, aligning hole in wire tie with plastic grommet. Secure with screws from kit.
- 9. Restore power to unit.

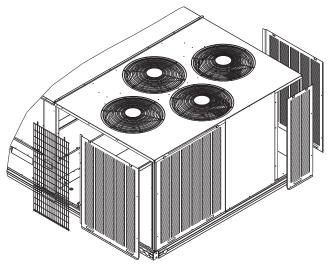


Fig. 1 — Hail Guard Installation – 3 and 4 Fan Units (4 Fan Unit Shown)

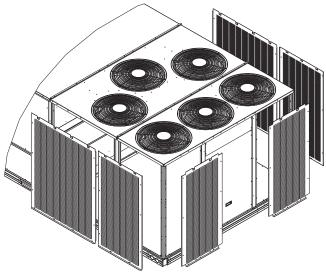


Fig. 2 — Hail Guard Installation – 6 Fan Units



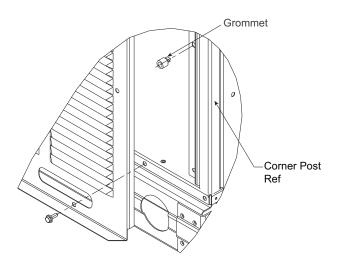


Fig. 3 — Grommets in Corner Post





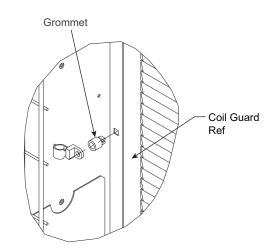

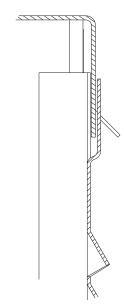

© 2022 Carrier