

# AGAGC9NPS01E

## Gas Conversion Kit, Natural to Propane

### Condensing (90%+) Furnaces

#### 40,000 BTU/h to 140,000 BTU/h Models Only

## Installation Instructions

**NOTE:** Read the entire instruction manual before starting the installation.



A200203

### SAFETY CONSIDERATION

#### **WARNING**

##### **FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in personal injury or death.

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion, or production of carbon monoxide could result causing property damage, personal injury, or loss of life. The qualified service agency is responsible for the proper installation of this furnace with this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit

#### **AVERTISSEMENT**


##### **LE FEU, L'EXPLOSION, CHOC ELECTRIQUE, ET MONOXYDE DE CARBONE EMPOISONNER**

Cette trousse de conversion doit être installée par un service d'entretien qualifié, selon les instructions du fabricant et selon toutes les exigences et tous les codes pertinents de l'autorité compétente. Assurez-vous de bien suivre les instructions dans cette notice pour réduire au minimum le risque d'incendie, d'explosion ou la production de monoxyde de carbone pouvant causer des dommages matériels, de blessure ou la mort. Le service d'entretien qualifié est responsable de l'installation de cette trousse. L'installation n'est pas adéquate ni complète tant que le bon fonctionnement de l'appareil converti n'a pas été vérifié selon les instructions du fabricant fournies avec la trousse.

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment.

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. Trained service personnel must perform all other operations. When working on heating equipment, observe precautions in the literature, on tags, and on labels attached to or shipped with the unit, and other safety precautions that may apply.

Follow all safety codes. In the United States, follow all safety codes including the current edition of the National Fuel Gas Code (NFGC) NFPA No. 54/ANSI Z223.1. In Canada, refer to the current edition of the National Standard of Canada, Natural Gas and Propane Installation Codes (NSCNGPIC), CAN/CSA-B149.1 and .2. Wear safety glasses and work gloves. Have a fire extinguisher available during start-up, adjustment steps, and service calls.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury. Understand the signal words DANGER, WARNING, CAUTION and NOTE. The words DANGER, WARNING, and CAUTION are used with the safety alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies a hazard which could result in personal injury or death. CAUTION is used to identify unsafe practices which may result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which will result in enhanced installation, reliability, or operation.

### INTRODUCTION

#### **WARNING**

##### **FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow instructions could result in personal injury, death or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions, which could result in personal injury or death. Consult your distributor or branch for information or assistance. The qualified installer or agency must use only factory-authorized kits or accessories when servicing this product.

#### **WARNING**

##### **FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

## ! WARNING

### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

## ! CAUTION

### UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage or improper operation.

Do NOT use this kit with furnaces with an input of 26,000 BTUh; the unit will be severely over-fired. This could result in delayed ignition, sooting or premature heat exchanger failure.

This instruction covers the installation of gas conversion kit to convert the following furnaces from natural gas usage to propane gas usage.

NOTE: See appropriate sections for your furnace type.

### SINGLE-STAGE GAS VALVE

Condensing Furnaces with 40,000 to 140,000 BTUh (not all models have 140,000 BTUh) gas input rates.

### TWO-STAGE & MODULATING GAS VALVE

Condensing Furnaces with 40,000 through 120,000 BTUh gas input rates.

**Table 1 – Kit Contents**

Quantity	Description
2	VALVE CVRSN KIT - W/R SPRING 92-0659
1	JUMPER PLUG
7	ORIFICE - 1.25mm
7	MIXER SCREW - CONDENSING FURNACES
1	CONNECTOR - BRASS 1/8" NPT X2"
1	CONNECTOR, SPLC - 3/16"
1	CONNECTOR - 1/4QC ME BOTH ENDS
1	ELBOW, STREET - 150# 1/8" NPT
1	ELBOW, STREET - BRASS 1/8" NPT
1	NIPPLE - HEX (BRASS)
1	SWITCH, PRESSURE
1	TEE - MALE BRANCH (BRASS)
1	TEE, STREET - MALE BRANCH (BRASS)
1	BIT, DRILL 7/64" CONDENSING
1	WIRE ASSY - ORANGE
1	WIRE ASSY - ORANGE
1	LABELS 351331-201 through 351331-209
1	INSTRUCTIONS

## DESCRIPTION AND USAGE

This kit is designed for use in the furnaces listed in [Table 2](#) or [Table 3](#), see [Table 1](#) for kit contents. To accommodate many different furnace models, more parts are shipped in kit than will be needed to complete conversion. When installation is complete, discard extra parts.

**Table 2 – Single-Stage Condensing Furnaces  
(for 40k thru 140k models only)**


Model Numbers Beginning with:		
59S(P/C/E)	91(2/5/6)S	92(2/5/6)S
PG9(2/5)S	PG9(2/6)M	PG9(2/5)ESA
(F/G)9MXE	F9MES	(N/R)9MS
(N/R)95ESN	(N/R)92ESN	(N/R)96MS
(N/R)92MS	(N/R)96VS	WF(A/H/S)X

**Table 3 – Two-Stage & Modulating Condensing Furnaces**

Model Numbers Beginning with:		
Two-Stage:		Modulating:
59T(N/P)	PG95X	59MN
98(6/7)T	(F/G)9M(V/XT)	987M
92(5/6/7)T	(F/G)9(6/7)(V/C)TN	(F/G)9MA
(G/P)G9(6/7)V	WF(S/J)T	(F/G/N)97CM

## INSTALLATION

1. Set room thermostat to lowest setting or "OFF"
2. Disconnect power at external disconnect, fuse or circuit breaker.
3. Turn off gas at external shut-off or gas meter.
4. Remove outer doors and set aside.
5. Turn electric switch on gas valve to OFF.

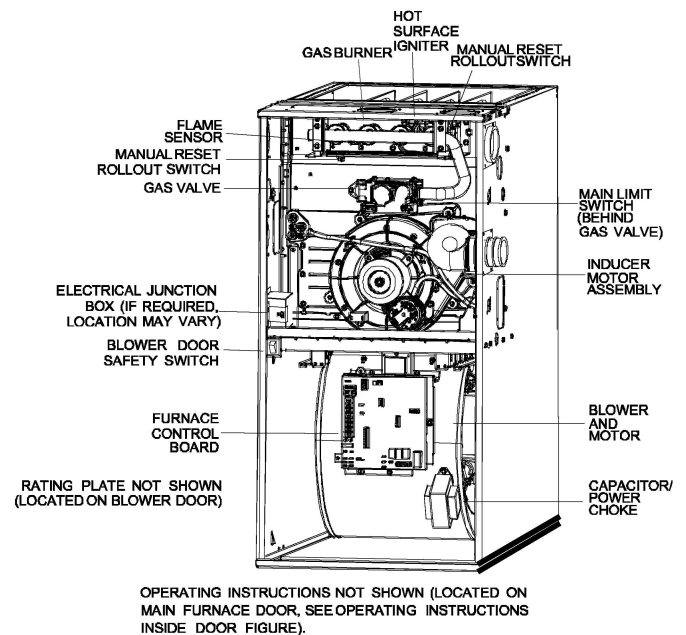

Representative drawing only, some models may vary in appearance.

**Fig. 1 – Representative Furnace Drawing**

A190014

**MANIFOLD/ORIFICE/BURNER REMOVAL****! CAUTION****UNIT OPERATION HAZARD**

Failure to follow this caution may result in unit damage or improper operation.

Label all wires prior to disconnection when servicing controls.


**! ATTENTION****D'EQUIPEMENT D'OPERATION**

Toute erreur de câblage peut être une source de danger et de panne.


Lors des opérations d'entretien des commandes, étiqueter tous les fils avant de les déconnecter.

**NOTE:** Use a back-up wrench on the gas valve to prevent the valve from rotating on the manifold or damaging the mounting to the burner box.

1. Disconnect the gas pipe from gas valve and remove pipe from the furnace casing (see Fig. 1)
2. Disconnect the connector harness from gas valve. Disconnect wires from Hot Surface Igniter (HSI) and Flame Sensor.
3. Support the manifold and remove the four (4) screws that secure the manifold assembly to the burner box and set aside.
4. Note the location of the green/yellow wire ground wire for re-assembly later (see Fig. 2)
5. Remove wires from both rollout switches (see Fig. 3)
6. Slide one-piece burner assembly out of slots on sides of burner box (see Fig. 3)
7. Remove the flame sensor from the burner assembly.
8. Remove the orifices from the manifold and discard.

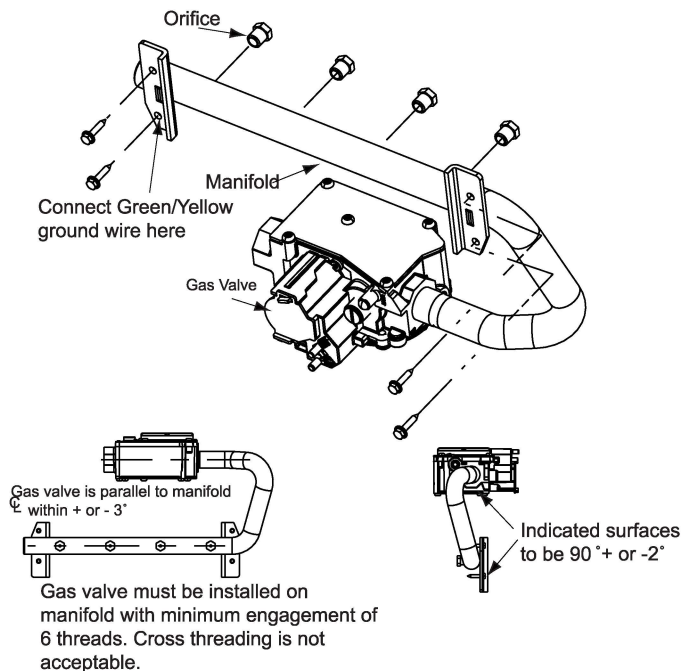**Fig. 2 – Manifold Assembly**

A11407

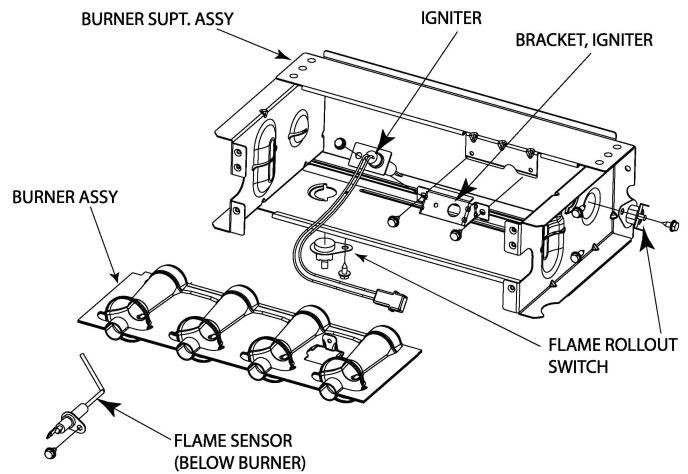
**Fig. 3 – Burner Assembly**

A11403

**ORIFICE SELECTION/DERATE****! CAUTION****UNIT DAMAGE HAZARD**

Failure to follow this caution may result in unit damage.

DO NOT re-drill burner orifices. Improper drilling may result in burrs, out-of-round holes, etc. Obtain new orifices if orifice size must be changed (see Fig. 4)

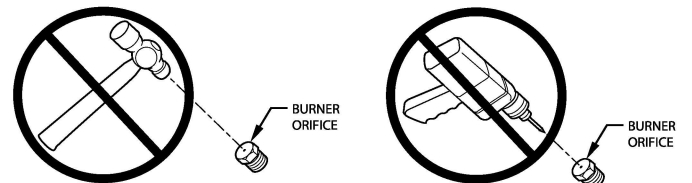

A96249

**Fig. 4 – Burner Orifice**

Refer to conversion kit rating plate to determine main burner orifice size (see Fig. 5)

Furnace gas input rate on furnace rating plate is for installations at altitudes up to 2000 ft. (610 M).

In the U.S.A.; the input rating for altitudes above 2000 ft. (610 M) must be reduced by 2 percent for each 1000 ft. (305 M) above sea level.

In Canada, the input rating must be derated by 5 percent for altitudes of 2000 ft. to 4500 ft. (610 M to 1372 M) above sea level.

The Conversion Kit Rating Plate accounts for high altitude derate.

**SINGLE-STAGE GAS VALVE****CONVERSION KIT RATING PLATE**

THIS APPLIANCE HAS BEEN CONVERTED TO USE PROPANE GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated by 5% for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9NPS01E (SUPERSEDES: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, FUEL USED: PROPANE GAS  
NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) INLET PRESSURE (min - max): 12.0 - 13.6 in. wc

APPLIANCE MODELS Δ		ALTITUDE OF INSTALLATION (FT. ABOVE SEA LEVEL) U.S.A. *								
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000
		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm
59S(P/C/E), 91(2/5/6)S, 92(2/5/6)S, PG9(2/5)S, PG9(2/6)M, PG9(2/5)ESA, (F/G)9MXE,F9MES, (N/R)9MS, (N/R)9ESN, (N/R)9ZESN, (N/R)96MS, (N/R)9ZMS, WF(A/H/S)X, (N/R)96VS	Orifice No.	Manifold Pressure								
		11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0

\* For Canadian Installations from 2000 to 4500 ft. (610m to 1373m) use U.S.A. column 2001 to 3000 ft. (611m to 914m).

Δ THIS KIT IS FOR 40K THROUGH 140K INPUT MODELS ONLY

351331-201 REV.-

**PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION**

CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ PROPANE. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISEZ QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION.

REMARQUE: Le débit d'entrée du gaz de la fournaise indiqué sur la plaque signalétique s'applique aux installations jusqu'à 610m (2000 pieds) au-dessus du niveau de la mer. Aux États-Unis, le débit d'entrée pour les altitudes au-dessus de 610m (2000 pieds) doit être réduit de 2% pour chaque 305m (1000 pieds) au-dessus du niveau. Au Canada, le débit d'entrée doit être réduit par 5% pour les altitudes de 2000 pieds à 4500 pieds au-dessus du niveau de la mer.

KIT NO.: AGAGC9NPS01E (SUPPLANT: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, FUEL USED: PROPANE GAS  
NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) COMBUSTIBLE: GAZ PROPANE INLET PRESSURE (min - max): 12.0 - 13.6 po COLONNE D'EAU

APPROUVÉ POUR LES MODÈLES: Δ		ALTITUDE DE L'INSTALLATION (PI AU-DESSUS DU NIVEAU DE LA MER) É.U. *								
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000
		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm
59S(P/C/E), 91(2/5/6)S, 92(2/5/6)S, PG9(2/5)S, PG9(2/6)M, PG9(2/5)ESA, (F/G)9MXE,F9MES, (N/R)9MS, (N/R)95ESN, (N/R)9ZESN, (N/R)96MS, (N/R)9ZMS, WF(A/H/S)X, (N/R)96VS	N° Orifice	Pression Collecteur								
		11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0

\* Pour les installations au Canada entre 610m et 1373m (2000 à 4500 ft) utiliser la colonne à 611m et 914m (2001 to 3000 ft) des É.U.

Δ CE KIT EST SEULEMENT POUR LES MODÈLES D'ENTRÉE DE 40K À 140K

351331-204 REV.-

**TWO-STAGE GAS VALVE****CONVERSION KIT RATING PLATE**

THIS APPLIANCE HAS BEEN CONVERTED TO USE PROPANE GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated by 5% for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9NPS01E (SUPERSEDES: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, FUEL USED: PROPANE GAS  
NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) INLET PRESSURE (min - max): 12.0 - 13.6 in. wc

APPLIANCE MODELS Δ		ALTITUDE OF INSTALLATION (FT. ABOVE SEA LEVEL) U.S.A. *									
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000	
		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	
59T(N/P), 98(6/7)T, 92(5/6/7)T, (G/P)G9(6/7)V, PG95X, (F/G)9M(V/X)T, (F/G)9(6/7)(V/C)TN, WF(S/J)T	Orifice No.	Manifold Pressure									
	HIGH	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	
	LOW	5.8	5.5	5.5	5.5	5.4	5.4	5.4	5.3	5.3	

\* For Canadian Installations from 2000 to 4500 ft. (610m to 1373m) use U.S.A. column 2001 to 3000 ft. (611m to 914m).

Δ THIS KIT IS FOR 40K THROUGH 140K INPUT MODELS ONLY

351331-208 REV.-

**PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION**

CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ PROPANE. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISEZ QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION.

REMARQUE: Le débit d'entrée du gaz de la fournaise indiqué sur la plaque signalétique s'applique aux installations jusqu'à 610m (2000 pieds) au-dessus du niveau de la mer. Aux États-Unis, le débit d'entrée pour les altitudes au-dessus de 610m (2000 pieds) doit être réduit de 2% pour chaque 305m (1000 pieds) au-dessus du niveau. Au Canada, le débit d'entrée doit être réduit par 5% pour les altitudes de 2000 pieds à 4500 pieds au-dessus du niveau de la mer.

KIT NO.: AGAGC9NPS01E (SUPPLANT: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, FUEL USED: PROPANE GAS  
NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) COMBUSTIBLE: GAZ PROPANE INLET PRESSURE (min - max): 12.0 - 13.6 po COLONNE D'EAU

APPROUVÉ POUR LES MODÈLES: Δ		ALTITUDE DE L'INSTALLATION (PI AU-DESSUS DU NIVEAU DE LA MER) É.U. *								
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000
		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm
59T(N/P), 98(6/7)T, 92(5/6/7)T, (G/P)G9(6/7)V, PG95X, (F/G)9M(V/X)T, (F/G)9(6/7)(V/C)TN, WF(S/J)T	N° Orifice	Pression Collecteur								
	HIGH	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0
	LOW	5.8	5.5	5.5	5.5	5.4	5.4	5.4	5.3	5.3

\* Pour les installations au Canada entre 610m et 1373m (2000 à 4500 ft) utiliser la colonne à 611m et 914m (2001 to 3000 ft) des É.U.

Δ CE KIT EST SEULEMENT POUR LES MODÈLES D'ENTRÉE DE 40K À 140K

351331-209 REV.-





**MODULATING GAS VALVE**

**CONVERSION KIT RATING PLATE**

THIS APPLIANCE HAS BEEN CONVERTED TO USE PROPANE GAS FOR FUEL. REFER TO KIT INSTRUCTIONS FOR CONVERSION PROCEDURES. USE PARTS SUPPLIED BY MANUFACTURER AND INSTALLED BY QUALIFIED PERSONNEL. SEE EXISTING RATING PLATE FOR APPLIANCE MODEL NO. AND INPUT RATING.

NOTE: Furnace gas input rate on rating plate is for installations up to 2000 ft. (610m) above sea level. In U.S.A. the input rating for altitudes above 2000 ft. (610m) must be derated by 2% for each 1000 ft. (305m) above sea level. In Canada the input rating must be derated by 5% for altitudes of 2000 ft. (610m) to 4500 ft. (1372m) above sea level.

KIT NO.: AGAGC9NPS01E (SUPERSEDES: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) FUEL USED: PROPANE GAS  
INLET PRESSURE (min - max): 12.0 - 13.6 in. wc

APPLIANCE MODELS Δ	Orifice No.	ALTITUDE OF INSTALLATION (FT. ABOVE SEA LEVEL) U.S.A. *								
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000
59MN, 987M, (F/G)9MA, (F/G/N)97CM		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm
		<b>Manifold Pressure</b>								
	MAX	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0
	INT	5.8	5.5	5.5	5.5	5.4	5.4	5.4	5.3	5.3
	MIN	2.2	2.1	2.1	2.1	2.1	2.0	2.0	2.0	2.0

\* For Canadian Installations from 2000 to 4500 ft. (610m to 1373m) use U.S.A. column 2001 to 3000 ft. (611m to 914m).  
Δ THIS KIT IS FOR 40K THROUGH 140K INPUT MODELS ONLY

351331-206 REV.A

A240206

**PLAQUE SIGNALÉTIQUE DE LA TROUSSE DE CONVERSION**

CET APPAREIL A ÉTÉ CONVERTI POUR UNE COMBUSTION AU GAZ PROPANE. SE RÉFÉRER AUX INSTRUCTIONS DE L'ÉQUIPEMENT POUR LES PROCÉDURES DE CONVERSION. N'UTILISEZ QUE DES PIÈCES FOURNIES PAR LE MANUFACTURIER ET INSTALLÉES PAR DU PERSONNEL QUALIFIÉ. VOIR LA PLAQUE SIGNALÉTIQUE EXISTANTE POUR LE MODÈLE D'APPAREIL ET LA CONSOMMATION..

REMARQUE: Le débit d'entrée du gaz de la fournaise indiqué sur la plaque signalétique s'applique aux installations jusqu'à 610m (2000 pieds) au-dessus du niveau de la mer. Aux États-Unis, le débit d'entrée pour les altitudes au-dessus de 610m (2000 pieds) doit être réduit de 2% pour chaque 305m (1000 pieds) au-dessus du niveau. Au Canada, le débit d'entrée doit être réduit par 5% pour les altitudes de 2000 pieds à 4500 pieds au-dessus du niveau de la mer.

KIT NO.: AGAGC9NPS01E (SUPPLANT: KGBNP50011SP, KGANP51012SP, KGCNP5201VSP, NAHD00901LP, NAHB01001LP, AGAGC9NPS01B, AGAGC9NPS01C, AGAGC9NPS01D) COMBUSTIBLE: GAZ PROPANE  
PRESSION D'ENTRÉE (min - max): 12.0 - 13.6 po COLONNE D'EAU

APPROUVÉ POUR LES MODÈLES: Δ	Orifice No.	ALTITUDE DE L'INSTALLATION (PI AU-DESSUS DU NIVEAU DE LA MER) É.U. *								
		0 to 2000	2001 * to 3000	3001 to 4000	4001 to 5000	5001 to 6000	6001 to 7000	7001 to 8000	8001 to 9000	9001 to 10000
59MN, 987M, (F/G)9MA, (F/G/N)97CM		1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm	1.25mm
		<b>Pression Collecteur</b>								
	MAX	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0
	INT	5.8	5.5	5.5	5.5	5.4	5.4	5.4	5.3	5.3
	MIN	2.2	2.1	2.1	2.1	2.1	2.0	2.0	2.0	2.0

\* Pour les installations au Canada entre 610m et 1373m (2000 à 4500 ft) utiliser la colonne à 611m et 914m (2001 to 3000 ft) des É.U.  
Δ CE KIT EST SEULEMENT POUR LES MODÈLES D'ENTRÉE DE 40K À 140K.

351331-207 REV.A

A240207

Fig. 5 – Conversion Kit Rating Plate (40,000 BTUh to 140,000 BTUh ONLY)

**INSTALL ORIFICES**

1. Install main burner orifices. Do not use PTFE thread-seal tape. Finger-tighten orifices at least one full turn to prevent cross-threading, then tighten with wrench.
2. There are enough orifices in each kit for largest furnace. Discard extra orifices.

**NOTE:** DO NOT reinstall the manifold at this time.**INSTALL MIXER SCREWS****NOTE:** "REQUIRED FOR THE CONVERSION OF CONDENSING GAS FURNACES TO PROPANE GAS"

1. See Fig. 6 to verify you have the correct set of mixer screws.
2. Locate the dimple on each burner venturi tube.
3. If you cannot locate the dimple, refer to Fig. 7 for location of the mixer screw.
4. Drill a 7/64-in (2.8 mm) hole (supplied in kit) in each dimple.
5. Install a mixer screw in each drilled hole drilling as straight as possible (i.e. in the center of the gas flow stream as well as perpendicular to the gas flow stream).
6. The screw head should be flush with the top of the burner venturi.

**337932-701**

PART #	CONTAINS: DESCRIPTION	QTY
328456-402	BIT, DRILL	1
FAJ5812B	SCREW	7

REQUIRED FOR CONVERSION OF  
CONDENSING GAS FURNACE TO  
PROPANE GAS.

Fig. 6 – Gas Conversion Kit

A11294

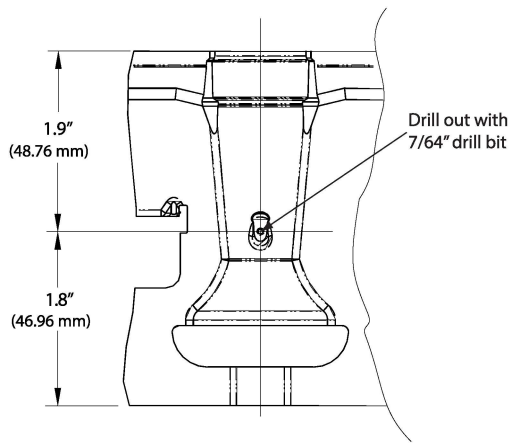


Fig. 7 – Mixer Screw Location

A11460

## REINSTALL BURNER ASSEMBLY

To reinstall burner assembly:

1. Attach flame sensor to burner assembly.
2. Insert one-piece burner in slot on sides of burner box and slide burner back in place.
3. Reattach HSI wires to HSI.
4. Verify igniter to burner alignment (see Fig. 8 & Fig. 9)

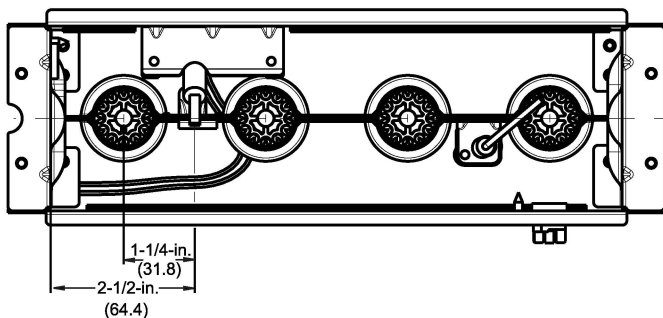


Fig. 8 – Igniter Position - Back View

A11405

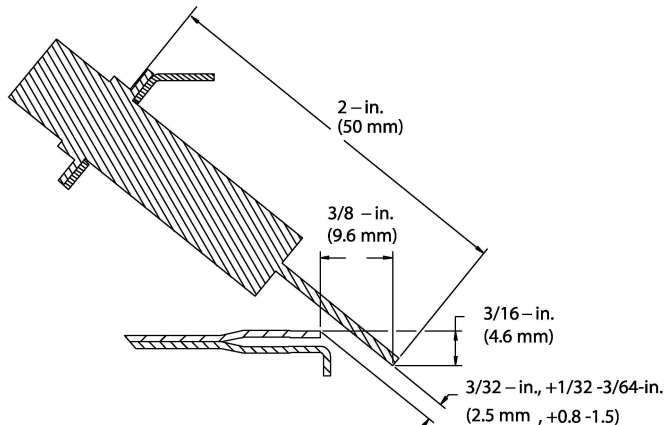


Fig. 9 – Igniter Position - Side View

A12392

## CONVERT GAS VALVE

### ! CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage or improper operation.

**Do NOT use this kit if the gas valve has a green label (26,000 BTU/h model) on it shown in Fig. 10 or Fig. 11. The 26,000 BTU/h model uses a different conversion kit available from your distributor.**

The 26,000 BTU/h model uses a different conversion kit. Refer to Product Specification for the correct conversion kit, available from your distributor.

**NOTE:** Do not use this kit if the gas valve in Fig. 10 or Fig. 11 has a green label on top of the valve. The green label on the gas valve is a special low capacity gas valve. Refer to Specification Sheet for the correct conversion kit.

### ! CAUTION

#### UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit damage

The gas valve must be converted and pre-adjusted before operating on propane gas. If not converted and pre-adjusted, sooting and corrosion will occur leading to early heat exchanger failure.

### ! WARNING

#### FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

### ! WARNING

#### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death or property damage.


Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

## Single Stage Gas Valve

1. Refer to Fig. 10 and Fig. 11. Verify the gas valve has a white label with black lettering on top of the operator.
2. Be sure gas and electrical supplies to furnace are off.
3. Remove caps that conceal adjustment screws for the gas-valve regulators (see Fig. 10 and Fig. 11)
4. Remove the regulator adjustment screw.
5. Remove the regulator springs (silver).
6. Install the propane gas regulator springs (white).
7. Install the regulator adjustment screws.
8. Turn the adjusting screw clockwise (in) 8.5 full turns. This will increase the manifold pressure closer to the propane set point (see Fig. 10 and Fig. 11)

9. Do not install regulator seal caps at this time.


**NOTE:** If there is a GREEN LABEL on gas valve, ensure the correct conversion kit is ordered for the 26K BTUh models.

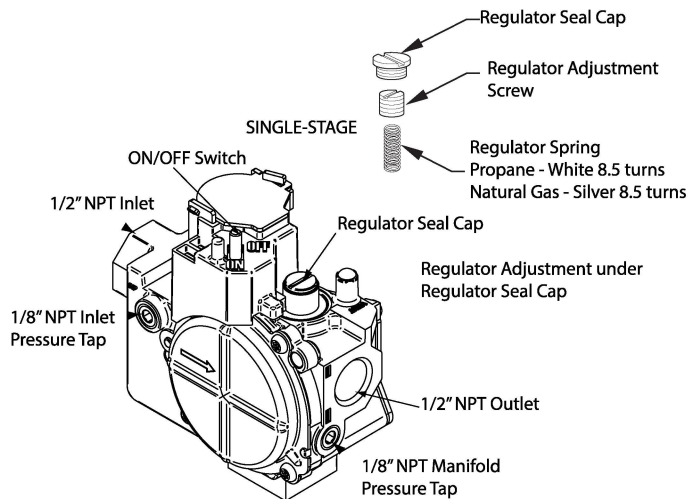


**NOTE:** Remove the natural gas regulator spring (silver)  
Install the propane regulator spring (white)

A13048

**Fig. 10 – Gas Valve (Single Stage) without Tower Pressure Ports**

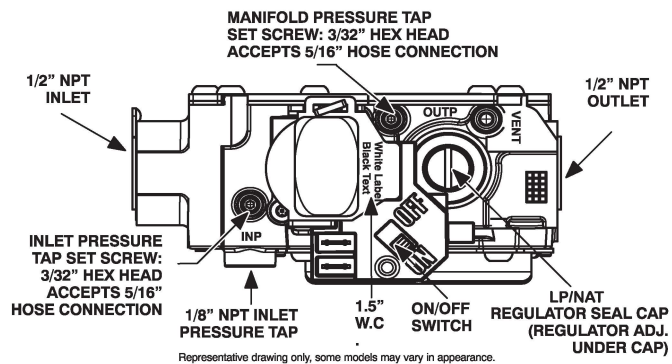

A170118B

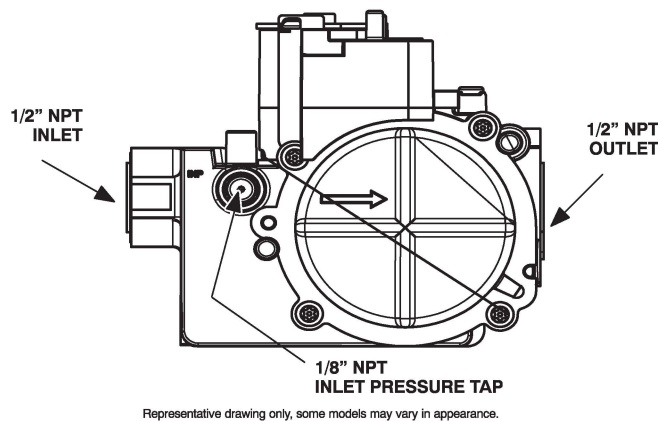


A170133

**Fig. 11 – Gas Valve (Single Stage) with Tower Pressure Ports**


## Two Stage Gas Valve

Refer to [Fig. 12](#) and [Fig. 13](#).

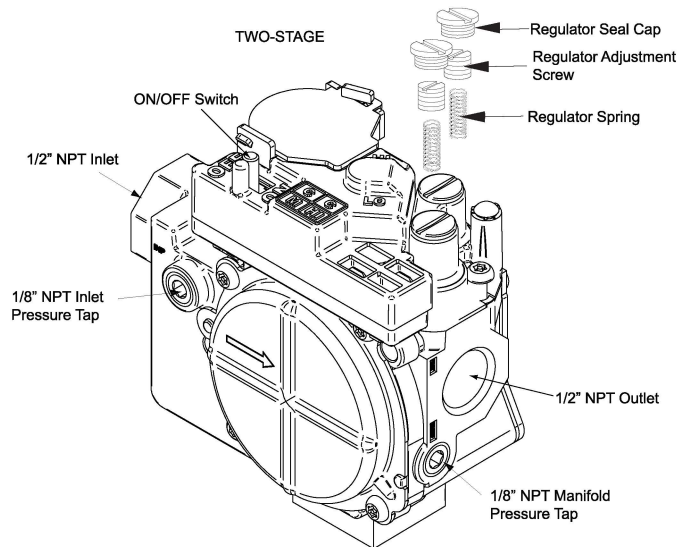


A11472

**Fig. 12 – Automatic Gas Valve (Two-Stage) without Tower Pressure Ports**

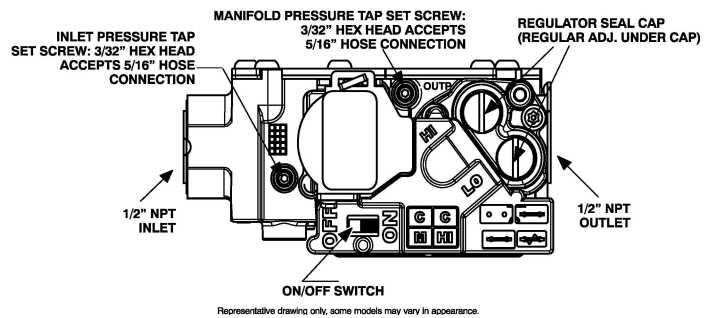

A170117

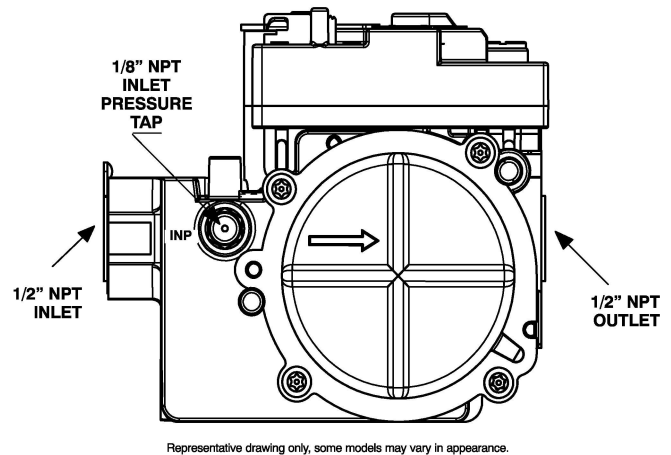

A170132


**Fig. 13 – Automatic Gas Valve (Two-Stage) with Tower Pressure Ports**

1. Remove caps that conceal adjustment screws for high heat and low heat gas-valve regulators (see [Fig. 12](#) and [Fig. 13](#))
2. Remove the high heat and low heat regulator adjustment screws.
3. Remove the high heat and low heat regulator springs (silver).
4. Install the high heat and low heat propane gas regulator springs (white).
5. Install the high heat and low heat regulator adjustment screws.

6. Turn high heat stage adjusting screw clockwise (in) 13.5 full turns. This will increase the manifold pressure closer to the propane set point.
7. Turn low heat stage adjusting screw clockwise (in) 9.5 full turns. This will increase the manifold pressure closer to the propane low heat set point.
8. Do not install regulator seal caps at this time.


## Modulating Gas Valve

Refer to Fig. 14 through Fig. 16.

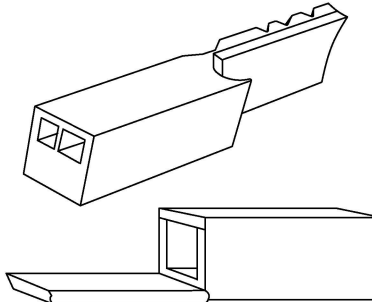

**Fig. 14 – Propane Jumper**

A11373

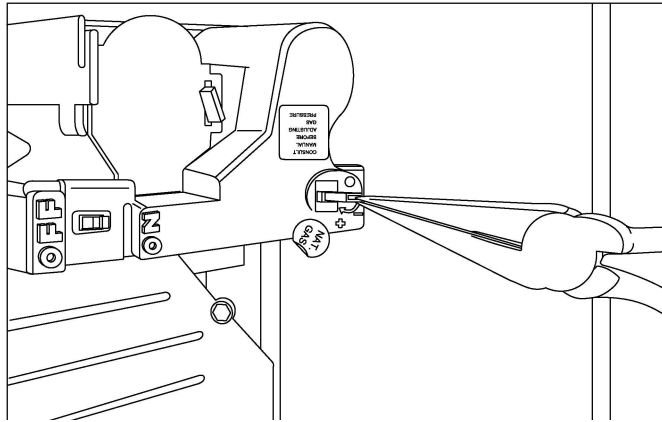


A11375


**Fig. 15 – Installing Propane Jumper**

**NOTE:** The Propane jumper for the modulating gas valve is very small. Needle-nose pliers are required to insert the jumper into the valve. If the jumper is not installed, the valve will not operate properly on propane.

1. Locate the round “NAT GAS” sticker on the top of the gas valve.
2. Peel the sticker off and discard.
3. Note the small square opening in the top of the gas valve.
4. Note the two jumper pins inside the modulating gas valve.
5. Remove the small black plastic propane jumper from the envelope.
6. Use needle-nosed pliers to hold the jumper by the tab on the end.
7. Insert the jumper on the pins inside the gas valve.
8. Cover the opening in the gas valve with the label marked “LP GAS”

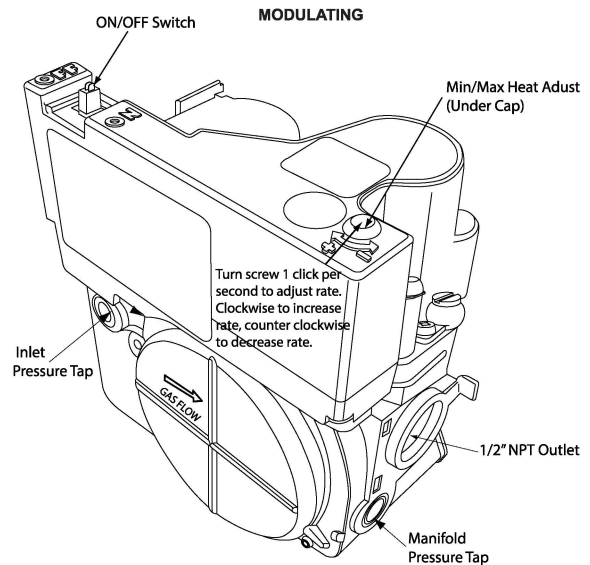


A10496

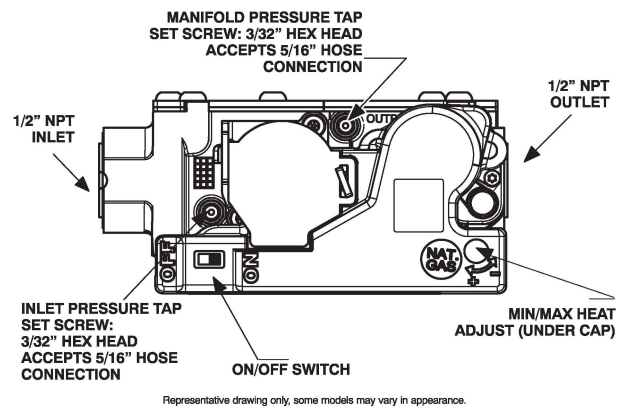

Representative drawing only, some models may vary in appearance.

A170116

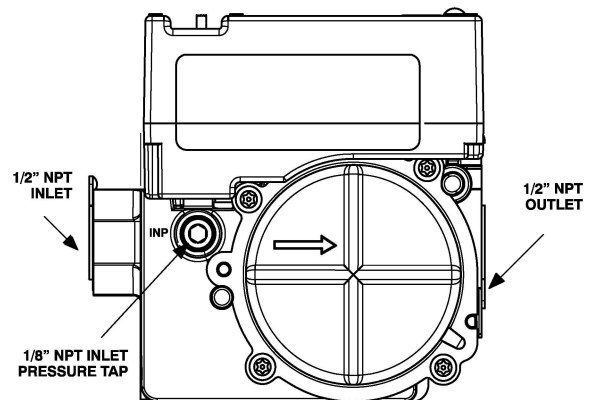

Representative drawing only, some models may vary in appearance.

A170131

**Fig. 16 – Automatic Control Valve (Modulating) without Tower Pressure Ports**

## INSTALL LOW GAS PRESSURE SWITCH


**NOTE:** Install the Low Gas Pressure Switch before installing the manifold on the burner assembly.

There are two ways to mount the Low Gas Pressure Switch.

**All 14 3/16-in Casings or Vent Passed Between Inducer Assembly and Burner Assembly**

If the vent pipe passes between the inducer and burner assembly, or the furnace is a 14 3/16-in. wide casing. The switch may be installed as shown in Fig. 17:



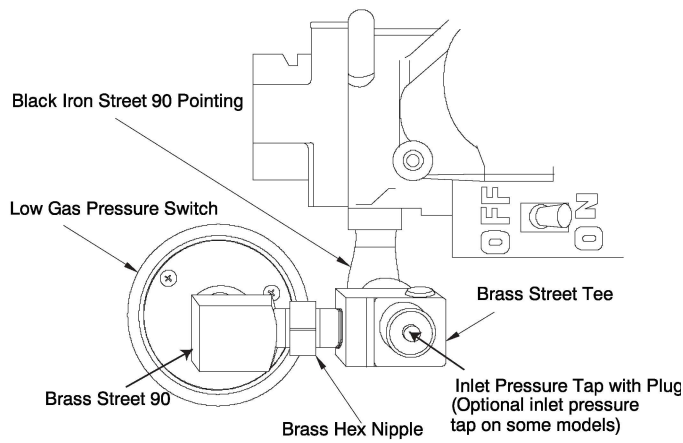

A170141

**Fig. 17 – LGPS for 14-3/16 Casing or when vent passes between inducer and burner assembly**

1. Remove the 1/8-in. (3 mm) NPT pipe plug from the gas valve inlet pressure tap.

**NOTE:** Use pipe dope approved for use with Propane Gas.

**NOTE:** Tighten all fittings and the Low Gas Pressure Switch with a small wrench. Do not over-tighten, check for gas leaks after gas supply has been turned on.

## ⚠ WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

## ⚠ AVERTISSEMENT

### RISQUE D'EXPLOSION ET D'INCENDIE

Le non-respect des avertissements de sécurité pourrait d'entraîner des blessures graves, la mort ou des dommages matériels.


Ne jamais utiliser une flamme nue pour vérifier la présence des fuites de gaz. Pour la vérification de tous les joints, utiliser plutôt une solution savonneuse commerciale fabriquée spécifiquement pour la détection des fuites de gaz. Un incendie ou une explosion peut entraîner des dommages matériels, des blessures ou la mort.

2. Apply pipe dope sparingly to the male threads of the 1/8-in. (3 mm) black iron street elbow. Install the street elbow into the gas valve inlet pressure tap. One end of the opening of the street elbow should be parallel with the inlet boss on the gas valve. The other opening should be pointing toward you.
3. Apply pipe dope sparingly to the male threads of the 1/8-in. (3 mm) brass street tee. Install the male end of the street tee as shown in Fig. 17. One opening on the street tee should face you. The other opening should be parallel with the inlet of the gas valve.
4. Apply pipe dope sparingly to the male threads of the 1/8-in. (3 mm) brass hex nipple. Install the hex nipple into the open end of the brass street tee (see Fig. 17). The hex nipple should be parallel with the boss on the gas valve.
5. Install the open end of the brass street elbow on the end of the hex nipple. Tighten the street elbow so the male threads of the elbow point away from you.

6. Apply pipe dope sparingly to the male threads of the 1/8-in. (3 mm) brass street elbow. Install the Low Gas Pressure Switch on the male threads of the 1/8-in. (3 mm) street elbow. Tighten switch at hex fitting at base of switch. Do not use switch body to tighten switch. Do not over-tighten switch.
7. The remaining opening on the brass street tee is the new gas valve inlet pressure tap (optional on some models). Apply pipe dope to inlet pressure plug from gas valve and install in open end of brass street tee.
8. Check all fittings for leaks after gas supply has been turned on.

### **Casings Wider Than 14 3/16-in/Vent Does Not Pass Between Inducer and Burner Assembly**

If the vent pipe does not pass between the inducer and burner assembly, or the furnace is wider than a 14 3/16-in. wide casing. The switch may be installed as shown in Fig. 18):

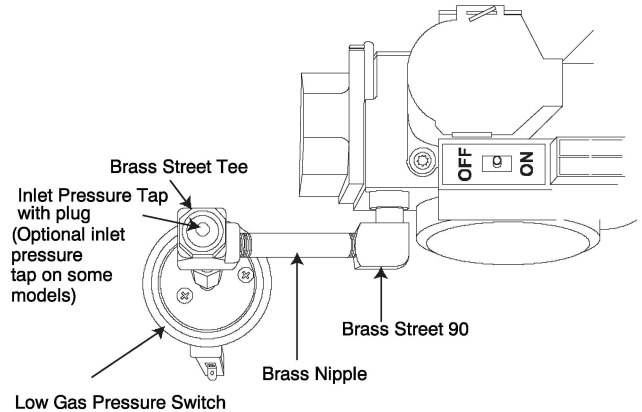

A170142

**Fig. 18 – LGPS for casing wider than 14-3/16 and vent does not pass between inducer and burner assembly**

1. Remove the 1/8-in. (3 mm) NPT pipe plug from the gas valve inlet pressure tap.

**NOTE:** Use pipe dope approved for use with Propane Gas.

**NOTE:** Tighten all fittings and the Low Gas Pressure Switch with a small wrench. Do not over-tighten, check for gas leaks after gas supply has been turned on.

2. Apply pipe dope sparingly to the male threads of the brass street elbow.
3. Install the brass street elbow in inlet pressure tap of the gas valve
4. Tighten the brass street elbow with a small wrench so the outlet faces to your left.
5. Apply pipe dope sparingly to the male threads of the 2-in. brass nipple.
6. Install the brass nipple in the outlet of the brass street elbow.
7. Locate the brass street tee in the kit. Orient the tee so the male threads on the tee face away from you and the female threads face point to the male threads of the 2-in brass nipple.
8. With a small back-up wrench on the brass street elbow, tighten the brass street tee with a small wrench until the fittings are tight and the male portion of the threads point away from you.
9. Apply pipe dope sparingly to the male threads of the 1/8-in. brass street elbow. Install the Low Gas Pressure Switch on the male threads of the street elbow. Tighten switch at hex fitting at base of switch. Do not use switch body to tighten switch. Do not over-tighten switch.
10. The remaining opening on the brass street tee is the new gas valve inlet pressure tap (optional on some models). Apply pipe dope to inlet pressure plug from gas valve and install in open end of brass street tee.
11. Check all fittings for leaks after gas supply has been turned on.

## INSTALL LOW GAS PRESSURE SWITCH WIRES

1. Locate the orange wire in the kit with an insulated straight female spade terminal and an insulated straight male terminal on the other end.
2. Connect the female terminal to a terminal on the Low Gas Pressure Switch.
3. Locate the orange wire in kit with an insulated straight female spade terminal and an insulated female flag terminal on the other end.
4. Connect both straight female terminals of the orange wires to the terminals on the Low Gas Pressure Switch.

## INSTALL MANIFOLD

1. Refer to Fig. 2 and Fig. 3.
2. Align the orifices in the manifold assembly with the support rings on the end of the burner.
3. Insert the orifices in the support rings of the burners. Manifold mounting tabs should fit flush against the burner box.

**NOTE:** If manifold does not fit flush against the burner box, the burners are not fully seated forward. Remove the manifold and check burner positioning in the burner box assembly.

4. Attach the green/yellow wire and ground terminal to one of the manifold mounting screws (see Fig. 2)
5. Install the remaining manifold mounting screws.
6. Connect the wires to the flame sensor and hot surface igniter.
7. Connect the connector harness to gas valve.

**NOTE:** Use only propane-resistant pipe dope. Do not use PTFE thread-seal tape.

8. Insert the gas pipe through the grommet in the casing. Apply a thin layer of pipe dope to the threads of the pipe and thread the pipe by into the gas valve.

**NOTE:** Use a back-up wrench on the gas valve to prevent the valve from rotating on the manifold or damaging the mounting to the burner box.

9. With a back-up wrench on the inlet boss of the gas valve, finish tightening the gas pipe to the gas valve.
10. Turn gas on at electric switch on gas valve.

## MODIFY PRESSURE SWITCH WIRING

### ! CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution may result in unit damage or improper operation.

Label all wires prior to disconnection when servicing controls.

### ! ATTENTION


#### D'EQUIPEMENT D'OPERATION

Toute erreur de câblage peut être une source de danger et de panne.


Lors des opérations d'entretien des commandes, étiqueter tous les fils avant de les déconnecter.

1. Disconnect orange wire from Low Heat Pressure Switch LPS on inducer housing (see Fig. 1)
2. Connect the orange wire from the Low Heat Pressure Switch to the orange wire with the insulated male spade terminal (see Fig. 19)
3. Connect the orange wire from the Low Gas Pressure Switch to the terminal on the Low Heat Pressure Switch.

4. Route orange wires along wire harness. If possible, secure with wire tie provided in kit.

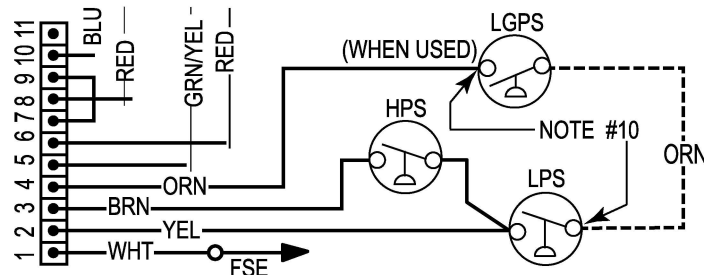

L13F016

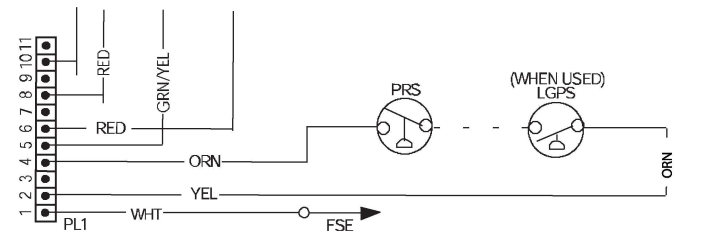

A190143

Fig. 19 – Pressure Switch Wiring

## CHECK INLET GAS PRESSURE

### ! CAUTION

#### UNIT DAMAGE HAZARD

Failure to follow this caution may result in unit damage.

DO NOT operate furnace more than one minute to check inlet gas pressure, as conversion is not complete at this time.

**NOTE:** This kit is to be used only when inlet gas pressure is between 12.0-in. w.c. and 13.6-in. w.c.

1. On some models, remove 1/8-in. (3 mm) pipe plug from inlet pressure tap (see Fig. 17 and Fig. 18) and insert pressure tap. Or, on some models, loosen set screw on inlet tower pressure tap no more than one full turn with the 3/32-in. hex wrench (see Fig. 10 and Fig. 11).
2. Verify manometer is connected to inlet pressure tap on gas valve (see Fig. 10 and Fig. 11).
3. Turn on furnace power supply.
4. Turn gas supply manual shutoff valve to ON position.
5. Turn furnace gas valve switch to ON position.

### ! WARNING

#### FIRE, EXPLOSION, ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death or property damage.

Gas supply **MUST** be shut off before disconnecting electrical power and proceeding with conversion.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

[illegible]


Diagram of the back of a microwave oven showing various terminals and components with labels:

- PLT-FACTORY RUN TEST PORT PRODUCTION USE ONLY
- 7-SEGMENT DISPLAY AND PUSHBUTTONS
- SUPER PLUG CONNECTOR - SERVICE BOARD REPLACEMENT USE ONLY
- NFC ANTENNA
- HUMIDIFIER TERMINAL (24-VAC 0.5 AMP)
- BOARD PART NUMBER LOCATOR
- PL1 - LOW VOLTAGE SUPPLY CONNECTOR
- PL2 - (115VAC) HOT SURFACE IGNITER & INDUCER MOTOR 115V SUPPLY CONNECTOR
- 115-VAC (0.1) LINE VOLTAGE CONNECTION
- 115-VAC (BL-1) TRANSFORMER
- 115-VAC (BL-1) BLOWER MOTOR LINE
- EAC-1 TERMINAL (115-VAC 1.0 AMP MAX)
- NEUTRAL - L2
- 115-VAC (L2) NEUTRAL CONNECTIONS
- 3-AMP FUSE
- FUSE 3-AMP
- TRANSFORMER 24-VAC CONNECTIONS
- STATUS LED LIGHT
- 24-VAC THERMOSTAT TERMINALS
- 24VAC ONLY
- G
- C
- W
- R
- 24VAC ONLY
- TWIN
- TWINNING
- PLT
- SELECT
- TEST
- OPTION
- RUN
- 24VAC
- AVOID ELECTROSTATIC DISCHARGE
- EAC-1
- BL
- PR
- L1
- L2
- IND HSI

1. Jumper R-W thermostat connections on control.
2. When main burners ignite, confirm inlet gas pressure is between 12.0-in. w.c. and 13.6-in. w.c.
3. Remove jumper across R-W thermostat connections to terminate call for heat.
4. Turn furnace gas valve switch to OFF position.

- 
- MODEL PLUG CONNECTOR
- COMMUNICATION CONNECTOR
- CONTINUOUS FAN (CF) AIRFLOW SETUP SWITCHES
- OUTDOOR AIR TEMP CONNECTOR
- SW4 SETUP SWITCHES
- SW1 SETUP SWITCHES AND BLOWER OFF-DELAY
- AIR CONDITIONING (A/C) AIRFLOW SETUP SWITCHES
- 24-V THERMOSTAT TERMINALS
- STATUS AND COMM LED LIGHTS
- 3-AMP FUSE
- TRANSFORMER 24-VAC CONNECTIONS
- 115-VAC (L2) NEUTRAL CONNECTIONS
- HUMIDIFIER TERMINAL (24-VAC 0.5 AMP MAX.)
- FLASH UPGRADE CONNECTOR (FACTORY ONLY)
- PART NUMBER AND DATE CODE WWWWY
- SOFTWARE VERSION
- 115-VAC (L1) LINE VOLTAGE CONNECTIONS
- EAC-1 TERMINAL (115-VAC 1.0 AMP MAX.)
- PL1 - LOW VOLTAGE MAIN HARNESS CONNECTOR AND ECM BLOWER HARNESS CONNECTOR
- PL2 - HOT SURFACE IGNITER & INDUCER MOTOR CONNECTOR

11

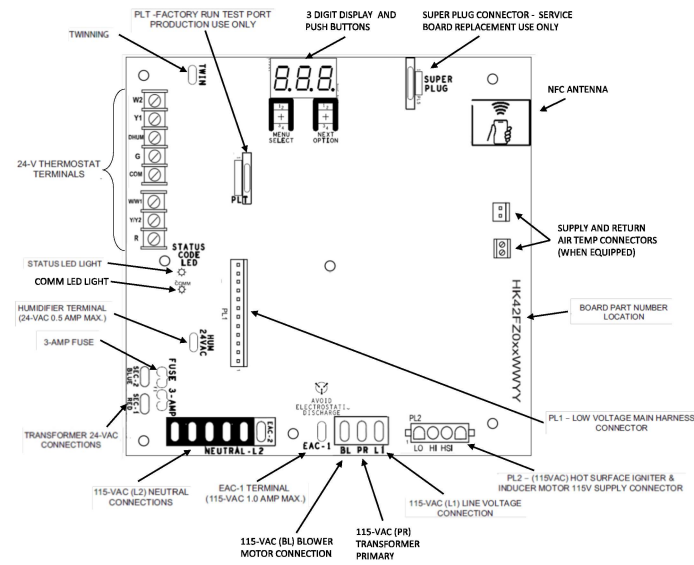

Representative drawing only, some models may vary in appearance.

**Fig. 21 – Example of Two-Speed Furnace Control for VCA or VCT Blower Motor**

## CAUTION


### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, or death. Blower access door switch removes 115-V power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.


Do not tape or permanently allow the door switch to be bypassed. Temporarily depress the door switch with one hand while accessing the service buttons with your other hand. Do not touch uninsulated electrical components.

1. Enable two-stage thermostat on furnace control by:
  - a. Furnace controls with DIP switches, turn SW1-2 on furnace control ON, see Fig. 21.
  - b. Furnace controls with 3 digit display, navigate to (HtE) and select (25E), see Fig. 21. See furnace installation manual for additional instructions.
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 12.0-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap with a 3/32-in. hex wrench (see Fig. 12 and Fig. 13).

## Fixed Speed Blower (FCT), Two-Stage Gas Valve

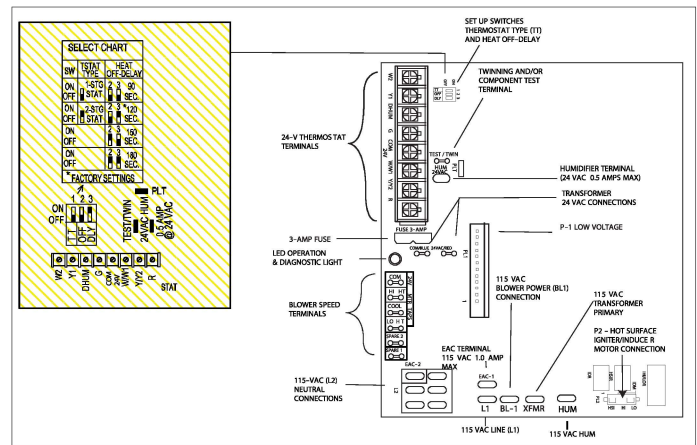

Representative drawing only, some models may vary in appearance.

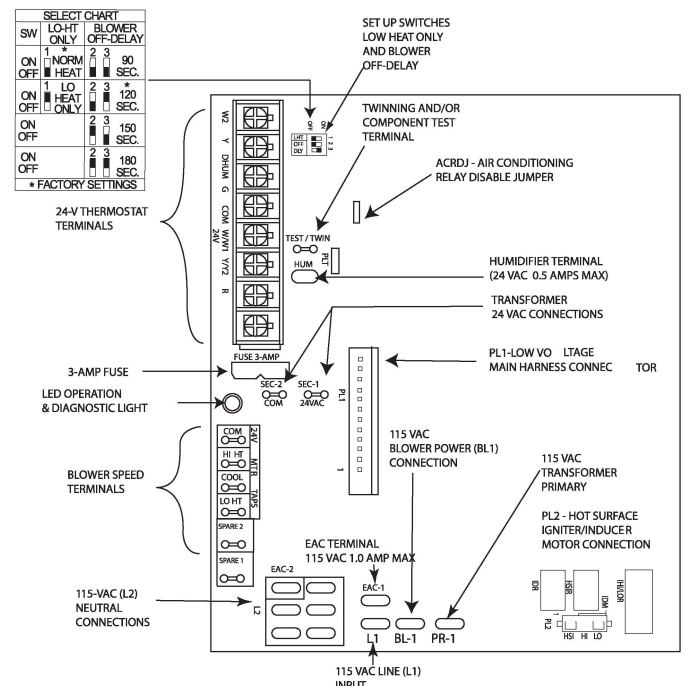

Representative drawing only, some models may vary in appearance.


**Fig. 22 – Example of PSC or Discrete Tap Two-Stage Furnace Control**

1. Turn Setup Switch SW1 (LHT or TT) on furnace control ON (see Fig. 22).
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 12.0-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap



no more than one full turn with a 3/32-in. hex wrench (see Fig. 12 and Fig. 13).

## Modulating Gas Valve

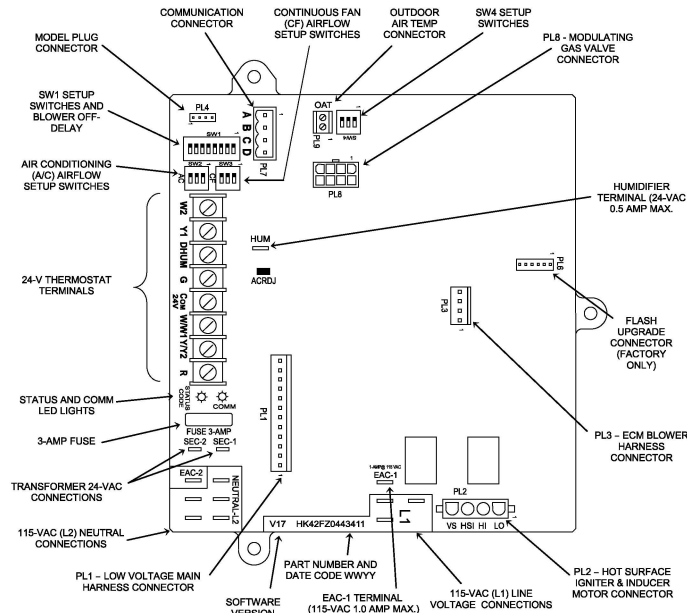

L11F061

Representative drawing only, some models may vary in appearance.

**Fig. 23 – Example of Modulating Furnace Control for ECM Blower Motor**

## ! CAUTION

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, or death. Blower access door switch removes 115-V power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes. Do not tape or permanently allow the door switch to be bypassed. Temporarily depress the door switch with one hand while accessing the service buttons with your other hand. Do not touch uninsulated electrical components.

1. Enable two-stage thermostat on furnace control by:
  - a. Furnace controls with DIP switches, turn SW1-2 on furnace control ON, see Fig. 23.
  - b. Furnace controls with 3 digit display, navigate to (HtE) and select (25E - LHt). See furnace installation manual for additional instructions.
2. Jumper R-W/W1 and R-W2 thermostat connections on control.
3. When main burners ignite, confirm inlet gas pressure is between 12.0-in. w.c. and 13.6-in. w.c.
4. Remove jumper across R-W/W1 and R-W2 thermostat connections to terminate call for heat.
5. Turn furnace gas valve switch to OFF position.
6. Turn gas supply manual shutoff valve to OFF position.
7. Turn off furnace power supply.
8. Remove manometer and on some models remove pressure tap fitting.
9. On some models, apply pipe dope sparingly to the end of inlet gas pipe plug and install into unused end of 1/8-in. (3 mm) tee. Use a small back-up wrench on tee when tightening gas inlet pipe plug. Or, on some models, tighten set screw on inlet tower pressure tap with a 3/32-in. hex wrench (see Fig. 16 through Fig. 18).

## CHECK FURNACE AND MAKE ADJUSTMENTS

## ! WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

## ! AVERTISSEMENT

### RISQUE D'EXPLOSION ET D'INCENDIE

Le non-respect des avertissements de sécurité pourrait d'entraîner des blessures graves, la mort ou des dommages matériels.

Ne jamais utiliser une flamme nue pour vérifier la présence des fuites de gaz. Pour la vérification de tous les joints, utiliser plutôt une solution savonneuse commerciale fabriquée spécifiquement pour la détection des fuites de gaz. Un incendie ou une explosion peut entraîner des dommages matériels, des blessures ou la mort.

1. Be sure main gas and electric supplies to furnace are off.
2. On some models, remove 1/8-in. (3 mm) pipe plug from manifold pressure tap on the outlet end of gas valve and insert pressure tap. Or, on some models, loosen the set screw on manifold tower pressure tap no more than one full turn with the 3/32-in. hex wrench.
3. Attach manometer to manifold pressure tap on gas valve (see Fig. 10, Fig. 11, Fig. 12, Fig. 13 or Fig. 16).
4. Turn gas supply manual shutoff valve to ON position.
5. Turn furnace gas valve switch to ON position.
6. Check all threaded pipe connections for gas leaks.
7. Turn on furnace power supply.

## GAS INPUT RATE INFORMATION

The gas input rate for propane is the same as for natural gas. See furnace rating plate (see Fig. 5) for input rate. The input rate for propane is determined by manifold pressure and orifice size.

Modulating gas valve must be set for Maximum Heat first and then set for Minimum heat on Modulating furnaces.

For Two-Stage gas valve it is recommended to adjust Low Heat first and then adjust High Heat on Two-Stage furnaces.

Furnace gas input rate on rating plate is for installations at altitudes up to 2000 ft. (610 M).

In the U.S.A.; the input rating for altitudes above 2000 ft. (610M) must be reduced by 2 percent for each 1000 ft. (305 M) above sea level.

In Canada; the input rating must be derated by 5 percent for altitudes of 2000 ft. (610 M) to 4500 ft. (1372 M) above sea level.

The Conversion Kit Rating Plate accounts for high altitude derate.

## SET GAS INPUT RATE

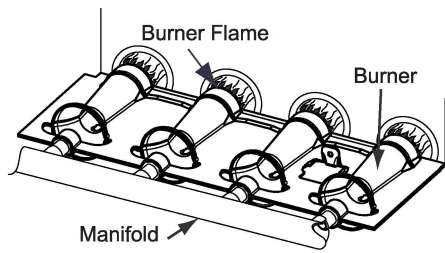


Fig. 24 – Burner Flame

A11461

### Single Stage Gas Valve

1. Jumper R and W thermostat connections to call for heat (see Fig. 20).
2. Check manifold orifices for gas leaks when main burners ignite.
3. Adjust gas manifold pressure.
4. Remove cap that conceals gas valve regulator adjustment screw.
5. Turn adjusting screw counterclockwise (out) to decrease manifold pressure or clockwise (in) to increase manifold pressure.
6. Replace gas valve regulator seal cap.
7. Verify manifold pressure is correct.

**NOTE:** Gas valve regulator seal cap **MUST** be in place when checking input rate. When correct input is obtained, main burner flame should be clear blue, almost transparent (see Fig. 24). Be sure regulator seal cap is in place when finished.

8. Remove jumper across R and W thermostat connections to terminate call for heat.
9. Turn furnace gas valve control switch or control knob to OFF position.
10. Turn off furnace power supply.
11. Remove manometer and on some models remove pressure tap fitting.
12. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench (see Fig. 10 or Fig. 11).
13. Turn furnace gas-valve switch to ON position.
14. Turn on furnace power supply.
15. Set room thermostat to call for heat.
16. Check pressure tap plug for gas leaks when main burners ignite.
17. Check for correct burner flame.
18. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

### Fixed-Speed Blower (FCT), Two-Stage Gas Valve

1. Verify SW1 (LHT or TT) on furnace control is turned "ON" (see Fig. 22).
2. Jumper R and W/W1 thermostat connections to call for heat.
3. Check manifold orifices for gas leaks when main burners ignite.
4. Adjust gas manifold pressure.
5. Remove caps that conceal adjustment screws for gas valve regulators (see Fig. 12 or Fig. 13).
6. Adjust low heat input rate manifold pressure for propane gas.
7. Turn low heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
8. When correct input is obtained, main burner flame should be clear blue, almost transparent (see Fig. 24).

9. Jumper R and W/W1 and W2 on control center thermostat connections. This keeps furnace locked in high heat operation.
10. Adjust high heat input rate manifold pressure for propane gas.
11. Turn high heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
12. Replace caps that conceal gas valve regulator adjustment screws.
13. When correct input is obtained, main burner flame should be clear blue, almost transparent (see Fig. 24).
14. Remove jumper across R, W1, and W2 after high heat adjustment to terminate call for heat.
15. Turn setup switch SW1 (TT) on furnace control to OFF position.
16. Turn furnace gas-valve switch to OFF position.
17. Turn off furnace power supply.
18. Remove manometer from the manifold pressure tap of the gas valve.
19. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench (see Fig. 12 or Fig. 13).
20. Turn on furnace power supply.
21. Set room thermostat to call for heat.
22. Check pressure tap plug for gas leaks when main burners ignite.
23. Check for correct burner flame.
24. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

### Two-Stage Gas Valve

1. Enable two-stage thermostat on furnace control by:
  - a. Furnace controls with DIP switches, turn SW1-2 on furnace control ON.
  - b. Furnace controls with 3 digit display, navigate to (Ht) and select (25t). See furnace installation manual for additional instructions.
2. Jumper R and W/W1 thermostat connections to call for heat.
3. Check manifold orifices for gas leaks when main burners ignite.
4. Adjust gas manifold pressure. Refer to Conversion Kit Rating Plate for Two-Stage.
5. Remove caps that conceal adjustment screws for gas valve regulators (see Fig. 12 or Fig. 13).
6. Adjust low-heat manifold pressure for propane gas (see Fig. 12 or Fig. 13).
7. Turn low-heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.

**NOTE:** When correct input is obtained, main burner flame should be clear blue, almost transparent (see Fig. 24).

8. Jumper R, W/W1 and W2 on control center thermostat connections. This keeps furnace locked in high-heat operation.
  9. Adjust high-heat manifold pressure for propane gas.
  10. Turn high-heat adjusting screw counterclockwise (out) to decrease input rate or clockwise (in) to increase input rate.
  11. Replace caps that conceal gas valve regulator adjustment screws.
- NOTE:** When correct input is obtained, main burner flame should be clear blue, almost transparent (see Fig. 24).
12. Remove jumper across R, W1, and W2 after high-heat adjustment to terminate call for heat.
  13. Return thermostat type setting back to desired setting based on your thermostat:

- a. Furnace controls with DIP switches, turn SW1-2 on furnace control ON for a two-stage Thermostat, OFF for a single-stage Thermostat, see Fig. 22.
  - b. Furnace controls with 3 digit display, navigate to (HtE) and select (25E) for a two-stage thermostat or select (15E) for a single-stage thermostat. See furnace installation manual for additional instructions.
14. Turn furnace gas valve switch to OFF position.
  15. Turn off furnace power supply.
  16. Remove manometer from the manifold pressure tap of the gas valve.
  17. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening. Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench (see Fig. 12 or Fig. 13).
  18. Turn furnace gas valve switch to ON position.
  19. Turn on furnace power supply.
  20. Set room thermostat to call for heat.
  21. Check pressure tap plug for gas leaks when main burners ignite.
  22. Check for correct burner flame.
  23. Observe unit operation through two complete heating cycles.
  24. See Sequence of Operation in furnace Installation, Start-up, and Operating Instructions.
  25. Set room thermostat to desired temperature.
  26. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise per the furnace installation instructions.

## Modulating Gas Valve



### UNIT DAMAGE HAZARD

Failure to follow this caution may result in gas valve damage.

**DO NOT** force the rotary adjustment switch on the modulating gas valve. **DO NOT** turn the rotary adjustment switch faster than one click per second when adjusting manifold pressure. Gas valve will be damaged if excessive force is used on the rotary switch.

For proper operation and long term reliability, the manifold pressure must be adjusted as specified on the conversion kit rating plate.

The modulating furnace manifold pressure is set at two points. The first point is Maximum Heat. The second point is Minimum Heat. Do not adjust Intermediate Heat manifold pressure. Intermediate Heat manifold pressure can be checked as part of the temperature rise, but is not adjustable. Always adjust Maximum Heat first, then Minimum Heat.

**NOTE:** DO NOT set Maximum Heat manifold pressure less than 10.5-in. w.c. or more than 11-in. w.c. for propane gas.

**NOTE:** Use care when performing adjustments. Gas valve adjustment is performed by turning a rotary adjustment switch inside the gas valve with a small straight blade screwdriver. Excessive force can break or bend the rotary adjustment switch making it non-adjustable.

### To adjust manifold pressure to obtain input rate for Maximum Heat:

1. Enable two-stage thermostat with low heat on furnace control by:
  - a. Furnace controls with DIP switches, turn SW1-2 ON and SW4-2 OFF at the furnace control.
  - b. Furnace controls with 3 digit display, navigate to (HtE) and select (25E - L HtE). See furnace installation manual for additional instructions.
2. Jumper the R to W/W1 and W2 thermostat connections at the furnace control board.

3. After the main burners ignite and the blower starts, confirm Maximum Heat manifold pressure is correct, based on the manifold pressure table on the Conversion Kit Rating Plate.
4. To adjust the Maximum Heat manifold pressure, Slowly turn the rotary adjustment switch counterclockwise to decrease manifold pressure or clockwise to increase manifold pressure.
5. Turn rotary adjustment switch no more than one click per second until you obtain the required manifold pressure.

Main burner flame should be clear blue, almost transparent.

### To adjust manifold pressure to obtain input rate for Minimum Heat:

1. Remove the jumper from W2 at the thermostat connections at the furnace control board.
2. Wait until the burners and the blower transitions to Minimum Heat.
3. Verify the Minimum Heat manifold pressure is correct, based on the manifold pressure table on Conversion Kit Rating Plate.
4. To adjust the Minimum Heat manifold pressure, Slowly turn the rotary adjustment switch counterclockwise to decrease manifold pressure or clockwise to increase manifold pressure.
5. Turn rotary adjustment switch no more than one click per second until you obtain the required manifold pressure. This adjustment will not affect the previous Maximum Heat adjustment.
6. When correct input is obtained, remove jumpers across thermostat connections to terminate the call for heat. Wait until the blower off delay is completed.
7. Return thermostat type setting on furnace control back to desired setting based on your thermostat:
  - a. Furnace controls with DIP switches, set SW1-2 and SW4-2 at furnace control per the furnace installation manual.
  - b. Furnace controls with 3 digit display, navigate to (HtE) and select (1St) for a single-stage thermostat, (25E - L HtE) for a two-stage thermostat running low heat, or (25E - HtE) for a two-stage thermostat running intermediate heat. See furnace installation manual for additional instructions.
8. Turn gas supply manual shutoff valve to OFF position.
9. Turn off furnace power supply.
10. Remove manometer from the manifold pressure tap of the gas valve.
11. On some models, apply pipe dope sparingly to end of 1/8-in. (3 mm) pipe plug and install in the manifold pressure tap opening (see Fig. 16). Or, on some models, tighten set screw on manifold tower pressure tap with a 3/32-in. hex wrench (see Fig. 25).
12. After making the required manifold pressure adjustments, check and adjust the furnace temperature rise at Minimum, Intermediate, and Maximum heat per the furnace installation instructions.

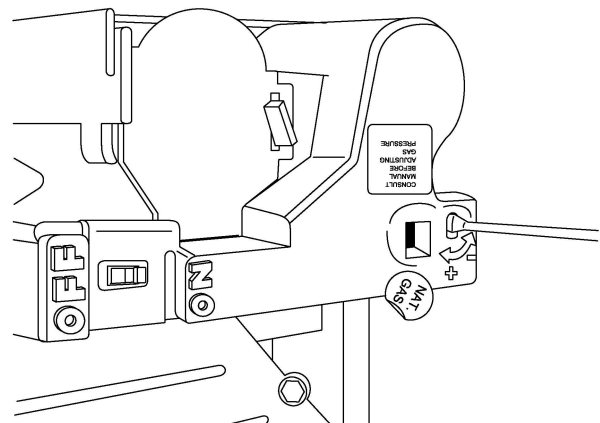



Fig. 25 – Modulating Gas Valve Adjustment

A11451

13. Re-install plastic cap over rotary adjustment switch on the top of the gas valve.



**WARNING**

**FIRE HAZARD**  
Failure to follow this warning could result in personal injury, death, and/or property damage.  
Manifold pressure tap set screw must be tightened or 1/8-in. (3 mm) NPT pipe plug must be installed to prevent gas leaks.

14. Turn furnace gas valve switch to ON position.  
15. Turn on furnace power supply.  
16. Set room thermostat to call for heat.  
17. Check pressure tap plug for gas leaks when main burners ignite.  
18. Check for correct burner flame.

CHECK LOW GAS PRESSURE SWITCH

The newly installed low gas pressure switch is a safety device used to guard against adverse burner operating characteristics that can result from low gas supply pressure. Switch opens at not less than 7.2 in. w.c. and closes at not greater than 10.2 in. w.c.  
This switch also prevents operation when the propane tank level is low which can result in gas with a high concentration of impurities, additives, and residues that have settled to the bottom of the tank. Operation under these conditions can cause harm to the heat exchanger system. This normally open switch closes when gas is supplied to gas valve under normal operating pressure.

The closed switch completes control circuit. Should an interruption or reduction in gas supply occur, the gas pressure at switch drops below low gas pressure switch setting, and switch opens. Any interruption in control circuit (in which low gas pressure switch is wired) quickly closes gas valve and stops gas flow to burners. When normal gas pressure is restored, the system must be electrically reset to re-establish normal heating operation.  
Before leaving installation, observe unit operation through two complete heating cycles. During this time, turn gas supply to gas valve off just long enough to completely extinguish burner flame, then instantly restore full gas supply. To ensure proper low gas pressure switch operation, observe that there is no gas supply to burners until after hot surface igniter begins glowing.

LABEL APPLICATION

1. Fill in Conversion Responsibility Label 351331-205 and apply to Blower Access Door of furnace. Date, name, and address of organization making this conversion are required (see Fig. 26).  
2. Attach Conversion Rating Plate Label 351331-201, -204, -206, -207, -208 or -209 to outer door of furnace (see Fig. 5).  
3. Attach Gas Control Conversion Label 351331-202 to gas valve. Do not use 351331-203, which is similar.

CHECKOUT

1. Observe unit operation through two complete heating cycles.  
2. See Sequence of Operation in furnace Installation, Start-Up, and Operating Instructions.  
3. Set room thermostat to desired temperature.

**THIS FURNACE WAS CONVERTED ON \_\_\_\_\_ TO PROPANE GAS**  
(DAY-MONTH-YEAR)  
**KIT NO.: AGAGC9NPS01E**

**BY:**  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
(Name and address of organization making this conversion), which accepts the responsibility that this conversion has been properly made.

**CETTE FOURNAISE A ÉTÉ CONVERTIE AU GAZ PROPANE LE \_\_\_\_\_**  
(JOUR-MOIS-ANNÉE)  
**DE L'ENSEMBLE N°. AGAGC9NPS01E**

**PAR:**  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
(Nom et adresse de l'organisme qui a effectué la conversion), qui accepte l'entière responsabilité de la conversion.




351331-205 REV.-

Fig. 26 – Gas Conversion Responsibility Label

A240208

This control has been converted for use with propane gas.  
Ce contrôle a été converti pour fonctionner au gaz propane.

351331-202 REV.-

This control has been adjusted for use with propane gas.  
Ce contrôle a été réglée pour fonctionner au gaz propane.

351331-203 REV.-

Fig. 27 – Gas Control Conversion Label

A240209