

**58CU0A**

**4–Way Multipoise, Ultra Low NOx  
Communicating, 80% AFUE Gas Furnace  
Input Capacities: 40,000 thru 100,000 Btuh**



# Installation, Start–up, Operating and Service and Maintenance Instructions

|                                                |    |
|------------------------------------------------|----|
| SAFETY CONSIDERATIONS .....                    | 2  |
| INTRODUCTION .....                             | 2  |
| CODES AND STANDARDS .....                      | 4  |
| SAFETY .....                                   | 4  |
| GENERAL INSTALLATION .....                     | 4  |
| COMBUSTION AND VENTILATION AIR .....           | 4  |
| DUCT SYSTEMS .....                             | 4  |
| ACOUSTICAL LINING AND FIBROUS GLASS DUCT ..... | 4  |
| GAS PIPING AND GAS PIPE PRESSURE TESTING ...   | 4  |
| ELECTRICAL CONNECTIONS .....                   | 4  |
| VENTING .....                                  | 4  |
| ELECTROSTATIC DISCHARGE                        |    |
| PRECAUTIONS PROCEDURE .....                    | 4  |
| LOCATION .....                                 | 5  |
| SAFETY CONSIDERATIONS .....                    | 7  |
| AIR FOR COMBUSTION AND VENTILATION .....       | 7  |
| INSTALLATION .....                             | 9  |
| UPFLOW INSTALLATION .....                      | 9  |
| DOWNFLOW INSTALLATION .....                    | 9  |
| HORIZONTAL INSTALLATION .....                  | 10 |
| AIR DUCTS .....                                | 11 |
| GAS PIPING .....                               | 14 |
| ELECTRICAL CONNECTIONS .....                   | 15 |
| 115-V WIRING .....                             | 16 |
| J-BOX RELOCATION .....                         | 16 |
| 24-V WIRING .....                              | 17 |
| ACCESSORIES .....                              | 17 |
| VENTING .....                                  | 20 |
| MASONRY CHIMNEY REQUIREMENTS .....             | 20 |
| APPLIANCE APPLICATION REQUIREMENTS .....       | 21 |
| ADDITIONAL VENTING REQUIREMENTS .....          | 23 |
| SIDEWALL VENTING .....                         | 23 |
| START-UP, ADJUSTMENT, AND SAFETY CHECK .....   | 25 |
| GENERAL .....                                  | 25 |
| START-UP PROCEDURES .....                      | 25 |
| ADJUSTMENTS .....                              | 25 |
| FURNACE SETUP SWITCHES .....                   | 26 |
| AIR DELIVERY - CFM .....                       | 30 |
| COOLING OR CONTINUOUS AIRFLOW .....            | 32 |
| CHECK SAFETY CONTROLS .....                    | 32 |
| CHECKLIST .....                                | 33 |
| SERVICE AND MAINTENANCE PROCEDURES .....       | 35 |
| ELECTRICAL CONTROLS AND WIRING .....           | 35 |
| CARE AND MAINTENANCE .....                     | 36 |

|                                            |    |
|--------------------------------------------|----|
| COMPONENT TEST .....                       | 36 |
| CLEANING AND/OR REPLACING AIR FILTER ..... | 37 |
| BLOWER MOTOR AND WHEEL .....               | 37 |
| FLAME SENSOR CLEANING AND SERVICING .....  | 38 |
| CLEANING HEAT EXCHANGER .....              | 39 |
| SEQUENCE OF OPERATION .....                | 40 |
| WIRING DIAGRAMS .....                      | 43 |
| PARTS REPLACEMENT INFORMATION GUIDE ...    | 44 |



Use of the AHRI Certified TM Mark indicates a manufacturer's participation in the program. For verification of certification for individual products, go to [www.ahridirectory.org](http://www.ahridirectory.org).

**Approved for installations up to 5000 feet (1524 meters)**

**NOTE:** Read the entire instruction manual before starting the installation.

Portions of the text and tables are reprinted from current edition of NFPA 54/ANSI Z223.1©, with permission of National Fire Protection Association, Quincy, MA 02269 and American Gas Association, Washington DC 20001. This reprinted material is not the complete and official position of the NFPA or ANSI on the referenced subject, which is represented only by the standard in its entirety.

## SAFETY CONSIDERATIONS

### WARNING

#### FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in dangerous operation, serious injury, death, or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use could cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified service agency must use only factory-authorized and listed kits or accessories when modifying this product.

### CAUTION

#### FURNACE RELIABILITY HAZARD

Improper installation or misapplication of furnace may require excessive servicing or cause premature component failure.

Application of this furnace should be indoors with special attention given to vent sizing and material, gas input rate, air temperature rise, unit leveling, and unit sizing.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing. Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions include in literature and attached to the unit. Consult local building codes, the current editions of the current edition of National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1 and the current edition of National Electrical Code (NEC) NFPA 70.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words **DANGER**, **WARNING**, and **CAUTION**. These words are used with the safety-alert symbol. **DANGER** identifies the most serious hazards which **will** result in severe personal injury or death. **WARNING** signifies hazards which **could** result in personal injury or death. **CAUTION** is used to identify unsafe practices which **may** result in minor personal injury or product and property damage. **NOTE** is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

### CAUTION

#### CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing furnaces.

1. Use only with type of gas approved for this furnace. Refer to the furnace rating plate.
2. Install this furnace only in a location and position as specified in the "Location" section of these instructions.
3. Provide adequate combustion and ventilation air to the furnace space as specified in "Air for Combustion and Ventilation" section.
4. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in the "Venting" section of these instructions.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in the "Gas Piping" section.
6. Always install furnace to operate within the furnace's intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified in the "Start-Up, Adjustments, and Safety Check" section. See furnace rating plate.
7. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace. See "Air Ducts" section.
8. A gas-fired furnace for installation in a residential garage must be installed as specified in the warning box in the "Location" section (see Fig. 5).
9. The furnace is not permitted to be used for heating of buildings under construction.
10. These Multipoise Gas-Fired Furnaces are CSA (formerly A.G.A. and C.G.A.) design-certified for use with natural gas (see furnace rating plate) and for installation in alcoves, attics, basements, closets, utility rooms, crawlspaces, and garages. The furnace is factory-shipped for use with natural gas and cannot be converted for use with propane.
11. See Fig. 2 for required clearances to combustible construction.
12. Maintain a 1-in. (25 mm) clearance from combustible materials to supply air ductwork for a distance of 36 inches (914 mm) horizontally from the furnace. See current edition of NFPA 90B or local code for further requirements.
13. These furnaces SHALL NOT be installed directly on carpeting, tile, or any other combustible material other than wood flooring. In downflow installations, factory accessory floor base MUST be used when installed on combustible materials and wood flooring. Special base is not required when this furnace is installed on manufacturer's approved coil assembly or a manufacturer's coil casing box is used. See Fig. 2 for clearance to combustible construction.

## INTRODUCTION

This 4-way multipoise Category I fan-assisted furnace is CSA design-certified. A Category I fan-assisted furnace is an appliance equipped with an integral mechanical means to either draw or force products of combustion through the combustion chamber and/or heat exchanger. The furnace is factory-shipped for use with natural gas.

This furnace is not approved for installation in mobile homes, recreational vehicles, or outdoors. The furnace is not permitted to be used for heating of buildings under construction. This furnace is designed for minimum continuous return-air temperature of 60°F (16°C)db or intermittent operation down to 55°F (13°C) db such as when used with a night setback thermostat. Return-air temperature must not exceed 80°F (27°C) db. Failure to follow these return-air temperature limits may affect reliability of heat exchangers, motors, and controls. (See Fig. 3).

For accessory installation details, refer to the applicable instruction literature.

**NOTE:** Remove all shipping brackets and materials before operating the furnace.

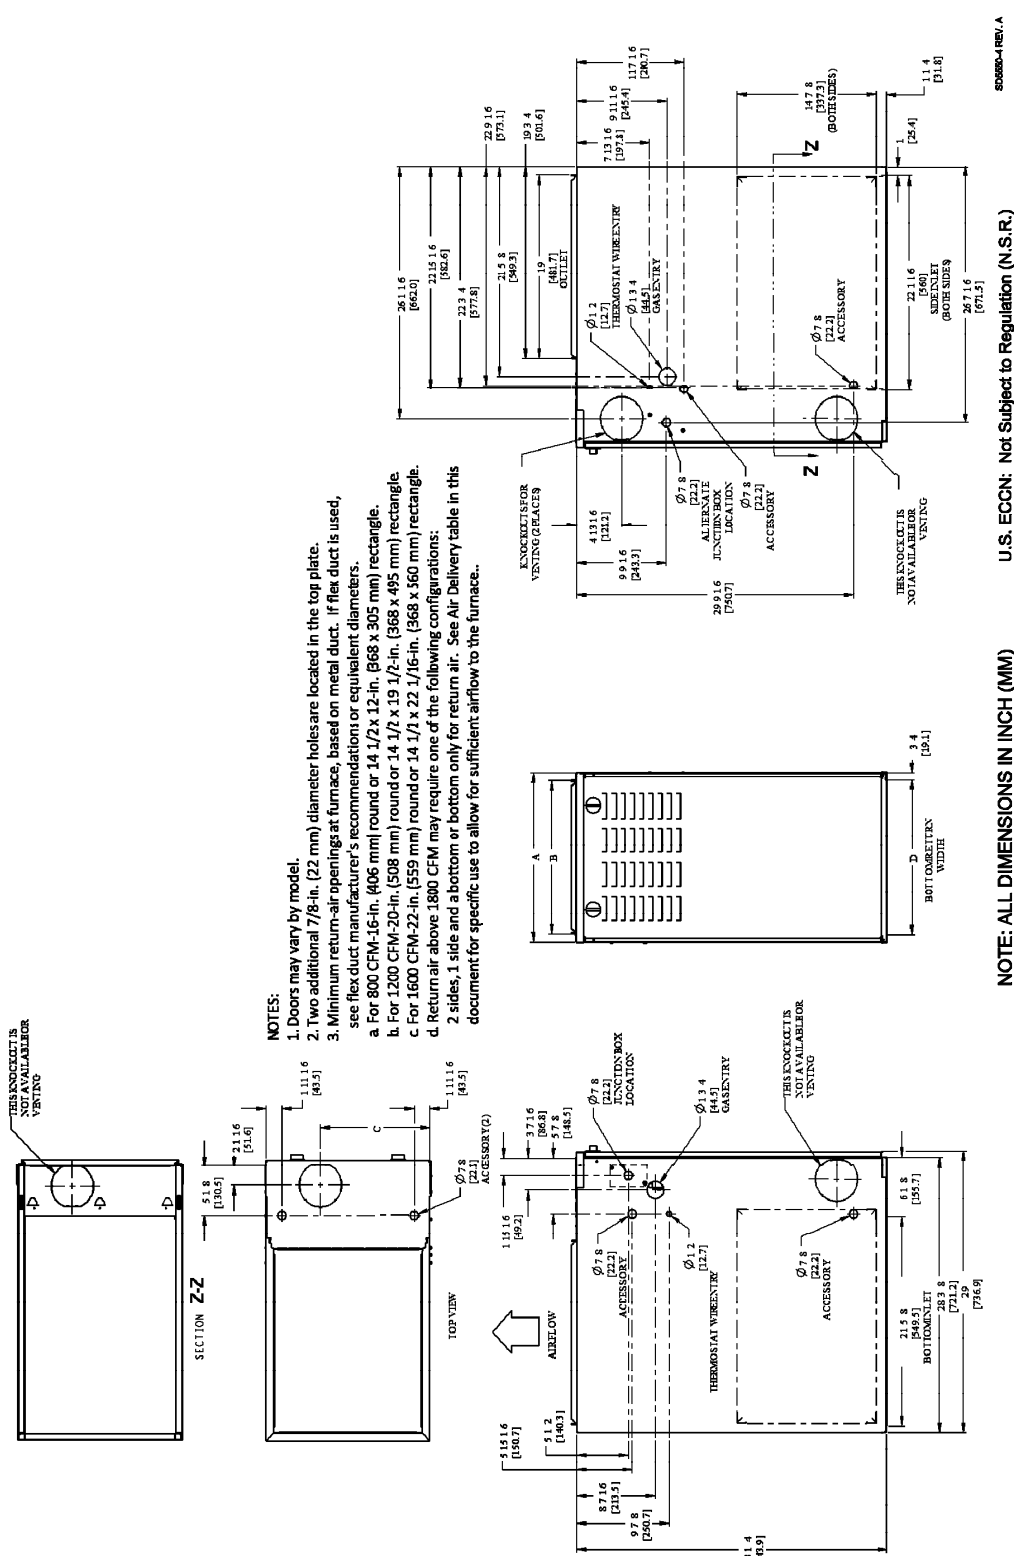


Fig. 1 - Dimensional Drawing


Table 1 – Dimensions

| FURNACE SIZE | A<br>CABINET<br>WIDTH<br>IN. (MM) | B<br>OUTLET<br>WIDTH<br>IN. (MM) | C<br>TOP FLUE<br>COLLAR ONLY<br>IN. (MM) | D<br>BOTTOM<br>INLET WIDTH<br>IN. (MM) | VENT<br>CONNECTION<br>IN. (MM) SIZE | SHIP WT.<br>LB. (KG) | ACCESSORY<br>FILTER<br>MEDIA<br>CABINET SIZE<br>IN. (MM) |
|--------------|-----------------------------------|----------------------------------|------------------------------------------|----------------------------------------|-------------------------------------|----------------------|----------------------------------------------------------|
| 040C17--12   | 17--1/2 (445)                     | 15--7/8 (403)                    | 11--9/16 (294)                           | 16 (406)                               | 4 (102)                             | 119 (54)             | 16 (406)                                                 |
| 060C17--16   | 17--1/2 (445)                     | 15--7/8 (403)                    | 11--9/16 (294)                           | 16 (406)                               | 4 (102)                             | 124 (56)             | 16 (406)                                                 |
| 080C21--20   | 21 (533)                          | 19--3/8 (492)                    | 13--5/16 (338)                           | 19--1/2 (495)                          | 4 (102)                             | 144 (65)             | 20 (508)                                                 |
| 100C21--20   | 21 (533)                          | 19--3/8 (492)                    | 13--5/16 (338)                           | 19--1/2 (495)                          | 4 (102)                             | 154 (70)             | 20 (508)                                                 |

|                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>⚠ WARNING</b><br><b>FIRE, EXPLOSION, ASPHYXIATION HAZARD</b><br>Improper adjustment, alteration, service, maintenance, or installation can cause serious injury or death.<br>Read and follow instructions and precautions in User's Information Manual provided with this furnace. Installation and service must be performed by a qualified service agency or the gas supplier.                                                    | <b>INSTALLATION</b><br><b>MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION</b><br>This forced air furnace is equipped for use with natural gas at altitudes 0 - 5,000 ft (0 - 1524m).<br>This furnace is for indoor installation in a building constructed on site.<br>This furnace may be installed on combustible flooring in a closet or closet at minimum clearance as indicated by the diagram from combustible material.<br>This furnace may be used with a Type B-1 Vent and may be vented in common with other gas fired appliances.                                                   |
| <b>⚠ CAUTION</b><br>Check entire gas assembly for leaks after lighting this appliance.                                                                                                                                                                                                                                                                                                                                                 | <b>MINIMUM INCHES CLEARANCE TO COMBUSTIBLE CONSTRUCTION</b><br><b>DOWNFLOW POSITIONS:</b><br>† Installation on non-combustible floors only.<br>For installation on combustible flooring only when installed on a manufacturer approved special base kit or manufacturer recommended coil assembly.<br>‡ 18 inches front clearance required for above.<br>* Indicates supply or return sides when furnace is in the horizontal position. Line contact only permissible between lines formed by intersections of the Top and two Sides of the furnace jacket, and building joists, studs or framing. |
| <b>INSTALLATION</b><br>1. This furnace must be installed in accordance with the manufacturer's instructions and local codes. In the absence of local codes, follow the National Fuel Gas Code (ANSI Z223.1 / NFPA 54 or CSA B-140.1 Gas Installation Code).<br>2. This furnace must be installed so there are provisions for combustion and ventilation air. See manufacturer's installation information provided with this appliance. | <b>OPERATION</b><br>This furnace is equipped with manual reset limit switch(es) in burner compartment to protect against overhear conditions that can result from inadequate combustion air supply or blocked vent conditions.<br>1. Do not bypass limit switches.<br>2. If a limit opens, call a qualified serviceman to correct the condition and reset limit switch.                                                                                                                                                                                                                            |

A190303

Fig. 2 - Clearances to Combustibles

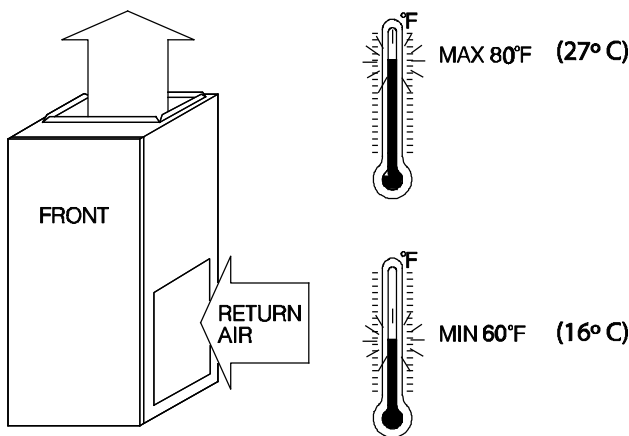

A02055

Fig. 3 - Return Air Temperature

## CODES AND STANDARDS

Follow all national and local codes and standards in addition to these instructions. The installation must comply with regulations of the serving gas supplier, local building, heating, plumbing, and other codes. In absence of local codes, the installation must comply with the national codes listed below and all authorities having jurisdiction.

In the United States, follow all codes and standards for the following:

### Safety

- USA: Current edition of National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1 and the Installation Standards, Warm Air Heating and Air Conditioning Systems ANSI/NFPA 90B

### General Installation

- Current edition of the NFGC and the NFPA 90B. For copies, contact the National Fire Protection Association Inc., Batterymarch Park, Quincy, MA 02269; (www.NFPA.org) or for only the NFGC, contact the American Gas Association, 400 N. Capitol Street, N.W., Washington, DC 20001 (www.AGA.org).

### Combustion and Ventilation Air

- Current edition of NFGC NFPA54/ANSI Z223.1 Section 9.3, Air for Combustion and Ventilation.

## Duct Systems

- Air Conditioning Contractors Association (ACCA) Manual D, Sheet Metal and Air Conditioning Contractors National Association (SMACNA), or American Society of Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE) 2005 Fundamentals Handbook Chapter 35 or 2004 HVAC Systems and Equipment Handbook Chapters 9 and 16.

## Acoustical Lining and Fibrous Glass Duct

- Current edition of SMACNA and NFPA 90B as tested by UL Standard 181 for Class I Rigid Air Ducts

## Gas Piping and Gas Pipe Pressure Testing

- Current edition of NFGC NFPA54/ANSI Z223.1; chapters 5, 6, 7, and 8 and National Plumbing Codes.

## Electrical Connections

- Current edition of National Electrical Code (NEC) NFPA 70.

## Venting

- Current edition of NFGC NFPA 54 / ANSI Z223.1; Chapters 12 and 13.

## ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE

### ⚠ CAUTION

#### FURNACE RELIABILITY HAZARD

Improper installation or service of furnace may cause premature furnace component failure.

Electrostatic discharge can affect electronic components. Follow the Electrostatic Discharge Precautions Procedure listed below during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and hand tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic discharge by putting the furnace, the control, and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. Multiple disconnects maybe required. DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S ELECTROSTATIC CHARGE TO GROUND.
2. Firmly touch the clean, unpainted, metal surface of the furnace chassis which is close to the control. Tools held in a person's hand during grounding will be satisfactorily discharged.
3. After touching the chassis, you may proceed to service the control or connecting wires as long as you do nothing to recharge your body with static electricity (for example; DO NOT move or shuffle your feet, do not touch ungrounded objects, etc).
4. If you touch ungrounded objects (and recharge your body with static electricity), firmly touch a clean, unpainted metal surface of the furnace again before touching control or wires.
5. Use this procedure for installed and uninstalled (ungrounded) furnaces.
6. Before removing a new control from its container, discharge your body's electrostatic charge to ground to protect the control from damage. If the control is to be installed in a furnace, follow items 1 through 4 before bringing the control or yourself in contact with the furnace. Put all used and new controls into containers before touching ungrounded objects.
7. An ESD service kit (available from commercial sources) may also be used to prevent ESD damage.

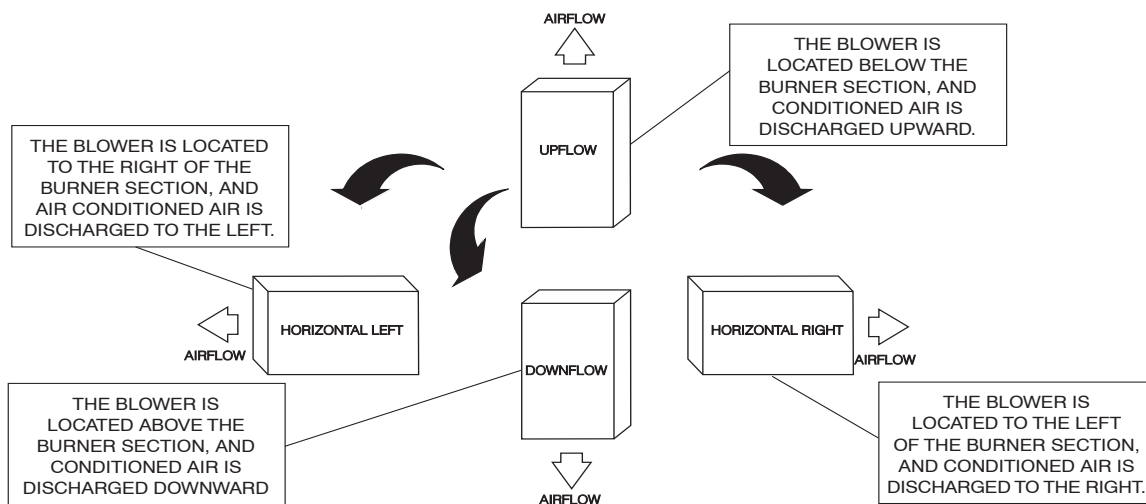


Fig. 4 - Multipoise Orientations

A02097

## LOCATION

### GENERAL

This multipoise furnace is shipped in packaged configuration. Some assembly and modifications are required when used in any of the four applications shown in Fig. 4.

This furnace must:

- be installed so the electrical components are protected from water.
- not be installed directly on any combustible material other than wood flooring for upflow applications. Downflow installations require use of a factory-approved floor base or coil assembly when installed on combustible materials or wood flooring (refer to SAFETY CONSIDERATIONS).
- be located close to the chimney or vent and attached to an air distribution system. Refer to Air Ducts section.
- be provided ample space for servicing and cleaning. Always comply with minimum fire protection clearances shown on the furnace clearance to combustible label.

## ⚠ WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death, and unit component damage.

Corrosive or contaminated air may cause failure of parts containing flue gas, which could leak into the living space. Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements can corrode heat exchangers and shorten furnace life. Air contaminants are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products. Do not install furnace in a corrosive or contaminated atmosphere. Make sure all combustion and circulating air requirements are met, in addition to all local codes and ordinances.

The following types of furnace installations may require OUTDOOR AIR for combustion due to chemical exposures:

- Commercial buildings
- Buildings with indoor pools
- Laundry rooms
- Hobby or craft rooms, and
- Chemical storage areas

If air is exposed to the following substances, it should not be used for combustion air, and outdoor air may be required for combustion:

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing materials


All fuel-burning equipment must be supplied with air for fuel combustion. Sufficient air must be provided to avoid negative pressure in the equipment room or space. A positive seal must be made between the furnace cabinet and the return-air duct to prevent pulling air from the burner area and from draft safeguard opening.

## ⚠ CAUTION

### PERSONAL INJURY AND/OR PROPERTY DAMAGE

Improper use or installation of this furnace may cause premature furnace component failure.

This furnace is not permitted to be used for heating of buildings under construction.

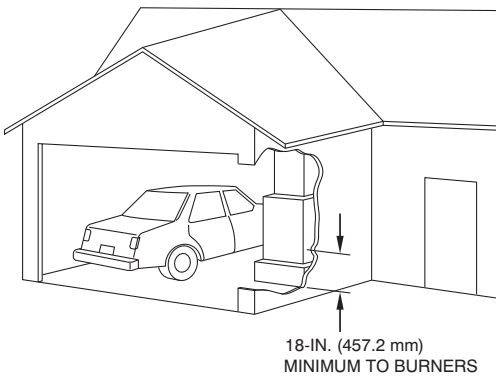

A93044

**Fig. 5 - Installation in a Garage**

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

When the furnace is installed in a residential garage, the burners and ignition sources must be located at least 18 inches above the floor. (See Fig. 5) The furnace must be located or protected to avoid damage by vehicles. When the furnace is installed in a public garage, airplane hangar, or other building having a hazardous atmosphere, the furnace must be installed in accordance with the NFGC.

**Table 2 – Minimum Free Area Required for Each Combustion Air Opening or Duct to Outdoors**

| FURNACE INPUT (BTUH) | TWO HORIZONTAL DUCTS<br>(1 SQ. IN./2,000 BTUH)<br>(1,100 SQ. MM/KW) |                         | SINGLE DUCT OR OPENING<br>(1 SQ. IN./3,000 BTUH)<br>(734 SQ. MM/KW) |                         | TWO OPENINGS OR VERTICAL DUCTS<br>(1 SQ. IN./4,000 BTUH)<br>(550 SQ. MM/KW) |                          |
|----------------------|---------------------------------------------------------------------|-------------------------|---------------------------------------------------------------------|-------------------------|-----------------------------------------------------------------------------|--------------------------|
|                      | Free Area of Opening and Duct<br>Sq. In (Sq. mm)                    | Round Duct In. (mm) Dia | Free Area of Opening and Duct<br>Sq. In (Sq. mm)                    | Round Duct In. (mm) Dia | Free Area of Opening and Duct<br>Sq. In (mm)                                | Round Duct In. (mm) Dia. |
| 40,000               | 20 (12904)                                                          | 5 (127)                 | 14 (8696)                                                           | 5 (127)                 | 10 (6452)                                                                   | 4 (102)                  |
| 60,000               | 30 (19355)                                                          | 6 (152)                 | 20 (13043)                                                          | 5 (127)                 | 15 (9678)                                                                   | 5 (127)                  |
| 80,000               | 40 (25807)                                                          | 7 (178)                 | 27 (17391)                                                          | 6 (152)                 | 20 (12904)                                                                  | 5 (127)                  |
| 100,000              | 50 (32258)                                                          | 8 (203)                 | 34 (21739)                                                          | 7 (178)                 | 25 (16130)                                                                  | 6 (152)                  |

### EXAMPLE: Determining Free Area

| FURNACE |   | WATER HEATER |   | TOTAL INPUT                |                                                        |
|---------|---|--------------|---|----------------------------|--------------------------------------------------------|
| 100,000 | + | 30,000       | = | (130,000 divided by 4,000) | = 32.5 Sq. In. for each two Vertical Ducts or Openings |
| 60,000  | + | 40,000       | = | (100,000 divided by 3,000) | = 33.3 Sq. In. for each Single Duct or Opening         |
| 80,000  | + | 30,000       | = | (110,000 divided by 2,000) | = 55.0 Sq. In. for each two Horizontal Ducts           |

**Table 3 – Minimum Space volumes for 100 % combustion, Ventilation, and Dilution from Indoors**

| ACH* | OTHER THAN FAN-ASSISTED TOTAL<br>(1,000'S BTUH GAS INPUT RATE) |       |        | FAN-ASSISTED TOTAL<br>(1,000'S BTUH GAS INPUT RATE) |       |        |        |
|------|----------------------------------------------------------------|-------|--------|-----------------------------------------------------|-------|--------|--------|
|      | 30                                                             | 40    | 50     | 40                                                  | 60    | 80     | 100    |
|      | Space Volume (ft. <sup>3</sup> )                               |       |        |                                                     |       |        |        |
| 0.60 | 1,050                                                          | 1,400 | 1,750  | 1,000                                               | 1,500 | 2,000  | 3,300  |
| 0.50 | 1,260                                                          | 1,680 | 2,100  | 1,200                                               | 1,800 | 2,400  | 3,960  |
| 0.40 | 1,575                                                          | 2,100 | 2,625  | 1,500                                               | 2,250 | 3,000  | 4,950  |
| 0.30 | 2,100                                                          | 2,800 | 3,500  | 2,000                                               | 3,000 | 4,000  | 6,600  |
| 0.20 | 3,150                                                          | 4,200 | 5,250  | 3,000                                               | 4,500 | 6,000  | 9,900  |
| 0.10 | 6,300                                                          | 8,400 | 10,500 | 6,000                                               | 9,000 | 12,000 | 19,800 |
| 0.00 | NP                                                             | NP    | NP     | NP                                                  | NP    | NP     | NP     |


\*Air Changes/Hour

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Do not install the furnace on its back or hang furnace with control compartment facing downward. Safety control operation will be adversely affected. Never connect return-air ducts to the back of the furnace. (See Fig. 6)

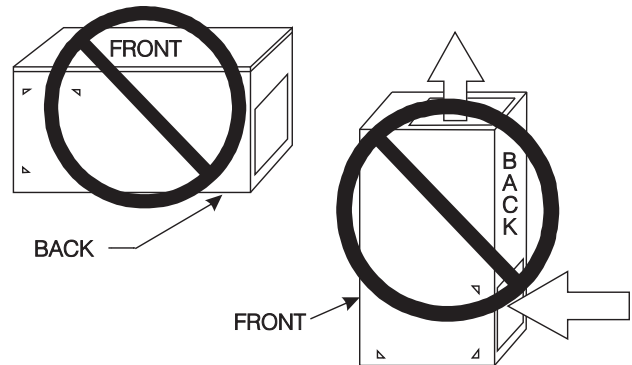

A02054

**Fig. 6 - Prohibit Installation on Back**



## ⚠ CAUTION

### FURNACE CORROSION HAZARD

Failure to follow this caution may result in furnace damage.

Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements can corrode heat exchangers and shorten furnace life. Air contaminants are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products.

### LOCATION RELATIVE TO COOLING EQUIPMENT

The cooling coil must be installed parallel with, or on the downstream side of the unit to avoid condensation in the heat exchangers. When installed parallel with the furnace, dampers or other flow control must prevent chilled air from entering the furnace. If the dampers are manually operated, they must be equipped with means to prevent operation of either unit unless the damper is in the full-heat or full-cool position.

## AIR FOR COMBUSTION AND VENTILATION

Provisions for adequate combustion, ventilation, and dilution air must be provided in accordance with:

- U.S. installations: Section 9.3 of the current edition of NFPA NFPA54/ANSI Z223.1, Air for Combustion and Ventilation, and applicable provisions of the local building codes.

## ⚠ WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

The operation of exhaust fans, kitchen ventilation fans, clothes dryers, attic exhaust fans or fireplaces could create a **NEGATIVE PRESSURE CONDITION** at the furnace. Make-up air **MUST** be provided for the ventilation devices, in addition to that required by the furnace. Refer to Carbon Monoxide Poisoning Hazard warning in venting section of these instructions to determine if an adequate amount of make-up air is available.


The requirements for combustion and ventilation air depend upon whether or not the furnace is located in a space having a volume of at least 50 cubic feet per 1,000 Btuh input rating for all gas appliances installed in the space.

- Spaces having less than 50 cubic feet per 1,000 Btuh require the **OUTDOOR COMBUSTION AIR METHOD**.
- Spaces having at least 50 cubic feet per 1,000 Btuh may use the **INDOOR COMBUSTION AIR, STANDARD or KNOWN AIR INFILTRATION METHOD**.

### Outdoor Combustion Air Method

1. Provide the space with sufficient air for proper combustion, ventilation, and dilution of flue gases using permanent horizontal or vertical duct(s) or opening(s) directly communicating with the outdoors or spaces that freely communicate with the outdoors.
2. Fig. 7 illustrates how to provide **TWO OUTDOOR OPENINGS**, one inlet and one outlet combustion and ventilation air opening, to the outdoors.

- a. One opening **MUST** commence within 12-in. (300 mm) of the ceiling and the second opening **MUST** commence within 12-in. (300 mm) of the floor.
- b. Size openings and ducts per Fig. 7 and Table 2.

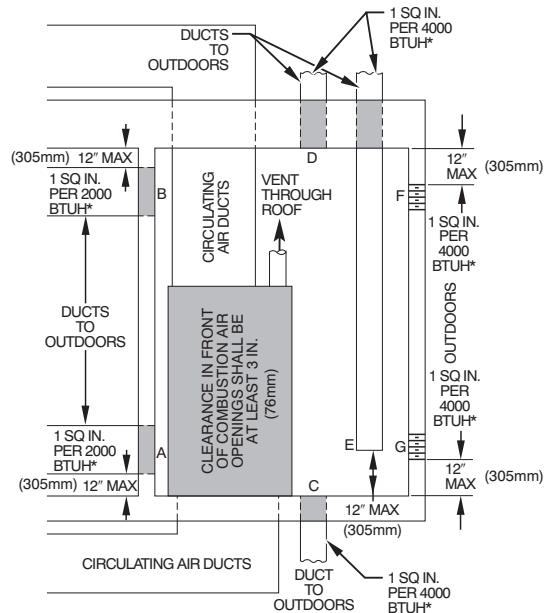

\*Minimum dimensions of 3 in. (76 mm).

NOTE: Use any of the following combinations of openings:  
A&B, C&D, D&E, F&G

**Fig. 7 - Air for Combustion, Ventilation, and Dilution from Outdoors**

- c. **TWO HORIZONTAL DUCTS** require 1 square inch of free area per 2,000 Btuh (1,100 mm<sup>2</sup>/kW) of combined input for all gas appliances in the space per Fig. 7 and Table 2.
  - d. **TWO OPENINGS OR VERTICAL DUCTS** require 1 square inch of free area per 4,000 Btuh (550 mm<sup>2</sup>/kW) for combined input of all gas appliances in the space per Fig. 7 and Table 2.
3. **ONE OUTDOOR OPENING** requires:
- a. 1 square inch of free area per 3,000 Btuh (734 mm<sup>2</sup>/kW) for combined input of all gas appliances in the space per Table 2 and
  - b. Not less than the sum of the areas of all vent connectors in the space.

The opening shall commence within 12" (300 mm) of the ceiling. Appliances in the space shall have clearances of at least 1" (25 mm) from the sides and back and 6" (150 mm) from the front. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces (crawl or attic) that freely communicate with the outdoors.

### Indoor Combustion Air - NFPA & AGA

#### Standard and Known-Air-Infiltration Rate Methods


**Indoor air** is permitted for combustion, ventilation, and dilution, if the **Standard or Known-Air-Infiltration Method** is used.

# ⚠ WARNING

## CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in death and/or personal injury.

Many homes require air to be supplied from outdoors for furnace combustion, ventilation, and dilution of flue gases. The furnace combustion air supply must be provided in accordance with this instruction manual.

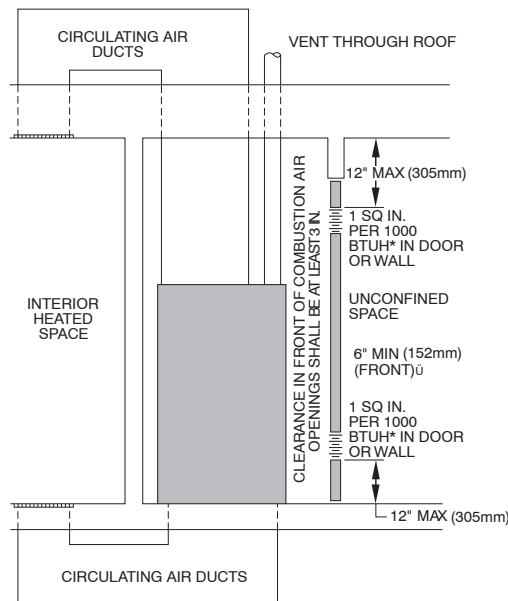

\*Minimum opening size is 100 in.<sup>2</sup> with minimum dimensions of 3 in. (76 mm).  
\*Minimum of 3 in. (76 mm), when type –B1 vent is used.

A03175

**Fig. 8 - Air for Combustion, Ventilation, and Dilution from Indoors**

The **Standard Method**:

1. The space has no less volume than 50 cubic feet per 1,000 Btuh of the maximum input ratings for all gas appliances installed in the space and
2. The air infiltration rate is not known to be less than 0.40 air changes per hour (ACH).

The **Known Air Infiltration Rate Method** shall be used, if the infiltration rate is known to be:

1. Less than 0.40 ACH and
2. Equal to or greater than 0.10 ACH

Infiltration rates greater than 0.60 ACH shall not be used. The minimum required volume of the space varies with the number of ACH and shall be determined per Table 3 or Equations 1 and 2. Determine the minimum required volume for each appliance in the space and add the volumes together to get the total minimum required volume for the space.

**Table 3 - Minimum Space Volumes** were determined by using the following equations from the current edition of National Fuel Gas Code ANSI Z223.1/NFPA 54, 9.3.2.2:

1. For **other than fan-assisted appliances**, such as a draft hood-equipped water heater:

$$\text{Volume}_{\text{Other}} = \frac{21\text{ft}^3}{\text{ACH}} \left( \frac{I_{\text{other}}}{1000 \text{ Btu/hr}} \right)$$

A04002

2. For **fan-assisted appliances** such as this furnace:

$$\text{Volume}_{\text{Fan}} = \frac{15\text{ft}^3}{\text{ACH}} \left( \frac{I_{\text{fan}}}{1000 \text{ Btu/hr}} \right)$$

A004003

If:

$I_{\text{other}}$  = combined input of all other than fan-assisted appliances in Btuh/hr

$I_{\text{fan}}$  = combined input of all fan-assisted appliances in Btuh/hr

ACH = air changes per hour (ACH shall not exceed 0.60)

The following requirements apply to the Standard Method and to the Known Air Infiltration Rate Method.

1. Adjoining rooms can be considered part of a space if:

- a. There are no closeable doors between rooms.
- b. Combining spaces on same floor level. Each opening shall have free area of at least 1 in.<sup>2</sup>/1,000 Btuh (2,000 mm<sup>2</sup>/kW) of the total input rating of all gas appliances in the space, but not less than 100 in.<sup>2</sup> (0.06 m<sup>2</sup>). One opening shall commence within 12" (300 mm) of the ceiling and the second opening shall commence within 12" (300 mm) of the floor. The minimum dimension of air openings shall be at least 3 in. (80 mm). (See Fig. 8)
- c. Combining space on different floor levels. The volumes of spaces on different floor levels shall be considered as communicating spaces if connected by one or more permanent openings in doors or floors having free area of at least 2 in.<sup>2</sup>/1,000 Btuh (4,400 mm<sup>2</sup>/kW) of total input rating of all gas appliances.

2. An attic or crawlspace may be considered a space that freely communicates with the outdoors provided there are adequate permanent ventilation openings directly to outdoors having free area of at least 1-in.<sup>2</sup>/4,000 Btuh of total input rating for all gas appliances in the space.

3. In spaces that use the **Indoor Combustion Air Method**, infiltration should be adequate to provide air for combustion, permanent ventilation and dilution of flue gases. However, in buildings with unusually tight construction, additional air **MUST** be provided using the methods described in the **Outdoor Combustion Air Method** section.

Unusually tight construction is defined as construction with:

- a. Walls and ceilings exposed to the outdoors have a continuous, sealed vapor barrier. Openings are gasketed or sealed and
- b. Doors and openable windows are weatherstripped and
- c. Other openings are caulked or sealed. These include joints around window and door frames, between sole plates and floors, between wall-ceiling joints, between wall panels, at penetrations for plumbing, electrical and gas lines, etc.

### Combination of Indoor and Outdoor Air

1. Indoor openings shall comply with the Indoor Combustion Air Method below and,
2. Outdoor openings shall be located as required in the **Outdoor Combustion Air Method** mentioned previously and,
3. Outdoor openings shall be sized as follows:
  - a. Calculate the Ratio of all Indoor Space volume divided by required volume for **Indoor Combustion Air Method** below.



- Outdoor opening size reduction Factor is 1 minus the Ratio in a. above.
- Minimum size of Outdoor openings shall be the size required in Outdoor Combustion Air Method above multiplied by reduction Factor in b. above. The minimum dimension of air openings shall be not less than 3 in. (80 mm).


## INSTALLATION

### UPFLOW INSTALLATION

#### Bottom Return Air Inlet

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, perform the following:

1. Tilt or raise furnace and remove two screws holding bottom filler panel. (See Fig. 9)

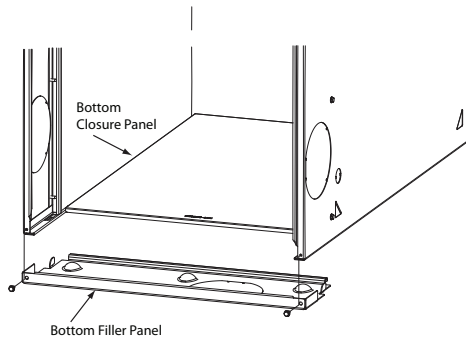

**Fig. 9 - Removing Bottom Closure Panel**

A10273

2. Rotate bottom filler panel downward to release holding tabs.
3. Remove bottom closure panel.
4. Reinstall bottom filler panel and screws.

#### Side Return Air Inlet

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. This panel **MUST** be in place when only side return air is used.

**NOTE:** Side return-air openings can be used in UPFLOW and most HORIZONTAL configurations. Do not use side return-air openings in DOWNFLOW configuration.

#### Leveling Legs (If Desired)


In upflow position with side return inlet(s), leveling legs may be used. (See Fig. 10) Install field-supplied, 5/16 x 1-1/2 in. (8 x 38 mm) (max) corrosion-resistant machine bolts, washers and nuts.

**NOTE:** Bottom closure must be used when leveling legs are used. It may be necessary to remove and reinstall bottom closure panel to install leveling legs. To remove bottom closure panel, see Item 1. in Bottom Return Air Inlet section.

To install leveling legs:

1. Position furnace on its back. Locate and drill a hole in each bottom corner of furnace. (See Fig. 10)
2. For each leg, install nut on bolt and then install bolt and nut in hole. (Install flat washer if desired.)
3. Install another nut on other side of furnace base. (Install flat washer if desired.)

4. Adjust outside nut to provide desired height, and tighten inside nut to secure arrangement.
5. Reinstall bottom closure panel if removed.

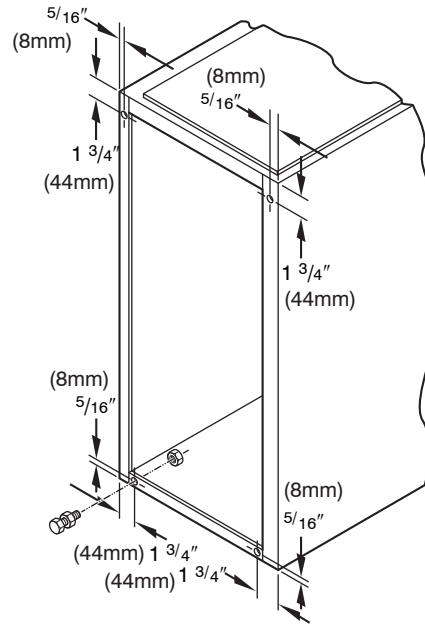

**Fig. 10 - Leveling Legs**

A89014

### DOWNFLOW INSTALLATION

**NOTE:** For downflow applications, this furnace is approved for use on combustible flooring when any one of the following 3 accessories are used:

- Downflow combustible floor subbase
- Manufacturer's approved Cased Coil or Coil Casing

1. Determine application being installed from Table 4.
2. Construct hole in floor per Table 4 and Fig. 11.
3. Construct plenum to dimensions specified in Table 4 and Fig. 11.
4. If downflow subbase is used, install as shown in Fig. 12. If Coil or Coil Casing, install as shown in Fig. 13.


**NOTE:** It is required that the perforated supply-air duct flanges be completely folded over or removed from furnace when installing the furnace on a factory-supplied cased coil or coil box. To remove the supply-air duct flange, use wide duct pliers or hand seamers to bend flange back and forth until it breaks off. Be careful of sharp edges. (See Fig. 14)

#### Bottom Return Air Inlet

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, perform the following:


1. Tilt or raise furnace and remove two screws holding bottom filler panel. (See Fig. 9)
2. Rotate bottom filler panel downward to release holding tabs.
3. Remove bottom closure panel.

4. Reinstall bottom filler panel and screws

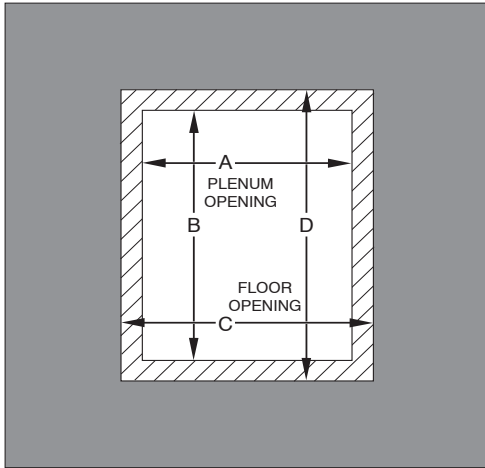


A96283

**Fig. 11 - Floor and Plenum Opening Dimensions**

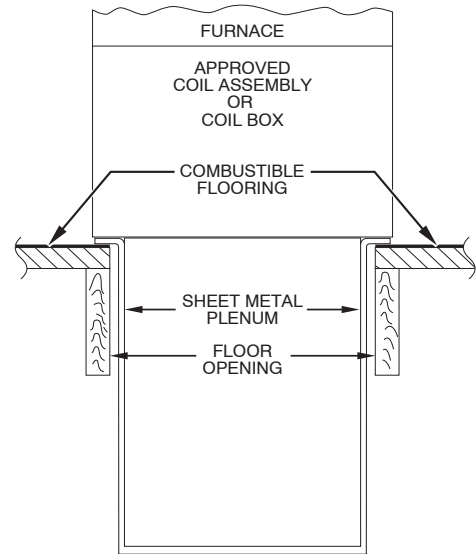

A08556

**Fig. 13 - Furnace, Plenum, and Coil Assembly or Coil Box Installed on a Combustible Floor**

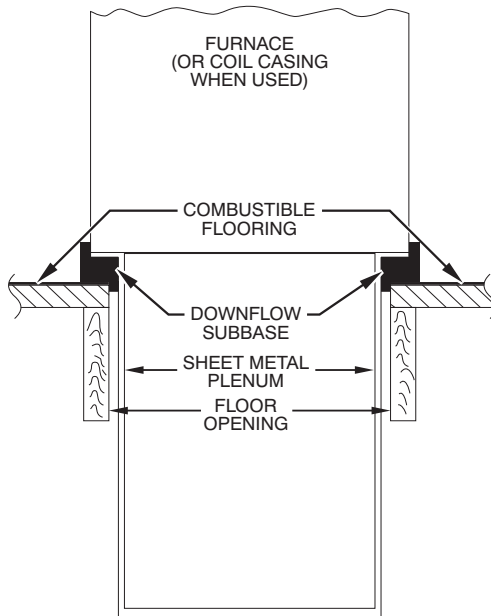

A96285

**Fig. 12 - Furnace, Plenum, and Subbase Installed on a Combustible Floor**

**HORIZONTAL INSTALLATION**

**⚠ WARNING**

**FIRE, EXPLOSION, AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Do not install the furnace on its back or hang furnace with control compartment facing downward. Safety control operation will be adversely affected. Never connect return-air ducts to the back of the furnace.

The furnace can be installed horizontally in an attic or crawl space on either the left-hand (LH) or right-hand (RH) side. The furnace can be hung from floor joists, rafters or trusses or installed on a non-combustible platform, blocks, bricks or pad.

**Table 4 – Opening Dimensions - In. (mm)**

| FURNACE CASING WIDTH | APPLICATION                                                                                         | PLENUM OPENING  |                 | FLOOR OPENING   |                 |
|----------------------|-----------------------------------------------------------------------------------------------------|-----------------|-----------------|-----------------|-----------------|
|                      |                                                                                                     | A               | B               | C               | D               |
| 17-1/2<br>(445)      | Upflow Applications on Combustible or Noncombustible Flooring (subbase not required)                | 16<br>(406)     | 21-5/8<br>(549) | 16-5/8<br>(422) | 22-1/4<br>(565) |
|                      | Downflow Applications on Noncombustible Flooring (subbase not required)                             | 15-7/8<br>(403) | 19<br>(483)     | 16-1/2<br>(419) | 19-5/8<br>(498) |
|                      | Downflow applications on combustible flooring (subbase required)                                    | 15-1/8<br>(384) | 19<br>(483)     | 16-3/4<br>(425) | 20-5/8<br>(600) |
|                      | Downflow Applications on Combustible Flooring with Coil Assembly or coil box (subbase not required) | 15-1/2<br>(394) | 19<br>(483)     | 16-1/2<br>(419) | 20<br>(508)     |
| 21<br>(533)          | Upflow Applications on Combustible or Noncombustible Flooring (subbase not required)                | 19-1/2<br>(495) | 21-5/8<br>(549) | 20-1/8<br>(511) | 22-1/4<br>(565) |
|                      | Downflow Applications on Noncombustible Flooring (subbase not required)                             | 19-3/8<br>(492) | 19<br>(483)     | 20<br>(508)     | 19-5/8<br>(498) |
|                      | Downflow applications on combustible flooring subbase required)                                     | 18-5/8<br>(473) | 19<br>(483)     | 20-1/4<br>(514) | 20-5/8<br>(600) |
|                      | Downflow Applications on Combustible Flooring with Coil Assembly or coil box (subbase not required) | 19<br>(483)     | 19<br>(483)     | 20<br>(508)     | 20<br>(508)     |

### **Suspended Furnace Support**

The furnace may be supported under each end with threaded rod, angle iron or metal plumber's strap as shown. (See Fig. 15 and 16) Secure angle iron to bottom of furnace as shown. Heavy-gauge sheet metal straps (plumber's straps) may be used to suspend the furnace from each bottom corner. To prevent screws from pulling out, use 2 #8 x 3/4-in. (19 mm) screws into the side and 2 #8 x 3/4-in. (19 mm) screws in the bottom of the furnace casing for each strap. (See Fig. 15 and 16) If the screws are attached to ONLY the furnace sides and not the bottom, the straps must be vertical against the furnace sides and not pull away from the furnace sides, so that the strap attachment screws are not in tension (are loaded in shear) for reliable support.

### **Platform Furnace Support**

Construct working platform at location where all required furnace clearances are met. (See Fig. 2 and 17) For furnaces with 1-in. (25 mm) clearance requirement on side, set furnace on noncombustible blocks, bricks or angle iron. For crawl space installations, if the furnace is not suspended from the floor joists, the ground underneath furnace must be level and the furnace set on blocks or bricks.

### **Roll-Out Protection**

Provide a minimum 17-3/4 in. x 22 in. (451 mm x 559 mm) piece of sheet metal for flame roll-out protection in front of burner area for furnaces closer than 12 inches (305 mm) above the combustible deck or suspended furnaces closer than 12 inches (305 mm) to joists. The sheet metal MUST extend underneath the furnace casing by 1 in. (25 mm) with the door removed.

The bottom closure panel on furnaces of widths 17-1/2 in. (445 mm) and larger may be used for flame roll-out protection when bottom of furnace is used for return air connection. See Fig. 17 for proper orientation of roll-out shield.

### **Bottom Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, perform the following:

1. Tilt or raise furnace and remove two screws holding bottom filler panel. (See Fig. 9)
2. Rotate bottom filler panel downward to release holding tabs.
3. Remove bottom closure panel.
4. Reinstall bottom filler panel and screws. Side Return Air Inlet

### **Side Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. This panel MUST be in place when side return air inlet(s) is used without a bottom return air inlet.

### **FILTER ARRANGEMENT**

## **⚠ WARNING**

### **CARBON MONOXIDE AND POISONING HAZARD**

Failure to follow this warning could result in personal injury, or death.

Never operate a furnace without a filter or with filter access door removed.

There are no provisions for an internal filter rack in these furnaces.

A field-supplied accessory external filter is required.

Refer to the instructions supplied with the external filter rack for assembly and installation options.

### **AIR DUCTS**

#### **General Requirements**

The duct system should be designed and sized according to accepted national standards such as those published by: Air Conditioning Contractors Association (ACCA), Sheet Metal and Air Conditioning Contractors National Association (SMACNA) or American Society of Heating, Refrigerating and Air Conditioning Engineers (ASHRAE) or consult The Air Systems Design Guidelines reference tables available from your local distributor. The duct system should be sized to handle the required system design CFM at the design external static pressure. The furnace airflow rates are provided in Table 11 - AIR DELIVERY-CFM (with filter).

When a furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

Secure ductwork with proper fasteners for type of ductwork used. Seal supply- and return-duct connections to furnace with code approved tape or duct sealer.

**NOTE:** Flexible connections should be used between ductwork and furnace to prevent transmission of vibration. Ductwork passing through unconditioned space should be insulated and sealed to enhance system performance. When air conditioning is used, a vapor barrier is recommended.

Maintain a 1-in. (25 mm) clearance from combustible materials to supply air ductwork for a distance of 36 in. (914 mm) horizontally from the furnace. See NFPA 90B or local code for further requirements.

#### **Ductwork Acoustical Treatment**

**NOTE:** Metal duct systems that do not have a 90 degree elbow and 10 ft. (3 M) of main duct to the first branch take-off may require internal acoustical lining. As an alternative, fibrous ductwork may be used if constructed and installed in accordance with the latest edition of SMACNA construction standard on fibrous glass ducts. Both acoustical lining and fibrous ductwork shall comply with NFPA 90B as tested by UL Standard 181 for Class 1 Rigid air ducts.

#### **Supply Air Connections**

For a furnace not equipped with a cooling coil, the outlet duct shall be provided with a removable access panel. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the airstream. The cover attachment shall prevent leaks.

#### **Upflow and Horizontal Furnaces**


Connect supply-air duct to flanges on furnace supply-air outlet. Bend flange upward to 90° with wide duct pliers. (See Fig. 14) The supply-air duct must be connected to ONLY the furnace supply-outlet-air duct flanges or air conditioning coil casing (when used). DO NOT cut main furnace casing side to attach supply air duct, humidifier, or other accessories. All accessories MUST be connected to duct external to furnace main casing.

**NOTE:** For horizontal applications, the top-most flange may be bent past 90 degrees to allow the evaporator coil to hang on the

flange temporarily while the remaining attachment and sealing of the coil are performed.


### **Downflow Furnaces**

Connect supply-air duct to supply-air outlet on furnace. Bend flange inward past 90° with wide duct pliers. (See Fig. 14) The supply-air duct must be connected to **ONLY** the furnace supply outlet or air conditioning coil casing (when used). When installed on combustible material, supply-air duct must be connected to **ONLY** the factory-approved accessory subbase or a factory-approved air conditioning coil casing. **DO NOT** cut main furnace casing to attach supply side air duct, humidifier, or other accessories. All accessories **MUST** be connected to duct external to furnace casing.

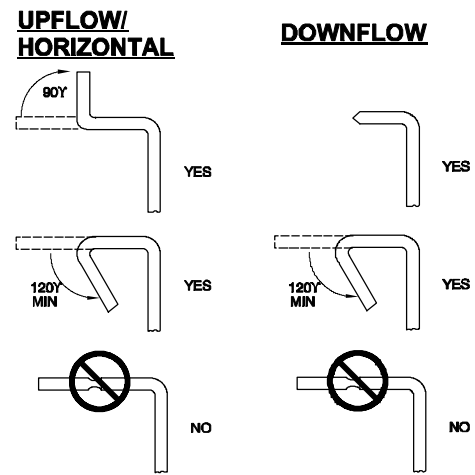


**Fig. 14 - Duct Flanges**

A190346

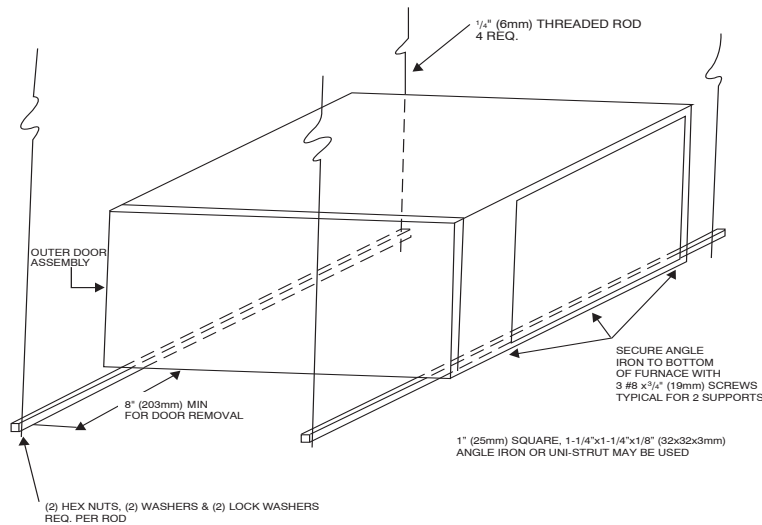

**Fig. 15 - Horizontal Unit Suspension**

A10130

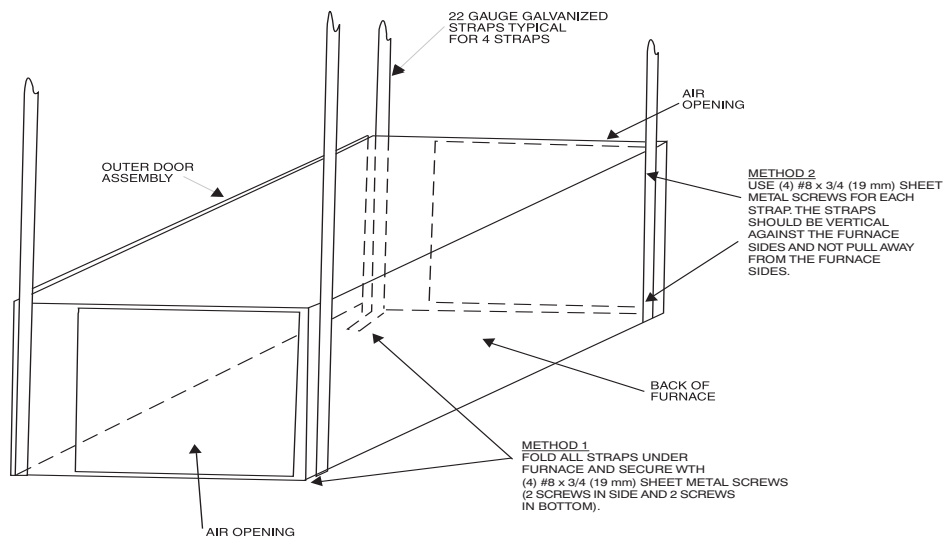

**Fig. 16 - Horizontal Suspension with Straps**

A10131

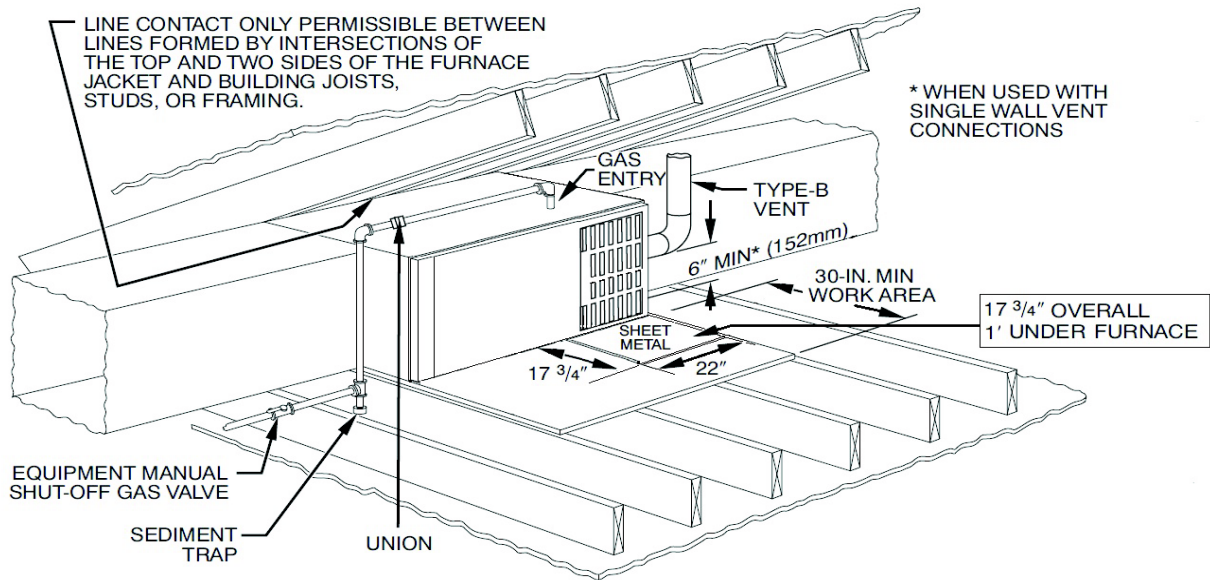


Fig. 17 - Typical Attic Installation

A180240

### Return Air Connections

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could cause personal injury, death and/or property damage.

Never connect return-air ducts to the back of the furnace. Follow instructions below

### Downflow Furnaces

The return-air duct must be connected to return-air opening (bottom inlet) as shown in Fig. 19. DO NOT cut into casing sides (left or right). Side opening is permitted for only upflow and most horizontal furnaces. (See Fig. 19) Bypass humidifier connections should be made at ductwork or coil casing sides exterior to furnace.

### Upflow and Horizontal Furnaces

The return-air duct must be connected to bottom, sides (left or right), or a combination of bottom and side(s) of main furnace casing as shown in Fig. 18 and 20. Bypass humidifier may be attached into unused return air side of the furnace casing. (See Fig. 18 and 20)


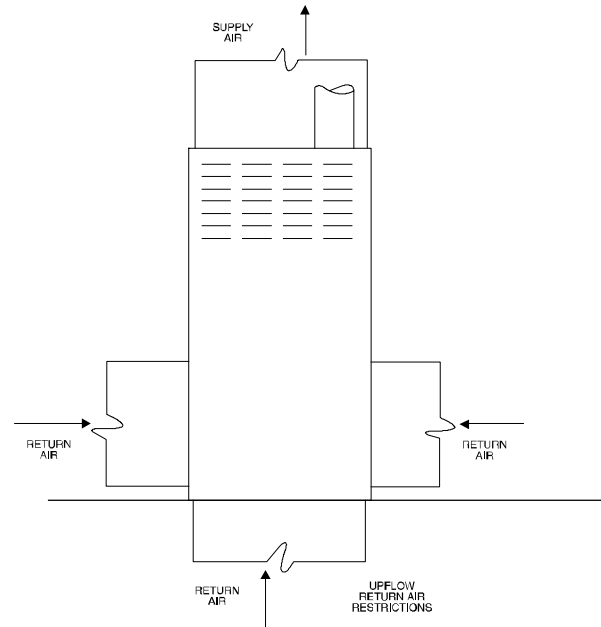



Fig. 18 - Upflow Return Air Configurations and Restrictions

A190364

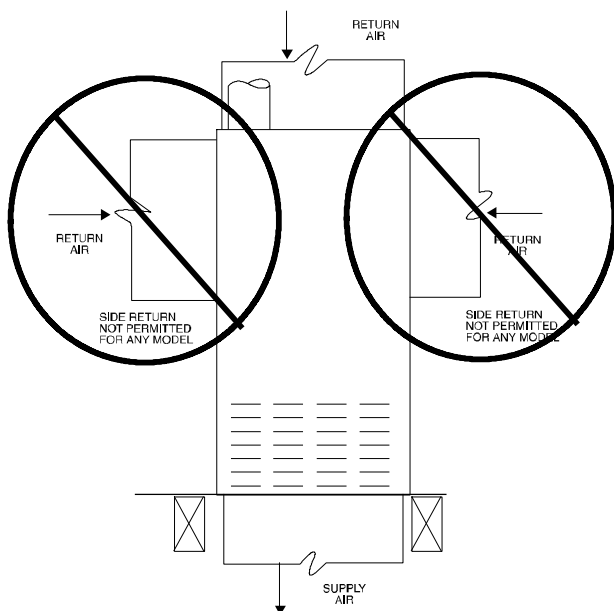

A190365

**Fig. 19 - Downflow Return Air Configurations and Restrictions**

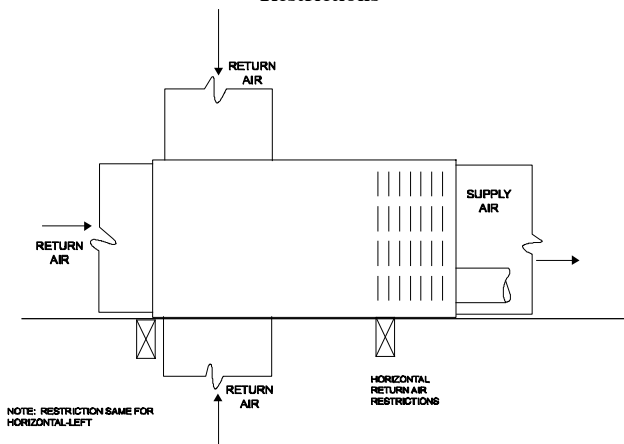

A190366

**Fig. 20 - Horizontal Return Air Configurations and Restrictions**

## GAS PIPING

### ⚠ WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections.

### ⚠ WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Use proper length of pipe to avoid stress on gas control assembly and a gas leak.

### ⚠ CAUTION

#### FURNACE OVERHEAT HAZARD

Failure to follow this caution may result in property damage.

Connect gas pipe to gas valve using a backup wrench to avoid damaging gas controls and burner misalignment.

### ⚠ WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

If local codes allow the use of a flexible gas appliance connector, always use a new listed connector. Do not use a connector which has previously served another gas appliance. Black iron pipe shall be installed at the furnace gas control valve and extend a minimum of 2 in.(51 mm) outside the furnace.

Gas piping must be installed in accordance with national and local codes. Refer to current edition of NFPG.

Installations must be made in accordance with all authorities having jurisdiction. If possible, the gas supply line should be a separate line running directly from meter to furnace.

**NOTE:** In the state of Massachusetts:

1. Gas supply connections **MUST** be performed by a licensed plumber or gas fitter.
2. When flexible connectors are used, the maximum length shall not exceed 36 inches (915 mm).
3. When lever handle type manual equipment shutoff valves are used, they shall be T-handle valves.
4. The use of copper tubing for gas piping is **NOT** approved by the state of Massachusetts.

Refer to Table 5 for recommended gas pipe sizing. Risers must be used to connect to furnace and to meter. Support all gas piping with appropriate straps, hangers, etc. Use a minimum of 1 hanger every 6 ft. (2 M). Joint compound (pipe dope) should be applied sparingly and only to male threads of joints. Pipe dope must be resistant to the action of propane gas.

An accessible manual equipment shutoff valve **MUST** be installed external to furnace casing and within 6 ft. (2 M) of furnace. A 1/8-in. (3 mm) NPT plugged tapping, accessible for test gauge connection, **MUST** be installed immediately upstream of gas supply connection to furnace and downstream of manual equipment shutoff valve.

**NOTE:** The furnace gas control valve inlet pressure tap connection is suitable to use as test gauge connection providing test pressure **DOES NOT** exceed maximum 0.5 psig (14-In. W.C.) stated on gas control valve. (See Fig. 39)

Install a sediment trap in riser leading to furnace as shown in Fig. 21. Connect a capped nipple into lower end of tee. Capped nipple should extend below level of furnace gas controls. Place a ground joint union between furnace gas control valve and exterior manual equipment gas shutoff valve. A 1/8-in. (3 mm) NPT plugged tapping, accessible for test gauge connection, **MUST** be installed immediately upstream of gas supply connection to furnace and downstream of manual equipment shutoff valve.

Piping should be pressure and leak tested in accordance with NFPG in the United States, local, and national plumbing and gas codes before the furnace has been connected. After all connections have been made, purge lines and check for leakage at furnace prior to operating furnace.



If pressure exceeds 0.5 psig (14-In. W.C.), gas supply pipe must be disconnected from furnace and capped before and during supply pipe pressure test. If test pressure is equal to or less than 0.5 psig (14-In. W.C.), turn off electric shutoff switch located on furnace gas control valve and accessible manual equipment shutoff valve before and during supply pipe pressure test. After all connections have been made, purge lines and check for leakage at furnace prior to operating furnace.

The gas supply pressure shall be within the maximum and minimum inlet supply pressures marked on the rating plate with the furnace burners ON and OFF.

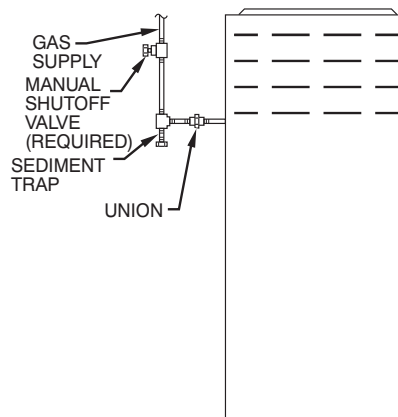


Fig. 21 - Typical Gas Pipe Arrangement

A02035

Table 5 – Maximum Capacity of Pipe\*

| NOMINAL IRON PIPE<br>SIZE IN. (mm) | INTERNAL DIAMETER<br>In. (mm) | LENGTH OF PIPE – FT. (M) |            |            |           |           |
|------------------------------------|-------------------------------|--------------------------|------------|------------|-----------|-----------|
|                                    |                               | 10                       | 20         | 30         | 40        | 50        |
| 1/2 (13)                           | 0.622 (16)                    | 175 (53)                 | 120 (37)   | 97 (30)    | 82 (25)   | 73 (22)   |
| 3/4 (19)                           | 0.824 (21)                    | 360 (110)                | 250 (76)   | 200 (61)   | 170 (52)  | 151 (46)  |
| 1 (25)                             | 1.049 (27)                    | 680 (207)                | 465 (142)  | 375 (114)  | 320 (98)  | 285 (87)  |
| 1-1/4 (32)                         | 1.380 (35)                    | 1400 (427)               | 950 (290)  | 770 (235)  | 660 (201) | 580 (177) |
| 1-1/2 (38)                         | 1.610 (41)                    | 2100 (640)               | 1460 (445) | 1180 (360) | 990 (301) | 900 (274) |

\* Cubic ft. of natural gas per hr for gas pressures of 0.5 psig (14-In. W.C.) or less and a pressure drop of 0.5-In. W.C. (based on a 0.60 specific gravity gas). Ref: Chapter 6 current edition of ANSI Z223/NFPA 54.

Table 6 – Electrical Data

| Unit Size  | Volts-Hertz-Phase | Operating Voltage* Range |         | Maximum Unit Amps | Unit Ampacity# | Minimum Wire Size AWG | Maximum Wire Length‡ ft | Maximum Fuse or CKT BKR† Amps |
|------------|-------------------|--------------------------|---------|-------------------|----------------|-----------------------|-------------------------|-------------------------------|
|            |                   | Maximum                  | Minimum |                   |                |                       |                         |                               |
| 040C17--12 | 115-60-1          | 127                      | 104     | 11.4              | 12.6           | 14                    | 29                      | 15                            |
| 060C17--16 | 115-60-1          | 127                      | 104     | 11.4              | 12.6           | 14                    | 29                      | 15                            |
| 080C21--20 | 115-60-1          | 127                      | 104     | 17.8              | 18.9           | 12                    | 30                      | 20                            |
| 100C21--20 | 115-60-1          | 127                      | 104     | 17.8              | 18.9           | 12                    | 30                      | 20                            |

\* Permissible limits of the voltage range at which the unit operates satisfactorily.

# Unit ampacity = 125 percent of largest operating component's full load amps plus 100 percent of all other potential operating components' (EAC, humidifier, etc.) full load amps.

† Time-delay type is recommended.

‡ Length shown is as measured one way along wire path between unit and service panel for maximum 2 percent voltage drop.

## ELECTRICAL CONNECTIONS

### ⚠ WARNING

#### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings could result in dangerous operation, serious injury, death or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnecting. Reconnect wires correctly.
- Verify proper operation after servicing.

### ⚠ WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Blower access panel door switch opens 115-v power to control. No component operation can occur. Do not bypass or close switch with panel removed.

See Fig. 24 for field wiring diagram showing typical field 115-v wiring. Check all factory and field electrical connections for tightness.

Field-supplied wiring shall conform with the limitations of 63°F (35°C) rise.

## WARNING

### ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

The cabinet **MUST** have an uninterrupted or unbroken ground according to current edition of NEC NFPA 70 or local codes to minimize personal injury if an electrical fault should occur. This may consist of electrical wire, conduit approved for electrical ground or a listed, grounded power cord (where permitted by local code) when installed in accordance with existing electrical codes. Refer to the power cord manufacturer's ratings for proper wire gauge. Do not use gas piping as an electrical ground.

## CAUTION

### FURNACE MAY NOT OPERATE

Failure to follow this caution may result in intermittent furnace operation.

Furnace control must be grounded for proper operation or else control will lock out. Control must remain grounded through green/yellow wire routed to gas valve and gas valve mounting bracket screw.

### 115-V WIRING

Verify that the voltage, frequency, and phase correspond to that specified on unit rating plate. Also, check to be sure that service provided by utility is sufficient to handle load imposed by this equipment. Refer to rating plate or Table 6 for equipment electrical specifications.

Make all electrical connections in accordance with current edition of National Electrical Code (NEC) NFPA 70 and any local codes or ordinances that might apply.

## WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire.

Use a separate, fused branch electrical circuit with a properly sized fuse or circuit breaker for this furnace. See Table 6 for wire size and fuse specifications. A readily accessible means of electrical disconnect must be located within sight of the furnace.

**NOTE:** Proper polarity must be maintained for 115-v wiring. If polarity is incorrect, control LED status indicator light will rapidly flash RED and furnace will NOT operate.

### J-BOX RELOCATION

**NOTE:** If factory location of J-Box is acceptable, go to next section (ELECTRICAL CONNECTION TO J-BOX).

1. Remove and save two screws holding J-Box.

**NOTE:** The J-Box cover need not be removed from the J-Box in order to move the J-Box. Do NOT remove green ground screw inside J-Box.

2. Cut wire tie on loop in furnace wires attached to J-box.
3. Move J-Box to desired location.
4. Fasten J-Box to casing with two screws removed in Step 1.

5. Route J-Box wires within furnace away from sharp edges, rotating parts and hot surfaces.

### ELECTRICAL CONNECTION TO J-BOX

#### Electrical Box on Furnace Casing Side

## WARNING

### FIRE OR ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

If field-supplied manual disconnect switch is to be mounted on furnace casing side, select a location where a drill or fastener cannot damage electrical or gas components.

1. Select and remove a hole knockout in the casing where the electrical box is to be installed.

**NOTE:** Check that duct on side of furnace will not interfere with installed electrical box.

2. Remove the desired electrical box hole knockout and position the hole in the electrical box over the hole in the furnace casing.
3. Fasten the electrical box to casing by driving two field supplied screws from inside electrical box into casing steel.
4. Remove and save two screws holding J-Box.
5. Pull furnace power wires out of 1/2-in. (12 mm) diameter hole in J-Box. Do not loosen wires from strain-relief wire-tie on outside of J-Box.
6. Route furnace power wires through holes in casing and electrical box and into electrical box (see Fig. 22)
7. Pull field power wires into electrical box.
8. Remove cover from furnace J-Box.
9. Route field ground wire through holes in electrical box and casing, and into furnace J-Box.
10. Reattach furnace J-Box to furnace casing with screws removed in Step 4.
11. Secure field ground wire to J-Box green ground screw.
12. Complete electrical box wiring and installation. Connect line voltage leads as shown in Fig. 24. Use best practices (NEC in U.S. for wire bushings, strain relief, etc.)
13. Reinstall cover to J-Box. Do not pinch wires between cover and bracket.


### POWER CORD INSTALLATION IN FURNACE J-BOX

**NOTE:** Power cords must be able to handle the electrical requirements listed in Table 6. Refer to power cord manufacturer's listings.

1. Remove cover from J-Box.
2. Route listed power cord through 7/8-in. (22 mm) diameter hole in J-Box.
3. Secure power cord to J-Box bracket with a strain relief bushing or a connector approved for the type of cord used.
4. Secure field ground wire to green ground screw on J-Box bracket.
5. Connect line voltage leads as shown in Fig. 24.
6. Reinstall cover to J-Box. Do not pinch wires between cover and bracket.

### BX CABLE INSTALLATION IN FURNACE J-BOX

1. Remove cover from J-Box.
2. Route BX cable into 7/8-inch diameter hole in J-Box.
3. Secure BX cable to J-Box bracket with connectors approved for the type of cable used.
4. Secure field ground wire to green ground screw on J-Box bracket.
5. Connect line voltage leads as shown in Fig. 24.
6. Reinstall cover to J-Box. Do not pinch wires between cover and bracket.

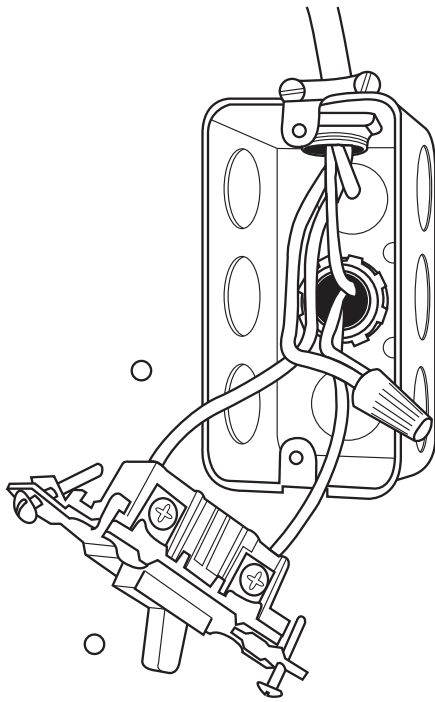

A10141

**Fig. 22 - Field-Supplied Electrical Box on Furnace Casing**

### 24-V WIRING

Make field 24-v connections at the 24-v terminal strip. (See Fig. 24)

Connect terminal Y as shown in Fig. 45 for proper cooling

operation. Use only AWG No. 18, color-coded, copper thermostat wire.

The 24-v circuit contains an automotive-type, 3-amp. fuse located on the control. Any direct shorts during installation, service, or maintenance could cause this fuse to blow. If fuse replacement is required, use **ONLY** a 3-amp. fuse of identical size.

### ACCESSORIES

#### 1. Electronic Air Cleaner (EAC)


Connect an accessory Electronic Air Cleaner (if used) using 1/4-in female quick connect terminals to the two male 1/4-in quick-connect terminals on the control board marked EAC-1 and EAC-2. The terminals are rated for 115VAC, 1.0 amps maximum and are energized during blower motor operation. (See Fig. 23)

#### 2. Humidifier (HUM)

The HUM terminal is a 24 VAC output, energized when the blower is operating during a call for heat.


Connect an accessory 24 VAC, 0.5 amp. maximum humidifier (if used) to the 1/4-in male quick-connect HUM terminal and COM-24V screw terminal on the control board thermostat strip. (See Fig. 23)

**NOTE:** DO NOT connect furnace control HUM terminal to HUM (humidifier) terminal on Thermidistat™, Zone Controller or similar device. See Thermidistat, Zone Controller, thermostat, or controller manufacturer's instructions for proper connection.

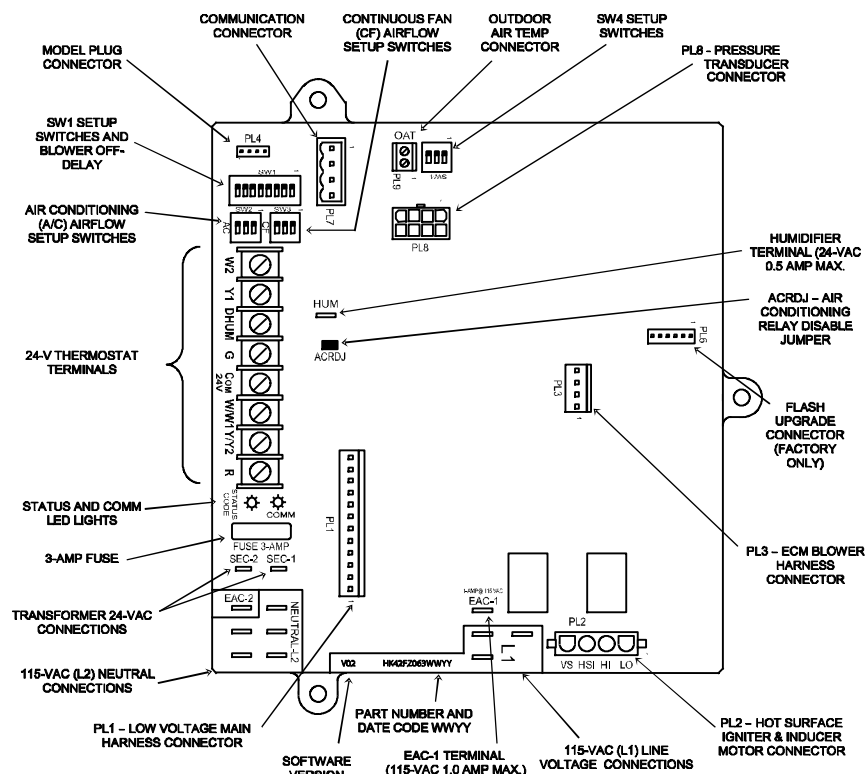


**Fig. 23 - Furnace Control**

A190350

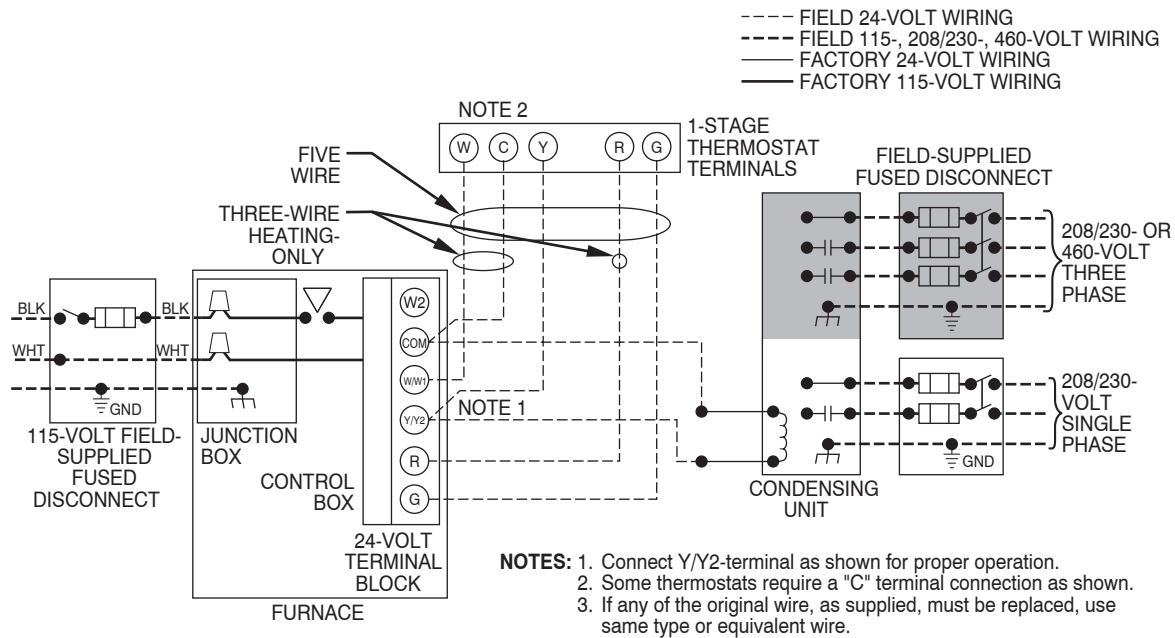


A95236

**Fig. 24 - Heating and Cooling Application Wiring Diagram**

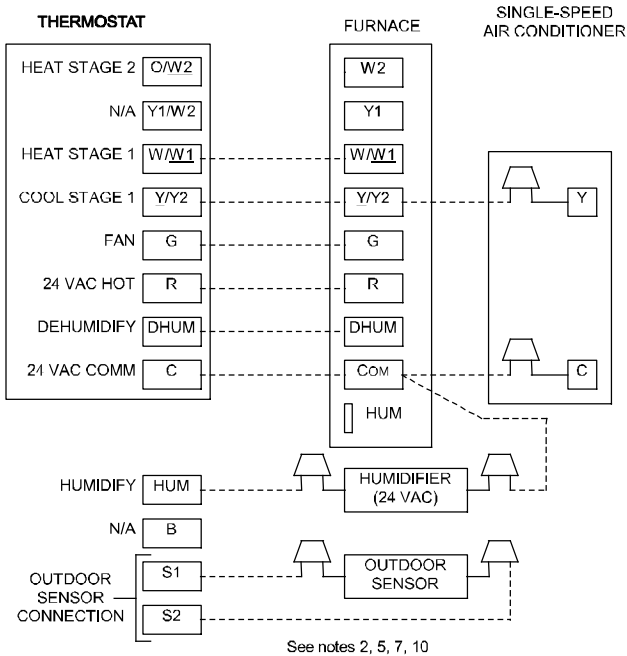


A190367

**Fig. 25 - 1-Speed Variable Furnace with Single-Speed Air Conditioner**

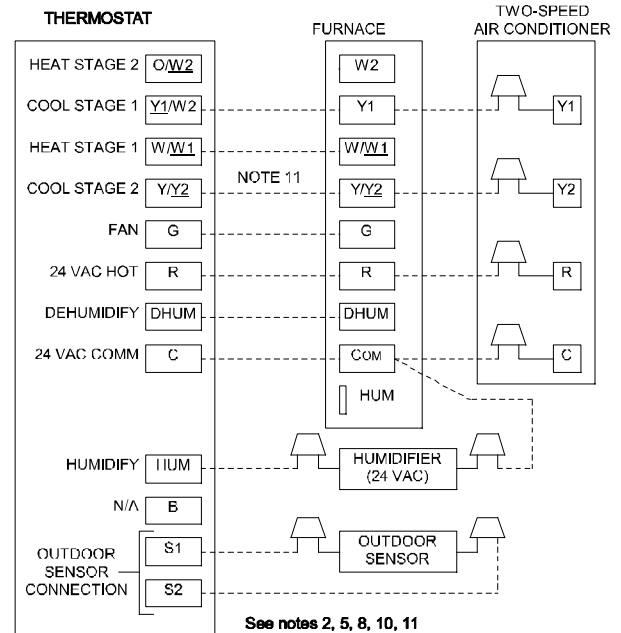


A190369

**Fig. 26 - 1-Speed Variable Furnace with Two-Speed Air Conditioner**

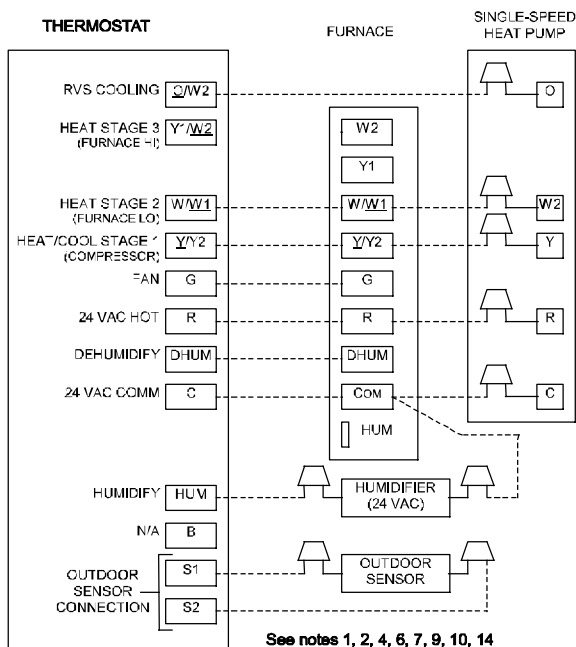


**Fig. 27 - 1-Speed Variable Furnace with Single-Speed Heat Pump (Dual Fuel)**

A190368

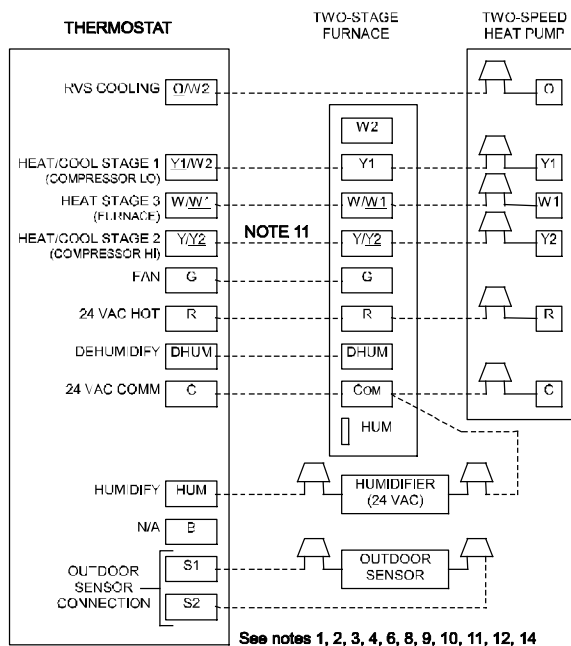


**Fig. 28 - 1-Speed Variable Furnace with Two-Speed Heat Pump (Dual Fuel)**

A190370

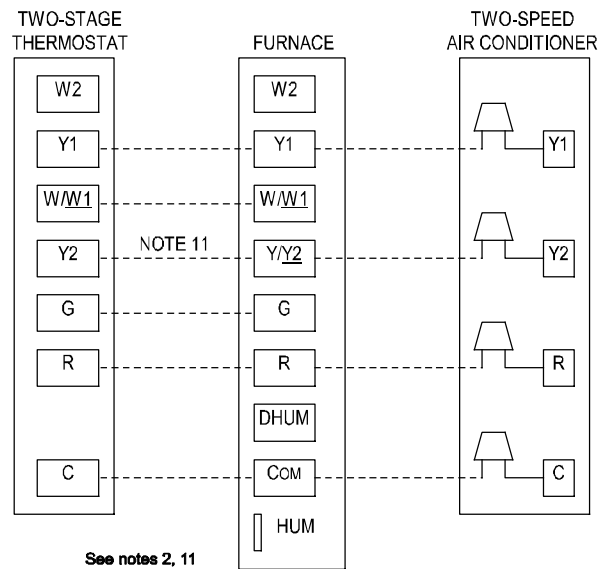

**Fig. 29 - Two-Stage Thermostat with 1-Speed Variable Furnace and Two-Speed Air Conditioner**

A190371

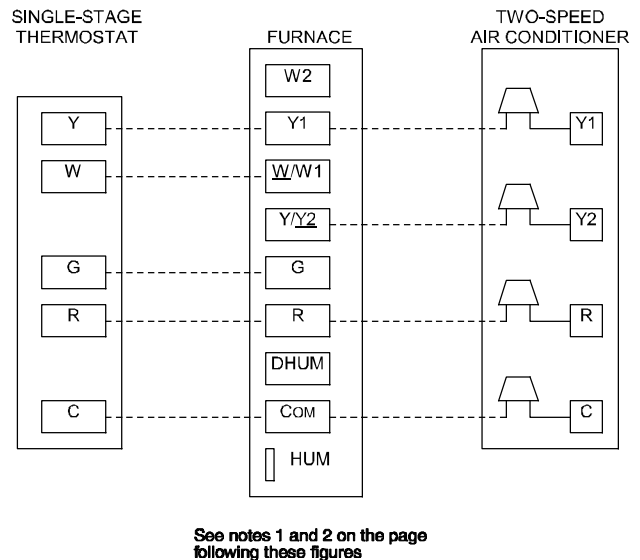

**Fig. 30 - Single-Stage Thermostat with 1-Speed Variable Furnace and Two-Speed Air Conditioner**

A190173

## NOTES FOR FIGURES 25 - 30

- Heat pump MUST have a high pressure switch for dual fuel applications.
- Refer to outdoor equipment Installation Instructions for additional information and setup procedure.
- If the heat pump date code is 1501E or earlier, select the "ZONE" position on the two-speed heat pump control. Heat pumps having date codes 1601E and later do not have or require a "ZONE" selection.
- Outdoor Air Temperature Sensor must be attached in all dual fuel applications.
- Dip switch No. 1 on Thermostat should be set in OFF position for air conditioner installations. This is factory default.
- Dip switch No. 1 on Thermostat should be set in ON position for heat pump installations.
- Dip switch No. 2 on Thermostat should be set in OFF position for single-speed compressor operation. This is factory default.
- Dip switch No. 2 on Thermostat should be set in ON position for two-speed compressor operation.
- Configuration Option No. 10 "Dual Fuel Selection" must be turned ON in all dual fuel applications.
- NO connection should be made to the furnace HUM terminal when using a Thermostat.
- Optional connection: If wire is connected, ACRDJ jumper on furnace control should be removed to allow Thermostat/Thermostat to control outdoor unit staging.
- Furnace must control its own stage heating operation via furnace control algorithm.
- The RVS Sensing terminal "L" should not be connected. This is internally used to sense defrost operation.
- DO NOT SELECT the "FURNACE INTERFACE" or "BALANCE POINT" option on the two-speed heat pump control board. This is controlled internally by the Thermostat/Dual Fuel Thermostat.
- Dip switch D on Dual Fuel Thermostat should be set in OFF position for single-speed compressor operation. This is factory default.
- Dip switch D on Dual Fuel Thermostat should be set in ON position for two-speed compressor operation.

## **VENTING**

The furnace shall be connected to a listed factory built chimney or vent, or a clay-tile lined masonry or concrete chimney. Venting into an unlined masonry chimney or concrete chimney is prohibited.

When an existing Category I furnace is removed or replaced, the original venting system may no longer be sized to properly vent the attached appliances. An improperly sized Category I venting system could cause the formation of condensate in the furnace and vent, leakage of condensate and combustion products, and spillage of combustion products into the living space.

### **⚠ WARNING**

#### **CARBON MONOXIDE POISONING HAZARD**

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death. The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

1. Seal any unused openings in venting system.
2. Inspect the venting system for proper size and horizontal pitch, as required in the current edition of National Fuel Gas Code, ANSI Z223.1/NFPA 54 and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies, which could cause an unsafe condition.
3. As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
4. Close fireplace dampers.
5. Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
6. Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
7. Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
8. If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the current edition of National Fuel Gas Code, ANSI Z223.1/NFPA 54.
9. After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

Vent system or vent connectors may need to be resized. Vent systems or vent connectors, must be sized to approach minimum size as determined using appropriate table found in the NFGC.

## **GENERAL VENTING REQUIREMENTS**

Follow all safety codes for proper vent sizing and installation requirements, including local building codes, the current edition of National Fuel Gas Code ANSI Z223.1/NFPA 54 (NFGC), Parts 12 and 13, the local building codes, and furnace and vent manufacturers' instructions.

These furnaces are design-certified as Category I furnaces in accordance with current edition of ANSI Z21.47/CSA 2.3 and operate with a non-positive vent static pressure to minimize the potential for vent gas leakage. Category I furnaces operate with a flue loss not less than 17 percent to minimize the potential for condensation in the venting system. These furnaces are approved for common venting and multistory venting with other fan assisted or draft hood equipped appliances in accordance with the NFGC, the local building codes, and furnace and vent manufacturers' instructions. The following information and warning must be considered in addition to the requirements defined in the NFGC.

1. If a vent (common or dedicated) becomes blocked, the furnace will be shut off by the draft safeguard switch located on the vent elbow.
2. Do not vent this Category I furnace into a single-wall dedicated or common vent. The dedicated or common vent is considered to be the vertical portion of the vent system that terminates outdoors.
3. Vent connectors serving Category I furnaces shall not be connected into any portion of a mechanical draft system operating under positive pressure.
4. Do not vent this appliance with any solid fuel burning appliance.
5. Category I furnaces must be vented vertically or nearly vertically unless equipped with a listed power venter.
6. Do not vent this appliance into an unlined masonry chimney. Refer to Chimney Inspection Chart, Fig. 31.

## **MASONRY CHIMNEY REQUIREMENTS**

If a clay tile-lined masonry chimney is being used and it is exposed to the outdoors below the roof line, relining might be required. Chimneys shall conform to the Standard for Chimneys, Fireplaces, Vents, and Solid Fuel Burning Appliances current edition of ANSI/NFPA 211 and must be in good condition.

USA - Refer to Sections 13.1.8 and 13.2.20 of the current edition of NFGC NFPA54/ANSI Z223.1 or the authority having jurisdiction to determine whether relining is required. If relining is required, use a properly sized listed metal liner, Type-B vent, or a listed alternative venting design.

**NOTE:** See the current edition of NFPA54/ANSI Z223.1, 13.1.8 and 13.2.20 regarding alternative venting design and the Exception.

This furnace is permitted to be vented into a clay tile-lined masonry chimney that is exposed to the outdoors below the roof line, provided:

1. Vent connector is Type-B double-wall, and
2. This furnace is common vented with at least 1 draft hood equipped appliance, and
3. The combined appliance input rating is less than the maximum capacity given in Table 8, and
4. The input rating of each space heating appliance is greater than the minimum input rating given in Table 7 for the local 99% Winter Design Temperature. Chimneys having internal areas greater than 38 square inches require furnace input ratings greater than the input ratings of these furnaces. See footnote at bottom of Table 7, and
5. The authority having jurisdiction approves.

If all of these conditions cannot be met, an alternative venting design shall be used, a listed chimney-lining system, or a Type-B common vent.

**Table 7 – Minimum Allowable Input Rating of Space-Heating Appliance in Thousands of BTUH per Hour**

| VENT HEIGHT<br>FT (M)                                                      | INTERNAL AREA OF CHIMNEY<br>IN <sup>2</sup> . (MM <sup>2</sup> ) |               |               |               |
|----------------------------------------------------------------------------|------------------------------------------------------------------|---------------|---------------|---------------|
|                                                                            | 12<br>(7741)                                                     | 19<br>(12258) | 28<br>(18064) | 38<br>(24516) |
| <b>Local 99% Winter Design<br/>Temperature: 17 to 26°F* (–8 to –3°C)</b>   |                                                                  |               |               |               |
| 6 (1.8)                                                                    | 0                                                                | 55            | 99            | 141           |
| 8 (2.4)                                                                    | 52                                                               | 74            | 111           | 154           |
| 10 (3.0)                                                                   | NR                                                               | 90            | 125           | 169           |
| 15 (4.6)                                                                   | NR                                                               | NR            | 167           | 212           |
| 20 (6.1)                                                                   | NR                                                               | NR            | 212           | 258           |
| 30 (9.1)                                                                   | NR                                                               | NR            | NR            | 362           |
| <b>Local 99% Winter Design<br/>Temperature: 5 to 16°F* (–15 to –9°C)</b>   |                                                                  |               |               |               |
| 6 (1.8)                                                                    | NR                                                               | 78            | 121           | 166           |
| 8 (2.4)                                                                    | NR                                                               | 94            | 135           | 182           |
| 10 (3.0)                                                                   | NR                                                               | 111           | 149           | 198           |
| 15 (4.6)                                                                   | NR                                                               | NR            | 193           | 247           |
| 20 (6.1)                                                                   | NR                                                               | NR            | NR            | 293           |
| 30 (9.1)                                                                   | NR                                                               | NR            | NR            | 377           |
| <b>Local 99% Winter Design<br/>Temperature: –10 to 4°F* (–23 to –16°C)</b> |                                                                  |               |               |               |
| 6 (1.8)                                                                    | NR                                                               | NR            | 145           | 196           |
| 8 (2.4)                                                                    | NR                                                               | NR            | 159           | 213           |
| 10 (3.0)                                                                   | NR                                                               | NR            | 175           | 231           |
| 15 (4.6)                                                                   | NR                                                               | NR            | NR            | 283           |
| 20 (6.1)                                                                   | NR                                                               | NR            | NR            | 333           |
| 30 (9.1)                                                                   | NR                                                               | NR            | NR            | NR            |
| <b>Local 99% Winter Design<br/>Temperature: –11°F (–24°C) or lower</b>     |                                                                  |               |               |               |
| Not recommended for any vent configuration.                                |                                                                  |               |               |               |

\*The 99.6% heating db temperatures table found in the Appendix of the Climatic Design Information chapter of the 2017 ASHRAE Fundamentals Handbook.

Inspections before the sale and at the time of installation will determine the acceptability of the chimney or the need for repair and/or (re)lining. Refer to the Fig. 31 to perform a chimney inspection. If the inspection of a previously used tile-lined chimney:

- Shows signs of vent gas condensation, the chimney should be relined in accordance with local codes and the authority having jurisdiction. The chimney should be relined with a listed metal liner, or a Type-B vent shall be used to reduce condensation. If a condensate drain is required by local code, refer to the current edition of NFPA 54/ANSI Z223.1, Section 12.10 for additional information on condensate drains.
- Indicates the chimney exceeds the maximum permissible size in the tables, the chimney should be rebuilt or relined to conform to the requirements of the equipment being installed and the authority having jurisdiction.

A chimney without a clay tile liner, which is otherwise in good condition, shall be rebuilt to conform to current edition of ANSI/NFPA 211 or be lined with a UL listed metal liner or UL listed Type-B vent. Relining with a listed metal liner or Type-B vent is considered to be a vent-in-a-chase.

If a metal liner or Type-B vent is used to line a chimney, no other appliance shall be vented into the annular space between the chimney and the metal liner.

**Exterior Masonry Chimney FAN + NAT  
Installations with Type-B Double Wall Vent  
Connectors ©NFPA & AGA**

**Table 8 – Combined Appliance Maximum Input Rating in Thousands of BTUH per Hour**

| VENT HEIGHT<br>FT. (M) | INTERNAL AREA OF CHIMNEY<br>IN <sup>2</sup> (MM <sup>2</sup> ) |               |               |               |
|------------------------|----------------------------------------------------------------|---------------|---------------|---------------|
|                        | 12<br>(7741)                                                   | 19<br>(12258) | 28<br>(18064) | 38<br>(24516) |
| 6 (1.8)                | 74                                                             | 119           | 178           | 257           |
| 8 (2.4)                | 80                                                             | 130           | 193           | 279           |
| 10 (3.0)               | 84                                                             | 138           | 207           | 299           |
| 15 (4.5)               | NR                                                             | 152           | 233           | 334           |
| 20 (6.0)               | NR                                                             | NR            | 250           | 368           |
| 30 (9.1)               | NR                                                             | NR            | NR            | 404           |

### **APPLIANCE APPLICATION REQUIREMENTS**

Appliance operation has a significant impact on the performance of the venting system. If the appliances are sized, installed, adjusted, and operated properly, the venting system and/or the appliances should not suffer from condensation and corrosion. The venting system and all appliances shall be installed in accordance with applicable listings, standards, and codes.

The furnace should be sized to provide 100 percent of the design heating load requirement plus any margin that occurs because of furnace model size capacity increments. Heating load estimates can be made using approved methods available from Air Conditioning Contractors of America (Manual J); American Society of Heating, Refrigerating, and Air-Conditioning Engineers; or other approved engineering methods. Excessive oversizing of the furnace could cause the furnace and/or vent to fail prematurely. When a metal vent or metal liner is used, the vent must be in good condition and be installed in accordance with the vent manufacturer's instructions.

To prevent condensation in the furnace and vent system, the following precautions must be observed:

- The return-air temperature must be at least 60°F (16°C)db except for brief periods of time during warm-up from setback at no lower than 55°F (13°C) db or during initial start-up from a standby condition.
- Adjust the gas input rate per the installation instructions. Low gas input rate causes low vent gas temperatures, causing condensation and corrosion in the furnace and/or venting system.
- Adjust the air temperature rise to the midpoint of the rise range or slightly above. Low air temperature rise can cause low vent gas temperature and potential for condensation problems.
- Set the thermostat heat anticipator or cycle rate to reduce short cycling.

Air for combustion must not be contaminated by halogen compounds which include chlorides, fluorides, bromides, and iodides. These compounds are found in many common home products such as detergent, paint, glue, aerosol spray, bleach, cleaning solvent, salt, and air freshener, and can cause corrosion of furnaces and vents. Avoid using such products in the combustion-air supply. Furnace use during construction of the building could cause the furnace to be exposed to halogen compounds, causing premature failure of the furnace or venting system due to corrosion.

Vent dampers on any appliance connected to the common vent can cause condensation and corrosion in the venting system. Do not use vent dampers on appliances common vented with this furnace.



## CHIMNEY INSPECTION CHART

For additional requirements refer to the National Fuel Gas Code NFPA 54/ANSI Z223.1 and ANSI/NFPA 211  
Chimneys, Fireplaces, Vents, and Solid Fuel Burning Appliances

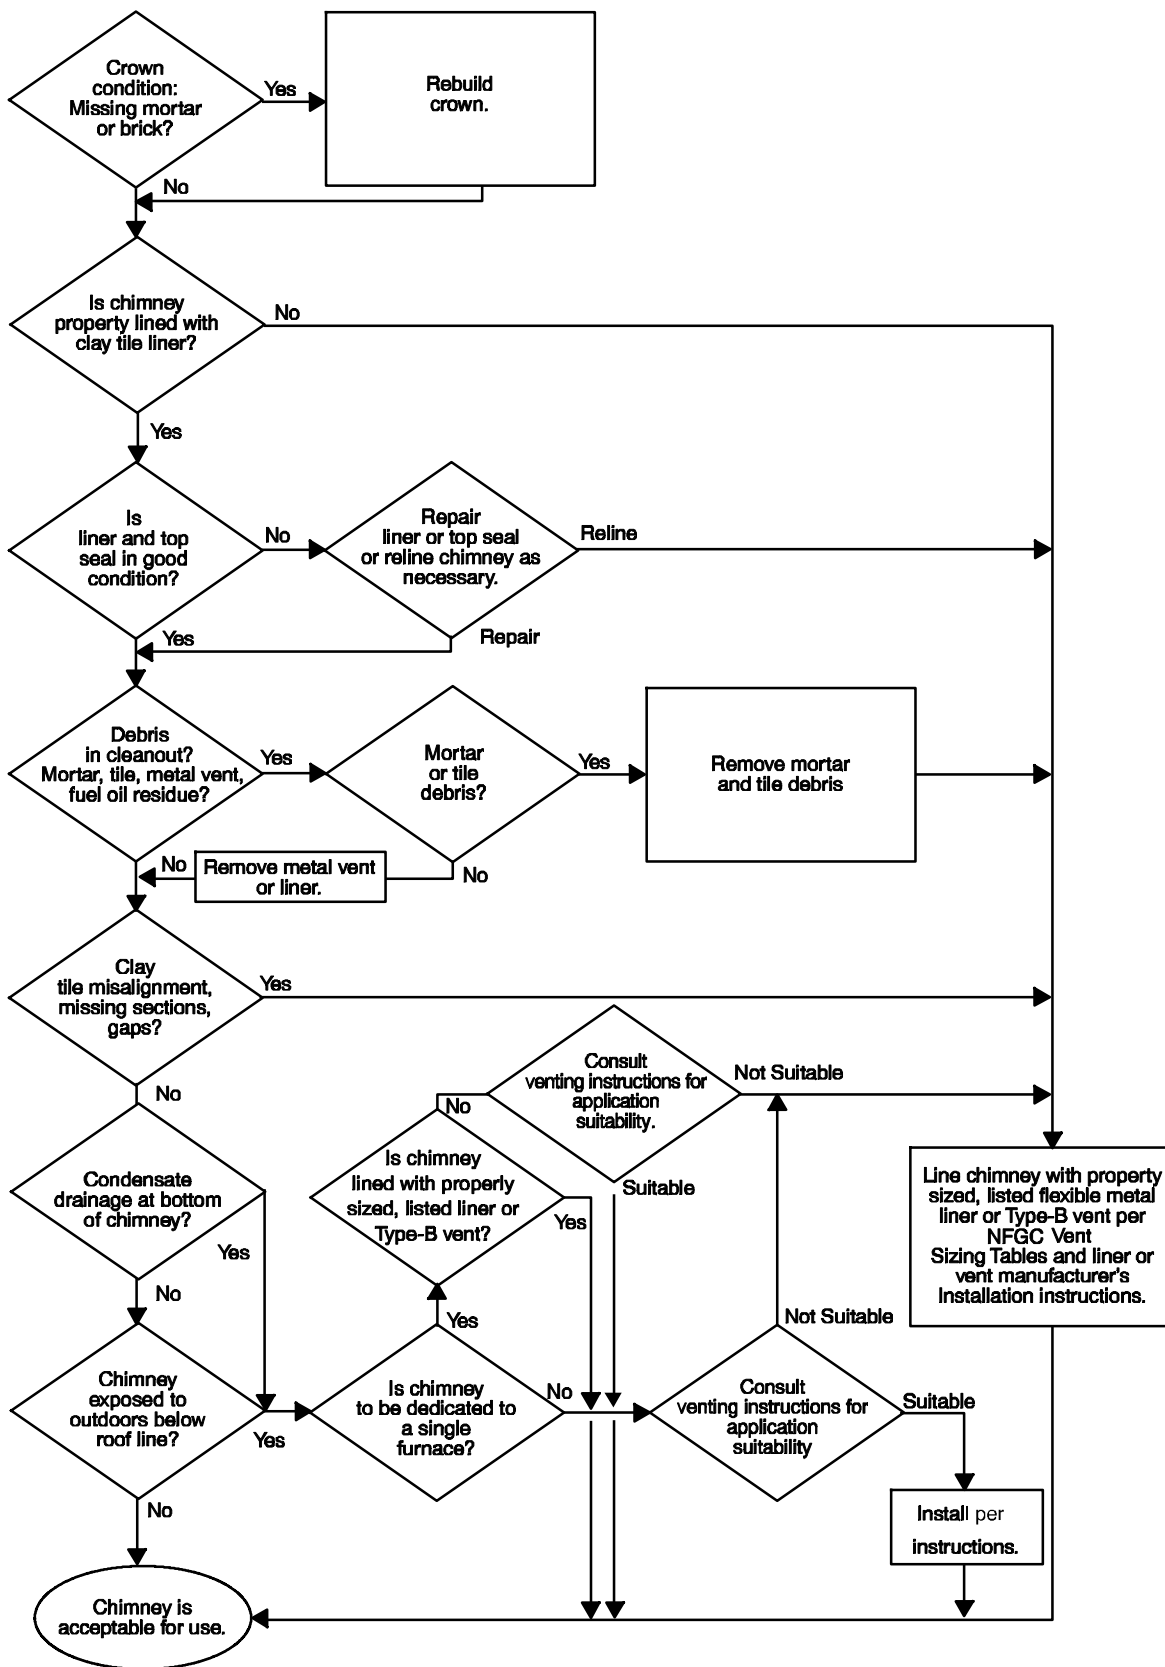


Fig. 31 - Chimney Inspection Chart

A180242

### **ADDITIONAL VENTING REQUIREMENTS**

A 4" (101 mm) round vent elbow is supplied with the furnace. A 5-inch (127 mm) or 6-inch (152 mm) vent connector may be required for some model furnaces. A field-supplied 4-inch-to-5-inch (101 - 127 mm) or 4-inch-to-6-inch (101 - 152 mm) sheet metal increaser fitting is required when 5-inch (127 mm) or 6-inch (152 mm) vent connector is used. See Fig. 32 - 35 Venting Orientation for approved vent configurations.


**NOTE:** Vent connector length for connector sizing starts at furnace vent elbow. The 4-inch vent elbow is shipped for upflow configuration and may be rotated for other positions. Remove the 3 screws that secure vent elbow to furnace, rotate furnace vent elbow to position desired, reinstall screws. The factory-supplied vent elbow does NOT count as part of the number of vent connector elbows.

The vent connector can exit the furnace through one of two locations on the casing.

1. Attach the single wall vent connector to the furnace vent elbow, and fasten the vent connector to the vent elbow with at least two field-supplied, corrosion-resistant, sheet metal screws located 180° apart.

**NOTE:** An accessory flue extension is available to extend from the furnace elbow to outside the furnace casing. See Product Data for accessory listing. If flue extension is used, fasten the flue extension to the vent elbow with at least two field-supplied, corrosion-resistant, sheet metal screws located 180° apart. Fasten the vent connector to the flue extension with at least two field-supplied, corrosion resistant sheet metal screws located 180° apart.

2. Vent the furnace with the appropriate connector as shown in Fig. 32 - 35.
3. Determine the correct location of the knockout to be removed.
4. Use a hammer and screwdriver to strike a sharp blow between the tie points and work the slug back and forth until the slug breaks free.

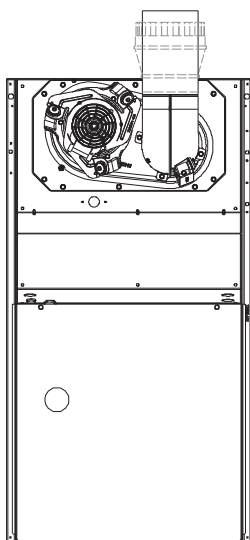

SEE NOTES: 1,2,4,7,8,9  
on the page following  
these figures

**Fig. 32 - Upflow Application-Vent Elbow Up**

A03208

### **⚠ CAUTION**

#### **CUT HAZARD**

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing furnaces.

### **⚠ CAUTION**

#### **BURN HAZARD**

Failure to follow this caution may cause personal injury.

Hot vent pipe is within reach of small children when installed in downflow position. See the following instruction.

An accessory Vent Guard Kit is **REQUIRED** for downflow applications where the vent exits through the lower portion of the furnace casing. See Fig. 37 and Product Data for accessory listing. Refer to the Vent Guard Kit Instructions for complete details.


The horizontal portion of the venting system shall slope upwards not less than 1/4-in. per linear ft. (21 mm/M) from the furnace to the vent and shall be rigidly supported every 5 ft. (2 M) or less with metal hangers or straps to ensure there is no movement after installation.

#### **SIDEWALL VENTING**

This furnace is not approved for direct sidewall horizontal venting.

Per section 12.4.3 of the current edition of NFPA54/ANSI Z223.1, any listed mechanical venter may be used, when approved by the authority having jurisdiction.


Select the listed mechanical venter to match the Btuh input of the furnace being vented. Follow all manufacturer's installation requirements for venting and termination included with the listed mechanical venter.

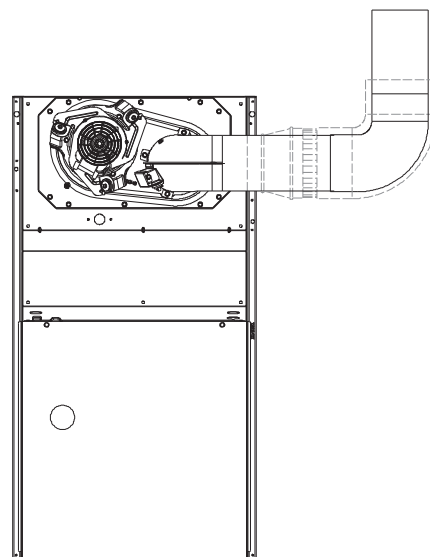

SEE NOTES: 1,2,3,4,7,8,9  
on the pages following  
these figures

**Fig. 33 - Upflow Application-Vent Elbow Right**


A03209

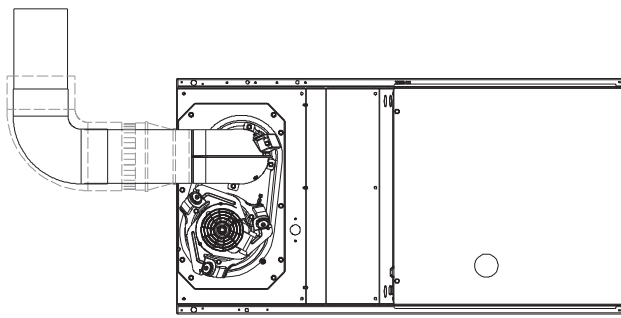

SEE NOTES: 1,2,4,7,8,9 on the page following these figures

A03213


**Fig. 34 - Horizontal Left Application-Vent Elbow Left**

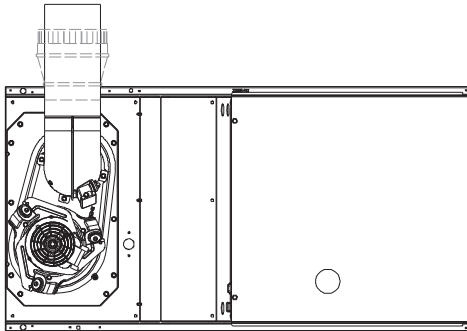

SEE NOTES: 1,2,4,5,7,8,9 on the page following these figures

A03215

**Fig. 35 - Horizontal Left Application-Vent Elbow Up**

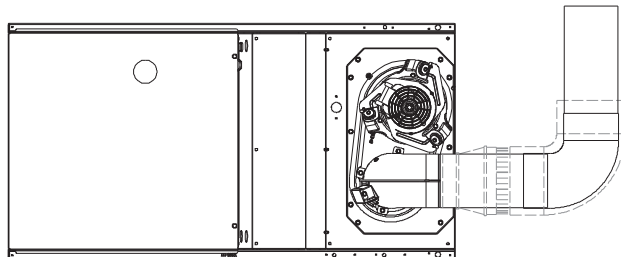


SEE NOTES: 1,2,4,7,8,9 on the page following these figures

A03214

**Fig. 36 - Horizontal Right Application-Vent Elbow Right**

See NOTES following images.

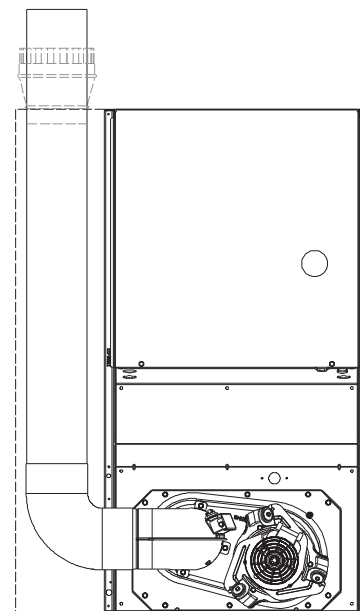

SEE NOTES: 1,2,4,5,6,7,8,9 on the page following these figures

A03207

**Fig. 37 - Downflow Application-Vent Elbow Left then Up**

## VENTING NOTES FOR FIGURES 32 - 37

1. For common vent, vent connector sizing and vent material: United States--use the NFCC.
2. Immediately increase to 5-inch (127 mm) or 6-inch (152 mm) vent connector outside furnace casing when 5-inch (127 mm) vent connector is required, refer to Note 1 above.
3. Side outlet vent for upflow and downflow installations must use Type B vent immediately after exiting the furnace, except when factory-authorized, Downflow Vent Guard Kit, is used in the downflow position. See Product Data Sheet for accessory listing.
4. Type-B vent where required, refer to Note 1 above.
5. Four-inch single-wall (26 ga. min.) vent must be used inside furnace casing and when the Downflow Vent Guard Kit is used external to the furnace. See Product Data Sheet for accessory listing.
6. Factory-authorized accessory Downflow Vent Guard Kit required in downflow installations with lower vent configuration. See Product Data Sheet for accessory listing.
7. Secure vent connector to furnace elbow with (2) corrosion-resistant sheet metal screws, spaced approximately 180° apart.
8. Secure all other single wall vent connector joints with (3) corrosion resistant screws spaced approximately 120° apart.
9. Secure Type-B vent connectors per vent connector manufacturer's recommendations.

## START-UP, ADJUSTMENT, AND SAFETY CHECK

### General

#### ⚠ WARNING

##### FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

This furnace is equipped with manual reset limit switches in the gas control area. The switches open and shut off power to the gas valve if a flame rollout or overheating condition occurs in the gas control area. DO NOT bypass the switches. Correct inadequate combustion air supply problem before resetting the switches.

#### ⚠ CAUTION

##### CUT HAZARD

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing furnaces.

1. Maintain 115-v wiring and ground. Improper polarity will result in rapid flashing LED and no furnace operation.
2. Make thermostat wire connections at the 24-v terminal block on the furnace control. Failure to make proper connections will result in improper operation. (See Fig. 24)
3. Gas supply pressure to the furnace must be greater than 4.5-In. W.C. (0.16 psig ) but not exceed 14-In. W.C. (0.5 psig).
4. Check all manual-reset switches for continuity.
5. Install blower compartment door. Door must be in place to operate furnace.
6. Replace outer door.

### Start-Up Procedures

#### ⚠ WARNING

##### FIRE AND EXPLOSION HAZARD

Failure to follow this warning could cause personal injury, death and/or property damage.

Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

1. Purge gas lines after all connections have been made.
2. Check gas lines for leaks.
3. To Begin Component Self-Test:  
Remove Blower Access Door. Disconnect the thermostat R lead from furnace control board. Manually close blower door switch. Turn Setup DIP switch SW1-6 ON. (See Fig. 23, 45 and Table 10)

**NOTE:** The furnace control allows all components, except the gas valve, to be run for short period of time. This feature helps diagnose a system problem in case of a component failure. Component test feature will not operate if any thermostat signal is present at the control.

Refer to service label attached to furnace or See Fig. 38.

Component test sequence is as follows:

- a. Inducer motor turns on at 50% duty cycle for 15 secs, then stays on for the entire test.
- b. Hot surface ignitor is energized for 15 sec., then off.
- c. Blower motor operates for 15 sec.
- d. After component test is completed, one or more status codes (11, 25, 41 or 42) will flash. See component test section of service label (Fig. 38) in furnace for explanation of status codes.

**NOTE:** To repeat component test, turn setup switch SW1-6 OFF, then back ON.

4. Turn setup DIP switch SW1-6 OFF. Reconnect R lead to furnace control board, release blower door switch and re-install blower access door.
5. Operate furnace per instruction on inner door.
6. Verify furnace shut down by lowering thermostat setting below room temperature.
7. Verify furnace restarts by raising thermostat setting above room temperature.

### Adjustments

#### ⚠ WARNING

##### FIRE HAZARD

Failure to follow this warning could result in injury, death and/or property damage.

DO NOT bottom out gas valve regulator adjusting screw. This can result in unregulated gas valve outlet pressure and result in excess overfire and heat exchanger failures.

#### ⚠ CAUTION

##### FURNACE DAMAGE HAZARD

Failure to follow this caution may result in reduced furnace life.

DO NOT redrill orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of inlet gas. (See Fig. 40)

Furnace gas input rate on rating plate is for installations at altitudes up to 2,000 ft. (610 M). Furnace input rate must be within +/- 2 percent of furnace rating plate input.





1. Determine the correct gas input rate. Refer to the unit rating plate. The input rating for altitudes above 2,000 ft. (610 M) must be reduced by 2 percent for each 1,000 ft. (305 M) above sea level. For installations below 2,000 ft. (610 M), refer to the unit rating plate. For installations above 2,000 ft. (610 M), multiply the input on the rating plate by the de-rate multiplier in Table 9 for the correct input rate.

**Table 9 – Altitude Derate Multiplier for U.S.A.**

| ALTITUDE<br>(FT. / M) | PERCENT<br>OF<br>DERATE | DERATE<br>MULTIPLIER<br>FACTOR* |
|-----------------------|-------------------------|---------------------------------|
| 0-2000 (0-610)        | 0                       | 1.00                            |
| 2001-3000 (610-914)   | 4-6                     | 0.95                            |
| 3001-4000 (914-1219)  | 6-8                     | 0.93                            |
| 4001-5000 (1219-1524) | 8-10                    | 0.91                            |

\* Derate multiplier factors are based on midpoint altitude for altitude range.

Table 10 – Furnace Setup Switch Description
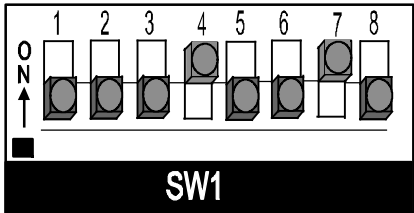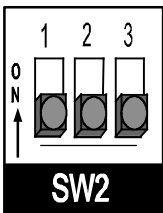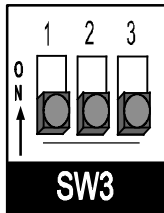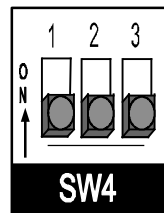
| DIP SWITCH CONFIGURATION                                                           |                                                                                                                                        |                                                                                     |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|   |                                                                                                                                        |                                                                                     |
|  |                                                     |  |
| <b>SW1</b>                                                                         |                                                                                                                                        |                                                                                     |
| Switch                                                                             | Description                                                                                                                            | Factory                                                                             |
| 1                                                                                  | <b>Status Code Recovery</b> - Turn ON to retrieve status codes. See manual for use.                                                    | OFF                                                                                 |
| 2                                                                                  | <b>Not Used</b>                                                                                                                        | OFF                                                                                 |
| 3                                                                                  | <b>Not Used</b>                                                                                                                        | OFF                                                                                 |
| 4                                                                                  | <b>Comfort/Efficiency Adjust</b> - Turn ON to decrease low- & high-heat airflow 15% for 90%+ models or 10% for 80% models              | ON                                                                                  |
| 5                                                                                  | <b>CFM per Ton Adjust</b> - See Airflow Tables in manual for desired settings. Also see SW4 - 3.                                       | OFF                                                                                 |
| 6                                                                                  | <b>Component Self Test</b> - Turn ON to initiate Component disconnected. Turn OFF when Self Test is completed.                         | OFF                                                                                 |
| 7 & 8                                                                              | <b>Blower Off Delay</b> - See manual or unit wiring diagram for settings. Adjustable 90 - 180 seconds. Factory default is 120 Seconds. | 7 - ON<br>8 - OFF                                                                   |
| <b>SW2</b>                                                                         |                                                                                                                                        |                                                                                     |
| Switch                                                                             | Description                                                                                                                            | Factory                                                                             |
| 1 - 3                                                                              | <b>A/C Setup Switches</b> - The Air Conditioning setup switch (two-stage units) airflow. See Cooling Air Delivery Tables in            | ALL OFF                                                                             |
| <b>SW3</b>                                                                         |                                                                                                                                        |                                                                                     |
| Switch                                                                             | Description                                                                                                                            | Factory                                                                             |
| 1 - 3                                                                              | <b>CF Setup Switches</b> - The Continuous Fan setup switch airflow. See Cooling Air Delivery Tables and Continuous Fan                 | ALL OFF                                                                             |
| <b>SW4</b>                                                                         |                                                                                                                                        |                                                                                     |
| Switch                                                                             | Description                                                                                                                            | Factory                                                                             |
| 1                                                                                  | <b>Future Use</b> - Switch should remain in OFF position.                                                                              | OFF                                                                                 |
| 2                                                                                  | <b>Not Used</b>                                                                                                                        | OFF                                                                                 |
| 3                                                                                  | <b>CFM per Ton Adjust</b> - See Airflow Tables for desired settings. Also SW1 - 5.                                                     | OFF                                                                                 |

A190351

SERVICE

STATUS

**LED CODE**  
**CONTINUOUS OFF** - Check for 115VAC at L1 and N, and 24VAC at SEC-1 and SEC-2.  
**CONTINUOUS ON** - Control has 24VAC power.  
**RAPID FLASHING** - Line voltage (115VAC) polarity reversed.

If status code recall is needed disconnect the "R" thermostat lead, reset power, and put setup switch "SW1-1" in the ON position. To clear the status code history put setup switch "SW1-1" in the ON position and jumper thermostat terminals "R", "WV1", and "VY2" simultaneously until #41 is flashed.  
NOTE: W2 has no function on this model, connect W from thermostat to WV1 on control for Heating Operation

EACH OF THE FOLLOWING STATUS CODES IS A TWO DIGIT NUMBER WITH THE FIRST DIGIT DETERMINED BY THE NUMBER OF SHORT FLASHES AND THE SECOND DIGIT BY THE NUMBER OF LONG FLASHES.

| COMPONENT TEST |                                                                                                                                                                                                                                                                                                                                                                                             | CODE DESCRIPTION |                                                                                                                                                                                                |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11             | NO PREVIOUS CODE - Stored status codes are erased automatically after 72 hours or as specified above.                                                                                                                                                                                                                                                                                       | 11               | Indicates the blower motor tested OK. Visual check of inducer motor and hot surface igniter required.                                                                                          |
| 12             | BLOWER ON AFTER POWER UP (115VAC or 24VAC) - Blower runs for 90 seconds, if unit is powered up during a call for heat (R-WVW1 closed) or (R-WVW1 opens) during a blower on-delay period.                                                                                                                                                                                                    | 25               | SETUP ERROR - Referenced code 25 on left                                                                                                                                                       |
| 13             | IGNITION LOCKOUT - Control will auto-reset after three hours.                                                                                                                                                                                                                                                                                                                               | 41               | BLOWER MOTOR FAULT - Indicates blower motor wiring, furnace control, and furnace control.                                                                                                      |
| 14             | IGNITION LOCKOUT - Control will auto-reset after three hours.                                                                                                                                                                                                                                                                                                                               | 42               | INDUCER MOTOR FAULT - Indicates inducer motor failed test. Check inducer wiring, furnace control and tubing for poor connections.                                                              |
| 15             | Refer to status code #34. Blower failed to communicate within 30 seconds after being turned ON in two successive heating cycles. Control will auto-reset after 3 hours.                                                                                                                                                                                                                     |                  | To repeat component test turn setup switch "SW1-6" OFF and then back ON. After component test is completed put setup switch "SW1-6" in the OFF position and reconnect the "R" thermostat lead. |
| 21             | MIS-WIRED GAS VALVE - Defective control (valve relay).                                                                                                                                                                                                                                                                                                                                      |                  |                                                                                                                                                                                                |
| 22             | ABNORMAL FLAME - PROVING SIGNAL - Flame is provided while gas valve is de-energised. Inducer will run until fault is cleared. Check for:                                                                                                                                                                                                                                                    |                  |                                                                                                                                                                                                |
| 23             | - Excess wind<br>- Dirty filter or restricted duct system<br>- Defective switch or connections<br>- Inadequate combustion air supply (burner Thermal Switch open)                                                                                                                                                                                                                           |                  |                                                                                                                                                                                                |
| 24             | SECONDARY VOLTAGE FUSE IS OPEN Check for: -Short circuit in secondary voltage (24VAC) wiring.                                                                                                                                                                                                                                                                                               |                  |                                                                                                                                                                                                |
| 25             | INVALID MODEL SELECTION OR SETUP ERROR - Indicated either the model plug is missing or incorrect, or, setup switch "SW1-1" or "SW1-6" is positioned improperly, if code flashes 4 times on power-up control is in model selection mode. Check for: -Thermostat call with SW1-1, SW1-6 or both SW1-1 & SW1-6 ON.                                                                             |                  |                                                                                                                                                                                                |
| 31             | PRESSURE TRANSDUCER INPUT DOES NOT SENSE TARGET PRESSURE OR PRESSURE IS OUT OF RANGE - Check for:                                                                                                                                                                                                                                                                                           |                  |                                                                                                                                                                                                |
| 34             | - Excessive wind<br>- Restricted vent<br>- Inadequate combustion air supply<br>- Low inlet gas pressure (if L.GPS used)<br>- Disconnected or obstructed pressure tubing                                                                                                                                                                                                                     |                  |                                                                                                                                                                                                |
| 41             | IGNITION PROVING FAILURE - Control will try three more times before lockout #44 occurs. If flame signal lost during blower on-delay period, blower will come on for the selected blower on-delay. Check for:                                                                                                                                                                                |                  |                                                                                                                                                                                                |
| 42             | - Oxide buildup on flame sensor (clean with fine steel wool)<br>- Proper flame sense microamps (.5 microamps D.C. min., 4.0 - 6.0 nominal)<br>- Manual valve shut-off<br>- Low inlet gas pressure<br>- Flame sensor must not be grounded                                                                                                                                                    |                  |                                                                                                                                                                                                |
| 45             | GREEN/YELLOW WIRE MUST be connected to furnace sheet metal BLOWER MOTOR FAULT - Indicates the blower fails to reach 250 RPM or fails to communicate within 30 seconds after being turned ON.                                                                                                                                                                                                |                  |                                                                                                                                                                                                |
|                | INDUCER MOTOR FAULT the RPM pulses are not detected from the inducer motor within 20 seconds after a heat request, the inducer is outside of its valid range of operation, or the inducer RPM signal was lost for 5 seconds during operation. Check for: - Proper vent sizing - Restricted combustion air supply - Failed inducer motor - Improper or loose motor wiring or bad connection. |                  |                                                                                                                                                                                                |
|                | CONTROL CIRCUITRY LOCKOUT - Auto-reset after one hour lockout due to: - Gas valve relay stuck open - Flame sense circuit failure - Software check error                                                                                                                                                                                                                                     |                  |                                                                                                                                                                                                |
|                | Reset power to clear lockout. Replace control if status code repeats                                                                                                                                                                                                                                                                                                                        |                  |                                                                                                                                                                                                |

345374-201 REV A

Fig. 38 - Service Label

2. Determine the correct outlet gas pressure adjustment.
  - a. Obtain average yearly gas heat value (at installed altitude) from local gas supplier.
  - b. Obtain average yearly gas specific gravity from local gas supplier.
  - c. Find closest natural gas heat value and specific gravity in Tables 15 through 17.
  - d. Follow heat value and specific gravity lines to point of intersection to find outlet pressure setting for proper operation.

### 3. Check Inlet Gas Pressure

The inlet gas pressure must be checked with the furnace operating. This is necessary to make sure the inlet gas pressure does not fall below the minimum pressure of 4.5 in. w.c.

- a. Make sure the gas supply is turned off to the furnace and at the electric switch on the gas valve
- b. Loosen set screw on outlet tower pressure tap no more than one full turn with a 3/32- in. hex wrench or remove the 1/8- in. NPT plug from the inlet pressure tap on the gas valve.
- c. Connect a manometer to the inlet pressure tap on gas valve.
- d. Turn on furnace power supply.
- e. Turn gas supply manual shutoff valve to ON position.
- f. Turn furnace gas valve switch to ON position.
- g. Jumper R and W thermostat connections at the furnace control board.
- h. When main burners ignite, confirm inlet gas pressure is between 4.5 in. W.C. (1125 Pa) and 13.6 in. W.C. (3388 Pa).
- i. Remove jumper across thermostat connections to terminate call for heat. Wait until the blower off delay is completed.
- j. Turn furnace gas valve electric switch to OFF position.
- k. Turn gas supply manual shutoff valve to OFF position.
- l. Turn off furnace power supply.
- m. Remove manometer from the inlet pressure tap of the gas valve.
- n. Tighten set screw on inlet tower pressure tap with 3/32- in. hex wrench, or if 1/8- in. NPT plug was removed, apply pipe dope sparingly to end of plug and re- install in the gas valve

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Inlet pressure tap set screw must be tightened and 1/8-in. NPT pipe plug must be installed to prevent gas leaks.

4. Adjust gas valve outlet pressure determined in Step 2. to obtain correct input rate.
  - a. Turn gas valve ON/OFF switch to OFF.
  - b. Loosen set screw on inlet tower pressure tap no more than one full turn with a 3/32 in. hex wrench. (See Fig. 39)
  - c. Connect a water column manometer or similar device to pressure tap on the gas valve.
  - d. Turn gas valve ON/OFF switch to ON.
  - e. Manually close blower door switch.
  - f. Set thermostat to call for heat.
  - g. Remove regulator seal cap and turn regulator adjusting screw counterclockwise (out) to decrease input rate of clockwise (in) to increase input rate.

- h. Install regulator seal cap.
  - i. Leave manometer or similar device connected and proceed to next step.

**NOTE:** If orifice hole appears damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size. Never redrill an orifice. A burr-free and properly sized orifice hole is essential for proper flame characteristics.

### 5. Verify natural gas input rate by clocking meter.

**NOTE:** Gas valve regulator adjustment cap must be in place for proper input to be clocked.

- a. Turn off all other gas appliances and pilots served by the meter.
- b. Run furnace for 3 minutes in heating operation.
- c. Measure time (in seconds) for gas meter to complete 1 revolution and note reading. The 2 or 5 cubic feet dial provides a more accurate measurement of gas flow.
- d. Refer to Table 13 for cubic ft. of gas per hr.
- e. Multiply gas rate (cu ft./hr) by heating value (Btuh/cu ft) to obtain input.

If clocked rate does not match required input from Step 1, increase gas valve outlet pressure to increase input or decrease gas valve outlet pressure to decrease input. Repeat steps b through e until correct input is achieved. Reinstall regulator seal cap on gas valve.

### 6. Set temperature rise. The furnace must operate within the temperature rise ranges specified on the furnace rating plate. Do not exceed temperature rise range specified on unit rating plate. Determine the temperature rise as follows:

**NOTE:** Blower access door must be installed when taking temperature rise reading. Leaving blower access door off will result in incorrect temperature measurements. When setup switch SW1-4 is ON, operation will be near the high end of the rise range for improved comfort. Furnace must operate within the temperature rise range specified on the furnace rating plate.

## ⚠ WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Disconnect 115-v electrical power and install lockout tag before changing speed tap.

- a. Place thermometers in return and supply ducts as close to furnace as possible. Be sure thermometers do not see radiant heat from heat exchangers. Radiant heat affects temperature rise readings. This practice is particularly important with straight-run ducts.
- b. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.

**NOTE:** If the temperature rise is outside this range, first check:

- (1.) Gas input for heating operation.
- (2.) Return and supply ducts for excessive restrictions causing static pressures greater than the maximum heating static listed on the rating plate.
- (3.) Ensure Comfort/Efficiency SW1-4 on furnace control is in OFF = Efficiency position when a bypass humidifier is used (See Table 10).
- (4.) Make sure proper model plug is installed.
- c. Adjust air temperature rise by adjusting blower speed. Increase blower speed to reduce temperature rise. Decrease blower speed to increase temperature rise.
- d. Turn thermostat down below room temperature and remove blower access door.



- e. To increase heating airflow, set Comfort/Efficiency SW1-4 on furnace control to OFF = Efficiency.
- f. Repeat steps a through e.
- g. When correct input rate and temperature rise is achieved, turn gas valve ON/OFF switch to OFF.
- h. Remove manometer or similar device from gas valve.
- i. Tighten set screw on outlet tower pressure tap with 3/32 in. hex wrench.

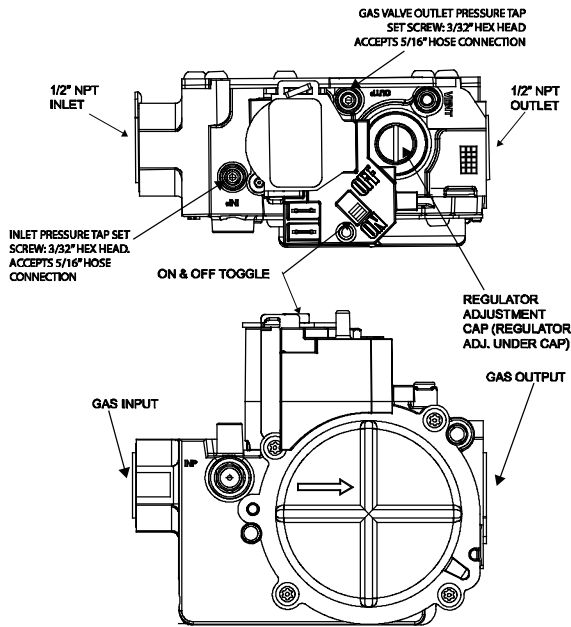


Fig. 39 - Gas Control Valve

A180231

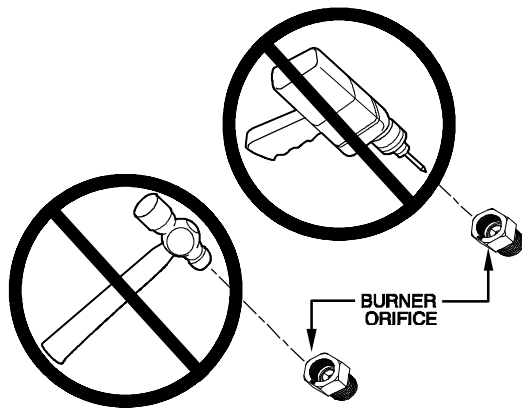


Fig. 40 - Orifice Hole

A180238

## ⚠ WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Gas valve outlet pressure tap must be tightened to prevent gas leak.

## ⚠ CAUTION

### FURNACE OVERHEATING HAZARD


Failure to follow this caution may result in reduced furnace life.

Recheck temperature rise. It must be within limits specified on the rating plate. Recommended operation is at the mid-point of rise range or slightly above.

#### 7. Set thermostat heat anticipator.

- a. Mechanical thermostat - Set thermostat heat anticipator to match the amp. draw of the electrical components in the R-W/W1 circuit. Accurate amp. draw readings can be obtained at the wires normally connected to thermostat subbase terminals, R-W. The thermostat anticipator should NOT be in the circuit while measuring current.

- (1.) Remove thermostat from subbase or from wall.
- (2.) Connect an amp. meter as shown in Fig. 41. across the R and W subbase terminals or R and W wires at wall.

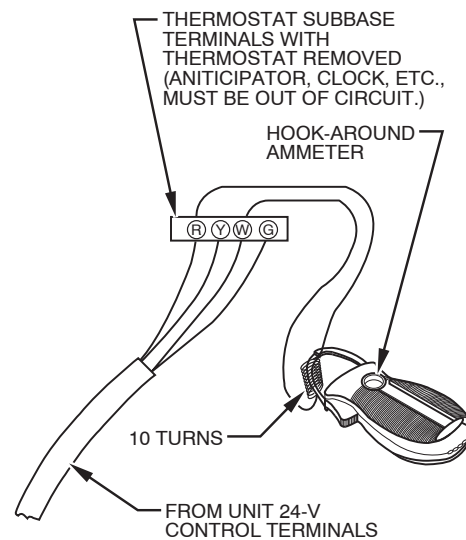

EXAMPLE:  $\frac{5.0 \text{ AMPS ON AMMETER}}{10 \text{ TURNS AROUND JAWS}} = 0.5 \text{ AMPS FOR THERMOSTAT ANTICIPATOR SETTING}$

Fig. 41 - Amp. Draw Check With Ammeter

- (3.) Record amp. draw across terminals when furnace is in low heat and after blower starts when furnace is heating and after blower starts.
- (4.) Set heat anticipator on thermostat per thermostat instructions and install on subbase or wall.
- (5.) Install blower access door.

- b. Electronic thermostat: Set cycle rate for 4 cycles per hr.

#### 8. Set Airflow for Air Conditioning -Single Stage and High Stage Cooling

The ECM blower can be adjusted for a range of airflow for Low Speed or High Speed cooling. See Table 11-Air Delivery - CFM (With Filter ). Depending on the model size, the cooling airflow can be adjusted from 1.5 to 6 tons based on 350 CFM/ton.

The cooling airflow is adjusted by turning Setup switches SW2-1, SW2-2 and SW2-3 either ON or OFF. Select the required airflow from Fig. 42. Fig. 42 is based on 350 CFM per ton. For airflow at 400 CFM per ton, turn Setup SW1-5 ON (See Table 10 and Fig. 23 and 45)

**NOTE:** 5.5 ton airflow will truncate at 2200 cfm on applicable models. For a complete explanation of cooling airflow, refer to the section titled "Sequence of Operation."

9. Set Airflow for Continuous Fan/Low Speed Cooling Airflow The ECM blower motor can be adjusted for continuous fan speeds different than heating or cooling fan speed. See Table 11 - Air Delivery - CFM (With Filter). Select the required continuous fan airflow from Fig. 42. The continuous fan speed is also the switch setting for low speed cooling when furnace is used with a 2-speed cooling unit. Adjust the continuous fan CFM to match the airflow required for low speed cooling. Select the required

airflow from Fig. 42. For airflow at 400 CFM per ton, turn Setup SW1-5 ON (See Fig. 42) The airflow selected for low speed cooling will also be the airflow used for continuous fan.

The continuous fan speed can be further adjusted at the thermostat using the "Comfort Fan" select function. Changing the continuous fan speed at the thermostat DOES NOT change the low speed cooling airflow selected at the control board.

**Table 11 – Air Delivery - CFM (With Filter)**

| (SW1–5 and SW4–3 set to OFF, except as indicated. See notes 1 and 2) |                              |       |       |                                |      |      |      |      |            |      |            |      |      |
|----------------------------------------------------------------------|------------------------------|-------|-------|--------------------------------|------|------|------|------|------------|------|------------|------|------|
| Size: 040C17–12                                                      | Clg/CF Switch settings       |       |       | External Static Pressure (ESP) |      |      |      |      |            |      |            |      |      |
| Clg Switches                                                         | SW2–3                        | SW2–2 | SW2–1 | 0.1                            | 0.2  | 0.3  | 0.4  | 0.5  | 0.6        | 0.7  | 0.8        | 0.9  | 1.0  |
| Clg Default:                                                         | OFF                          | OFF   | OFF   | 1275                           | 1310 | 1305 | 1315 | 1310 | 1305       | 1305 | 1295       | 1290 | 1270 |
| CF Switches                                                          | SW3–3                        | SW3–2 | SW3–1 |                                |      |      |      |      |            |      |            |      |      |
| Low–Clg Default:                                                     | OFF                          | OFF   | OFF   | 1275                           | 1310 | 1305 | 1315 | 1310 | 1305       | 1305 | 1295       | 1290 | 1270 |
| Cooling Airflow (SW2)<br><br>Low–Cooling Airflow (SW3)               | OFF                          | OFF   | ON    | 530                            | 545  | 545  | 535  | 505  | 495        | 485  | See Note 4 |      |      |
|                                                                      | OFF                          | ON    | OFF   | 715                            | 705  | 730  | 730  | 735  | 735        | 740  | 725        | 720  | 695  |
|                                                                      | OFF                          | ON    | ON    | 870                            | 910  | 925  | 925  | 935  | 935        | 925  | 915        | 910  | 900  |
|                                                                      | ON                           | OFF   | OFF   | 1100                           | 1090 | 1080 | 1110 | 1120 | 1120       | 1110 | 1110       | 1100 | 1095 |
|                                                                      | ON                           | OFF   | ON    | 1275                           | 1310 | 1305 | 1315 | 1310 | 1305       | 1305 | 1295       | 1290 | 1270 |
|                                                                      | ON                           | ON    | OFF   | 1445                           | 1480 | 1480 | 1480 | 1475 | 1455       | 1415 | 1375       | 1335 | 1295 |
|                                                                      | ON                           | ON    | ON    | 1445                           | 1480 | 1480 | 1480 | 1475 | 1455       | 1415 | 1375       | 1335 | 1295 |
| Maximum Clg Airflow <sup>2</sup>                                     |                              |       |       | 1635                           | 1605 | 1565 | 1525 | 1490 | 1455       | 1415 | 1375       | 1335 | 1295 |
| CF Switches                                                          | SW3–3                        | SW3–2 | SW3–1 |                                |      |      |      |      |            |      |            |      |      |
| Cont. Fan Default:                                                   | OFF                          | OFF   | OFF   | 530                            | 545  | 545  | 535  | 505  | 495        | 485  | See Note 4 |      |      |
| Continuous Fan Airflow (SW3)                                         | OFF                          | OFF   | ON    | 530                            | 545  | 545  | 535  | 505  | 495        | 485  | See Note 4 |      |      |
|                                                                      | OFF                          | ON    | OFF   | 715                            | 705  | 730  | 730  | 735  | 735        | 740  | 725        | 720  | 695  |
|                                                                      | OFF                          | ON    | ON    | 870                            | 910  | 925  | 925  | 935  | 935        | 925  | 915        | 910  | 900  |
|                                                                      | ON                           | OFF   | OFF   | 1100                           | 1090 | 1080 | 1110 | 1120 | 1120       | 1110 | 1110       | 1100 | 1095 |
|                                                                      | ON                           | OFF   | ON    | 1100                           | 1090 | 1080 | 1110 | 1120 | 1120       | 1110 | 1110       | 1100 | 1095 |
|                                                                      | ON                           | ON    | OFF   | 1100                           | 1090 | 1080 | 1110 | 1120 | 1120       | 1110 | 1110       | 1100 | 1095 |
|                                                                      | ON                           | ON    | ON    | 1100                           | 1090 | 1080 | 1110 | 1120 | 1120       | 1110 | 1110       | 1100 | 1095 |
| Heating (SW1)                                                        | Heating Airflow <sup>3</sup> |       |       | 760                            | 765  | 790  | 790  | 800  | 800        | 800  | 790        | 775  | 755  |
| Size: 060C17–16                                                      | Clg/CF Switch settings       |       |       | External Static Pressure (ESP) |      |      |      |      |            |      |            |      |      |
| Clg Switches                                                         | SW2–3                        | SW2–2 | SW2–1 | 0.1                            | 0.2  | 0.3  | 0.4  | 0.5  | 0.6        | 0.7  | 0.8        | 0.9  | 1.0  |
| Clg Default:                                                         | OFF                          | OFF   | OFF   | 1460                           | 1475 | 1500 | 1500 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
| CF Switches                                                          | SW3–3                        | SW3–2 | SW3–1 |                                |      |      |      |      |            |      |            |      |      |
| Low–Clg Default:                                                     | OFF                          | OFF   | OFF   | 540                            | 565  | 555  | 555  | 535  | See Note 4 |      |            |      |      |
| Cooling Airflow (SW2)<br><br>Low–Cooling Airflow (SW3)               | OFF                          | OFF   | ON    | 540                            | 565  | 555  | 555  | 535  | See Note 4 |      |            |      |      |
|                                                                      | OFF                          | ON    | OFF   | 715                            | 735  | 745  | 760  | 765  | See Note 4 |      |            |      |      |
|                                                                      | OFF                          | ON    | ON    | 865                            | 910  | 935  | 950  | 965  | 955        | 950  | 955        | 955  | 945  |
|                                                                      | ON                           | OFF   | OFF   | 1120                           | 1125 | 1130 | 1145 | 1160 | 1165       | 1165 | 1160       | 1150 | 1150 |
|                                                                      | ON                           | OFF   | ON    | 1275                           | 1295 | 1315 | 1335 | 1340 | 1345       | 1340 | 1335       | 1310 | 1255 |
|                                                                      | ON                           | ON    | OFF   | 1460                           | 1475 | 1500 | 1500 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
|                                                                      | ON                           | ON    | ON    | 1460                           | 1475 | 1500 | 1500 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
| Maximum Clg Airflow <sup>2</sup>                                     |                              |       |       | 1620                           | 1595 | 1565 | 1525 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
| CF Switches                                                          | SW3–3                        | SW3–2 | SW3–1 |                                |      |      |      |      |            |      |            |      |      |
| Cont. Fan Default:                                                   | OFF                          | OFF   | OFF   | 540                            | 565  | 555  | 555  | 535  | See Note 4 |      |            |      |      |
| Continuous Fan Airflow (SW3)                                         | OFF                          | OFF   | ON    | 540                            | 565  | 555  | 555  | 535  | See Note 4 |      |            |      |      |
|                                                                      | OFF                          | ON    | OFF   | 715                            | 735  | 745  | 760  | 765  | See Note 4 |      |            |      |      |
|                                                                      | OFF                          | ON    | ON    | 865                            | 910  | 935  | 950  | 965  | 955        | 950  | 955        | 955  | 945  |
|                                                                      | ON                           | OFF   | OFF   | 1120                           | 1125 | 1130 | 1145 | 1160 | 1165       | 1165 | 1160       | 1150 | 1150 |
|                                                                      | ON                           | OFF   | ON    | 1275                           | 1295 | 1315 | 1335 | 1340 | 1345       | 1340 | 1335       | 1310 | 1255 |
|                                                                      | ON                           | ON    | OFF   | 1460                           | 1475 | 1500 | 1500 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
|                                                                      | ON                           | ON    | ON    | 1460                           | 1475 | 1500 | 1500 | 1480 | 1440       | 1395 | 1355       | 1310 | 1255 |
| Heating (SW1)                                                        | Heating Airflow <sup>3</sup> |       |       | 960                            | 995  | 1015 | 1020 | 1030 | 1050       | 1055 | 1060       | 1055 | 1045 |



| BASED ON 350 CFM/TON (SETUP SWITCH SW1-5 OFF, SW4-3 OFF) |     |                  |      |      |      |                   |                   |      |
|----------------------------------------------------------|-----|------------------|------|------|------|-------------------|-------------------|------|
| SETUP SWITCH SW2 OR SW3 POSITIONS                        |     |                  |      |      |      |                   |                   |      |
| Model Size                                               |     |                  |      |      |      |                   |                   |      |
| 3T-040                                                   | DEF | 525 <sub>2</sub> | 700  | 875  | 1050 | 1225 <sub>1</sub> | 1400              | 1400 |
| 4T-060                                                   | DEF | 525 <sub>2</sub> | 700  | 875  | 1050 | 1225              | 1400 <sub>1</sub> | 1400 |
| 5T-080                                                   | DEF | 700 <sub>2</sub> | 875  | 1050 | 1225 | 1400              | 1750 <sub>1</sub> | 2100 |
| 5T-100                                                   | DEF | 700 <sub>2</sub> | 875  | 1050 | 1225 | 1400              | 1750 <sub>1</sub> | 2100 |
| BASED ON 400 CFM/TON (SETUP SWITCH SW1-5 ON, SW4-3 OFF)  |     |                  |      |      |      |                   |                   |      |
| SETUP SWITCH SW2 OR SW3 POSITIONS                        |     |                  |      |      |      |                   |                   |      |
| Model Size                                               |     |                  |      |      |      |                   |                   |      |
| 3T-040                                                   | DEF | 600 <sub>2</sub> | 800  | 1000 | 1200 | 1400 <sub>1</sub> | 1400              | 1400 |
| 4T-060                                                   | DEF | 600 <sub>2</sub> | 800  | 1000 | 1200 | 1400              | 1600 <sub>1</sub> | 1600 |
| 5T-080                                                   | DEF | 800 <sub>2</sub> | 1000 | 1200 | 1400 | 1600              | 2000 <sub>1</sub> | 2200 |
| 5T-100                                                   | DEF | 800 <sub>2</sub> | 1000 | 1200 | 1400 | 1600              | 2000 <sub>1</sub> | 2200 |
| BASED ON 325 CFM/TON (SETUP SWITCH SW1-5 OFF, SW4-3 ON)  |     |                  |      |      |      |                   |                   |      |
| SETUP SWITCH SW2 OR SW3 POSITIONS                        |     |                  |      |      |      |                   |                   |      |
| Model Size                                               |     |                  |      |      |      |                   |                   |      |
| 3T-040                                                   | DEF | 488 <sub>2</sub> | 650  | 813  | 975  | 1138 <sub>1</sub> | 1300              | 1300 |
| 4T-060                                                   | DEF | 488 <sub>2</sub> | 650  | 813  | 975  | 1138              | 1300 <sub>1</sub> | 1300 |
| 5T-080                                                   | DEF | 650 <sub>2</sub> | 813  | 975  | 1138 | 1300              | 1625 <sub>1</sub> | 1950 |
| 5T-100                                                   | DEF | 650 <sub>2</sub> | 813  | 975  | 1138 | 1300              | 1625 <sub>1</sub> | 1950 |
| BASED ON 370 CFM/TON (SETUP SWITCH SW1-5 ON, SW4-3 ON)   |     |                  |      |      |      |                   |                   |      |
| SETUP SWITCH SW2 OR SW3 POSITIONS                        |     |                  |      |      |      |                   |                   |      |
| Model Size                                               |     |                  |      |      |      |                   |                   |      |
| 3T-040                                                   | DEF | 558 <sub>2</sub> | 744  | 930  | 1116 | 1302 <sub>1</sub> | 1400              | 1400 |
| 4T-060                                                   | DEF | 558 <sub>2</sub> | 744  | 930  | 1116 | 1302              | 1488 <sub>1</sub> | 1488 |
| 5T-080                                                   | DEF | 744 <sub>2</sub> | 930  | 1116 | 1302 | 1488              | 1860 <sub>1</sub> | 2200 |
| 5T-100                                                   | DEF | 744 <sub>2</sub> | 930  | 1116 | 1302 | 1488              | 1860 <sub>1</sub> | 2200 |

- (1.) Default A/C airflow when A/C switches are in OFF position
- (2.) Default continuous fan airflow when CF switches are in OFF position
- (3.) Switch positions are also shown on furnace wiring diagram

**Fig. 42 - Cooling (A/C) or Continuous Fan Airflow Selection Chart**

#### **Check Safety Controls**

##### **1. Check Main Limit Switch(es)**

This control shuts off combustion control system and energizes air-circulating blower motor, if furnace overheats. By using this method to check limit control, it can be established that limit is functioning properly and will operate if there is a restricted duct system or motor failure. If limit control does not function during this test, cause must be determined and corrected.

- a. Run furnace for at least 5 minutes.
- b. Gradually block off return air with a piece of cardboard or sheet metal until the limit trips.
- c. Unblock return air to permit normal circulation.
- d. Burners will re-light when furnace cools down.

##### **2. Check draft safeguard switch.**

The purpose of this control is to cause the safe shutdown of the furnace during certain blocked vent conditions.

- a. Verify vent pipe is cool to the touch.

- b. Disconnect power to furnace and remove vent connector from furnace vent elbow.
- c. Restore power to furnace and set room thermostat above room temperature.
- d. After normal start-up, allow furnace to operate for 2 minutes, then block vent elbow in furnace 80 percent of vent area with a piece of flat sheet metal.
- e. Furnace should cycle off within 2 minutes. If gas does not shut off within 2 minutes, determine reason draft safeguard switch did not function properly and correct condition.
- f. Remove blockage from furnace vent elbow.
- g. Switch will auto-reset when it cools.
- h. Re-install vent connector.

### Checklist

1. Put away tools and instruments. Clean up debris.
2. Verify that switches SW1-1 and SW1-6 are OFF and other setup switches are set as desired. Verify that switches SW1-7 and SW1-8 for the blower OFF DELAY are set as desired per Table 10.
3. Verify that blower and burner access doors are properly installed.
4. Cycle test furnace with room thermostat.
5. Check operation of accessories per manufacturer's instructions.
6. Review User's Guide with owner.
7. Attach literature packet to furnace.

**Table 12 – Blower Off Delay Setup Switch**

| DESIRED HEATING MODE<br>BLOWER OFF DELAY (SEC.) | SETUP SWITCH<br>(SW1-7 AND 1-8)<br>POSITION |       |
|-------------------------------------------------|---------------------------------------------|-------|
|                                                 | SW1-7                                       | SW1-8 |
| 90                                              | OFF                                         | OFF   |
| 120                                             | ON                                          | OFF   |
| 150                                             | OFF                                         | ON    |
| 180                                             | ON                                          | ON    |

**Table 13 – Gas Rate (Cu Ft./Hr.)**

| SECONDS<br>FOR 1<br>REVOLU-<br>TION | SIZE OF TEST DIAL |                |             | SECONDS<br>FOR 1<br>REVOLU-<br>TION | SIZE OF TEST DIAL |                |             |
|-------------------------------------|-------------------|----------------|-------------|-------------------------------------|-------------------|----------------|-------------|
|                                     | 1<br>Cu<br>Ft.    | 2<br>Cu<br>Ft. | 5 Cu<br>Ft. |                                     | 1<br>Cu<br>Ft.    | 2<br>Cu<br>Ft. | 5 Cu<br>Ft. |
| 10                                  | 360               | 720            | 1800        | 50                                  | 72                | 144            | 360         |
| 11                                  | 327               | 655            | 1636        | 51                                  | 71                | 141            | 355         |
| 12                                  | 300               | 600            | 1500        | 52                                  | 69                | 138            | 346         |
| 13                                  | 277               | 555            | 1385        | 53                                  | 68                | 136            | 340         |
| 14                                  | 257               | 514            | 1286        | 54                                  | 67                | 133            | 333         |
| 15                                  | 240               | 480            | 1200        | 55                                  | 65                | 131            | 327         |
| 16                                  | 225               | 450            | 1125        | 56                                  | 64                | 129            | 321         |
| 17                                  | 212               | 424            | 1059        | 57                                  | 63                | 126            | 316         |
| 18                                  | 200               | 400            | 1000        | 58                                  | 62                | 124            | 310         |
| 19                                  | 189               | 379            | 947         | 59                                  | 61                | 122            | 305         |
| 20                                  | 180               | 360            | 900         | 60                                  | 60                | 120            | 300         |
| 21                                  | 171               | 343            | 857         | 62                                  | 58                | 116            | 290         |
| 22                                  | 164               | 327            | 818         | 64                                  | 56                | 112            | 281         |
| 23                                  | 157               | 313            | 783         | 66                                  | 54                | 109            | 273         |
| 24                                  | 150               | 300            | 750         | 68                                  | 53                | 106            | 265         |
| 25                                  | 144               | 288            | 720         | 70                                  | 51                | 103            | 257         |
| 26                                  | 138               | 277            | 692         | 72                                  | 50                | 100            | 250         |
| 27                                  | 133               | 267            | 667         | 74                                  | 48                | 97             | 243         |
| 28                                  | 129               | 257            | 643         | 76                                  | 47                | 95             | 237         |
| 29                                  | 124               | 248            | 621         | 78                                  | 46                | 92             | 231         |
| 30                                  | 120               | 240            | 600         | 80                                  | 45                | 90             | 225         |
| 31                                  | 116               | 232            | 581         | 82                                  | 44                | 88             | 220         |
| 32                                  | 113               | 225            | 563         | 84                                  | 43                | 86             | 214         |
| 33                                  | 109               | 218            | 545         | 86                                  | 42                | 84             | 209         |
| 34                                  | 106               | 212            | 529         | 88                                  | 41                | 82             | 205         |
| 35                                  | 103               | 206            | 514         | 90                                  | 40                | 80             | 200         |
| 36                                  | 100               | 200            | 500         | 92                                  | 39                | 78             | 196         |
| 37                                  | 97                | 195            | 486         | 94                                  | 38                | 76             | 192         |
| 38                                  | 95                | 189            | 474         | 96                                  | 38                | 75             | 188         |
| 39                                  | 92                | 185            | 462         | 98                                  | 37                | 74             | 184         |
| 40                                  | 90                | 180            | 450         | 100                                 | 36                | 72             | 180         |
| 41                                  | 88                | 176            | 439         | 102                                 | 35                | 71             | 178         |
| 42                                  | 86                | 172            | 429         | 104                                 | 35                | 69             | 173         |
| 43                                  | 84                | 167            | 419         | 106                                 | 34                | 68             | 170         |
| 44                                  | 82                | 164            | 409         | 108                                 | 33                | 67             | 167         |
| 45                                  | 80                | 160            | 400         | 110                                 | 33                | 65             | 164         |
| 46                                  | 78                | 157            | 391         | 112                                 | 32                | 64             | 161         |
| 47                                  | 76                | 153            | 383         | 116                                 | 31                | 62             | 155         |
| 48                                  | 75                | 150            | 375         | 120                                 | 30                | 60             | 150         |
| 49                                  | 73                | 147            | 367         |                                     |                   |                |             |

**Table 14 – Gas Valve Outlet Pressure for Gas Heat Values at  
Altitude – 40,000**

| (Tabulated Data Based on 40,000 BTUH Input for 0-ft (0m) to 5000-ft (1524-m) above sea level) |                                                |                                 |                                      |      |      |      |  |
|-----------------------------------------------------------------------------------------------|------------------------------------------------|---------------------------------|--------------------------------------|------|------|------|--|
| ALTITUDE RANGE<br>ft (m)                                                                      |                                                | AVG. GAS HEAT VALUE AT ALTITUDE | SPECIFIC GRAVITY OF NATURAL GAS      |      |      |      |  |
|                                                                                               |                                                |                                 | 0.58                                 | 0.60 | 0.62 | 0.64 |  |
|                                                                                               |                                                |                                 | Gas Valve Outlet Pressure (in. W.C.) |      |      |      |  |
| U.S.A.                                                                                        | 0<br>(0)<br><br>to<br><br>2000<br>(610)        | 900                             | 3.0                                  | 3.1  | 3.2  | 3.3  |  |
|                                                                                               |                                                | 925                             | 2.8                                  | 2.9  | 3.0  | 3.1  |  |
|                                                                                               |                                                | 950                             | 2.7                                  | 2.8  | 2.9  | 3.0  |  |
|                                                                                               |                                                | 975                             | 2.6                                  | 2.6  | 2.7  | 2.8  |  |
|                                                                                               |                                                | 1000                            | 2.4                                  | 2.5  | 2.6  | 2.7  |  |
|                                                                                               |                                                | 1025                            | 2.3                                  | 2.4  | 2.5  | 2.5  |  |
|                                                                                               |                                                | 1050                            | 2.2                                  | 2.3  | 2.4  | 2.4  |  |
|                                                                                               |                                                | 1075                            | 2.1                                  | 2.2  | 2.2  | 2.3  |  |
| 1100                                                                                          | 2.0                                            | 2.1                             | 2.1                                  | 2.2  |      |      |  |
| U.S.A.                                                                                        | 2001<br>(611)<br><br>to<br><br>3000<br>(914)   | 800                             | 3.2                                  | 3.3  | 3.5  | 3.6  |  |
|                                                                                               |                                                | 825                             | 3.0                                  | 3.1  | 3.3  | 3.4  |  |
|                                                                                               |                                                | 850                             | 2.9                                  | 3.0  | 3.1  | 3.2  |  |
|                                                                                               |                                                | 875                             | 2.7                                  | 2.8  | 2.9  | 3.0  |  |
|                                                                                               |                                                | 900                             | 2.6                                  | 2.6  | 2.7  | 2.8  |  |
|                                                                                               |                                                | 925                             | 2.4                                  | 2.5  | 2.6  | 2.7  |  |
|                                                                                               |                                                | 950                             | 2.3                                  | 2.4  | 2.5  | 2.5  |  |
|                                                                                               |                                                | 975                             | 2.2                                  | 2.3  | 2.3  | 2.4  |  |
| 1000                                                                                          | 2.1                                            | 2.1                             | 2.2                                  | 2.3  |      |      |  |
| U.S.A.<br>Only                                                                                | 3001<br>(915)<br>to<br><br>4000<br>(1219)      | 775                             | 3.2                                  | 3.3  | 3.4  | 3.5  |  |
|                                                                                               |                                                | 800                             | 3.0                                  | 3.1  | 3.2  | 3.3  |  |
|                                                                                               |                                                | 825                             | 2.8                                  | 2.9  | 3.0  | 3.1  |  |
|                                                                                               |                                                | 850                             | 2.6                                  | 2.7  | 2.8  | 2.9  |  |
|                                                                                               |                                                | 875                             | 2.5                                  | 2.6  | 2.7  | 2.8  |  |
|                                                                                               |                                                | 900                             | 2.4                                  | 2.4  | 2.5  | 2.6  |  |
|                                                                                               |                                                | 925                             | 2.2                                  | 2.3  | 2.4  | 2.5  |  |
|                                                                                               |                                                | 950                             | 2.1                                  | 2.2  | 2.3  | 2.3  |  |
| 975                                                                                           | 2.0                                            | 2.1                             | 2.2                                  | 2.2  |      |      |  |
| 1000                                                                                          | 1.9                                            | 2.0                             | 2.0                                  | 2.1  |      |      |  |
| U.S.A.<br>Only                                                                                | 4001<br>(1220)<br><br>to<br><br>5000<br>(1524) | 750                             | 3.1                                  | 3.2  | 3.4  | 3.5  |  |
|                                                                                               |                                                | 775                             | 2.9                                  | 3.0  | 3.1  | 3.2  |  |
|                                                                                               |                                                | 800                             | 2.8                                  | 2.9  | 2.9  | 3.0  |  |
|                                                                                               |                                                | 825                             | 2.6                                  | 2.7  | 2.8  | 2.9  |  |
|                                                                                               |                                                | 850                             | 2.4                                  | 2.5  | 2.6  | 2.7  |  |
|                                                                                               |                                                | 875                             | 2.3                                  | 2.4  | 2.5  | 2.5  |  |
|                                                                                               |                                                | 900                             | 2.2                                  | 2.3  | 2.3  | 2.4  |  |
|                                                                                               |                                                | 925                             | 2.1                                  | 2.1  | 2.2  | 2.3  |  |
|                                                                                               |                                                | 950                             | 2.0                                  | 2.0  | 2.1  | 2.2  |  |
|                                                                                               |                                                | 975                             | 1.9                                  | 1.9  | 2.0  | 2.0  |  |
| 1000                                                                                          | 1.8                                            | 1.8                             | 1.9                                  | 1.9  |      |      |  |

**Table 15 – Gas Valve Outlet Pressure for Gas Heat Values at  
Altitude – 60,000**

| (Tabulated Data Based on 60,000 BTUH Input for 0-ft (0m) to 5000-ft (1524-m) above sea level) |                                        |                                                      |                                         |      |      |      |
|-----------------------------------------------------------------------------------------------|----------------------------------------|------------------------------------------------------|-----------------------------------------|------|------|------|
| ALTITUDE RANGE<br>ft (m)                                                                      |                                        | AVG. GAS<br>HEAT VALUE<br>AT ALTITUDE<br>(Btu/cu ft) | SPECIFIC GRAVITY OF<br>NATURAL GAS      |      |      |      |
|                                                                                               |                                        |                                                      | 0.58                                    | 0.60 | 0.62 | 0.64 |
|                                                                                               |                                        |                                                      | Gas Valve Outlet Pressure<br>(in. W.C.) |      |      |      |
| U.S.A.                                                                                        | 0<br>(0)<br>to<br>2000<br>(610)        | 900                                                  | 3.0                                     | 3.1  | 3.2  | 3.3  |
|                                                                                               |                                        | 925                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                               |                                        | 950                                                  | 2.7                                     | 2.8  | 2.9  | 3.0  |
|                                                                                               |                                        | 975                                                  | 2.6                                     | 2.6  | 2.7  | 2.8  |
|                                                                                               |                                        | 1000                                                 | 2.4                                     | 2.5  | 2.6  | 2.7  |
|                                                                                               |                                        | 1025                                                 | 2.3                                     | 2.4  | 2.5  | 2.5  |
|                                                                                               |                                        | 1050                                                 | 2.2                                     | 2.3  | 2.4  | 2.4  |
|                                                                                               |                                        | 1075                                                 | 2.1                                     | 2.2  | 2.2  | 2.3  |
|                                                                                               |                                        | 1100                                                 | 2.0                                     | 2.1  | 2.1  | 2.2  |
| U.S.A.                                                                                        | 2001<br>(611)<br>to<br>3000<br>(914)   | 800                                                  | 3.2                                     | 3.3  | 3.5  | 3.6  |
|                                                                                               |                                        | 825                                                  | 3.0                                     | 3.1  | 3.3  | 3.4  |
|                                                                                               |                                        | 850                                                  | 2.9                                     | 3.0  | 3.1  | 3.2  |
|                                                                                               |                                        | 875                                                  | 2.7                                     | 2.8  | 2.9  | 3.0  |
|                                                                                               |                                        | 900                                                  | 2.6                                     | 2.6  | 2.7  | 2.8  |
|                                                                                               |                                        | 925                                                  | 2.4                                     | 2.5  | 2.6  | 2.7  |
|                                                                                               |                                        | 950                                                  | 2.3                                     | 2.4  | 2.5  | 2.5  |
|                                                                                               |                                        | 975                                                  | 2.2                                     | 2.3  | 2.3  | 2.4  |
|                                                                                               |                                        | 1000                                                 | 2.1                                     | 2.1  | 2.2  | 2.3  |
| U.S.A.<br>Only                                                                                | 3001<br>(915)<br>to<br>4000<br>(1219)  | 775                                                  | 3.2                                     | 3.3  | 3.4  | 3.5  |
|                                                                                               |                                        | 800                                                  | 3.0                                     | 3.1  | 3.2  | 3.3  |
|                                                                                               |                                        | 825                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                               |                                        | 850                                                  | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                               |                                        | 875                                                  | 2.5                                     | 2.6  | 2.7  | 2.8  |
|                                                                                               |                                        | 900                                                  | 2.4                                     | 2.4  | 2.5  | 2.6  |
|                                                                                               |                                        | 925                                                  | 2.2                                     | 2.3  | 2.4  | 2.5  |
|                                                                                               |                                        | 950                                                  | 2.1                                     | 2.2  | 2.3  | 2.3  |
|                                                                                               |                                        | 975                                                  | 2.0                                     | 2.1  | 2.2  | 2.2  |
|                                                                                               |                                        | 1000                                                 | 1.9                                     | 2.0  | 2.0  | 2.1  |
| U.S.A.<br>Only                                                                                | 4001<br>(1220)<br>to<br>5000<br>(1524) | 750                                                  | 3.1                                     | 3.2  | 3.4  | 3.5  |
|                                                                                               |                                        | 775                                                  | 2.9                                     | 3.0  | 3.1  | 3.2  |
|                                                                                               |                                        | 800                                                  | 2.8                                     | 2.9  | 2.9  | 3.0  |
|                                                                                               |                                        | 825                                                  | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                               |                                        | 850                                                  | 2.4                                     | 2.5  | 2.6  | 2.7  |
|                                                                                               |                                        | 875                                                  | 2.3                                     | 2.4  | 2.5  | 2.5  |
|                                                                                               |                                        | 900                                                  | 2.2                                     | 2.3  | 2.3  | 2.4  |
|                                                                                               |                                        | 925                                                  | 2.1                                     | 2.1  | 2.2  | 2.3  |
|                                                                                               |                                        | 950                                                  | 2.0                                     | 2.0  | 2.1  | 2.2  |
|                                                                                               |                                        | 975                                                  | 1.9                                     | 1.9  | 2.0  | 2.0  |
|                                                                                               |                                        | 1000                                                 | 1.8                                     | 1.8  | 1.9  | 1.9  |

**Table 16 – Gas Valve Outlet Pressure for Gas Heat Values at  
Altitude – 80,000**

| (Tabulated Data Based on 80,000 BTUH Input, for 0-ft (0-m) to 5000-ft (1524-m) above sea level) |                                        |                                                      |                                         |      |      |      |
|-------------------------------------------------------------------------------------------------|----------------------------------------|------------------------------------------------------|-----------------------------------------|------|------|------|
| ALTITUDE RANGE<br>ft (m)                                                                        |                                        | AVG. GAS<br>HEAT VALUE<br>AT ALTITUDE<br>(Btu/cu ft) | SPECIFIC GRAVITY OF<br>NATURAL GAS      |      |      |      |
|                                                                                                 |                                        |                                                      | 0.58                                    | 0.60 | 0.62 | 0.64 |
|                                                                                                 |                                        |                                                      | Gas Valve Outlet Pressure<br>(in. W.C.) |      |      |      |
| U.S.A.                                                                                          | 0<br>(0)<br>to<br>2000<br>(610)        | 900                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                 |                                        | 925                                                  | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                                 |                                        | 950                                                  | 2.5                                     | 2.6  | 2.7  | 2.8  |
|                                                                                                 |                                        | 975                                                  | 2.4                                     | 2.5  | 2.5  | 2.6  |
|                                                                                                 |                                        | 1000                                                 | 2.3                                     | 2.3  | 2.4  | 2.5  |
|                                                                                                 |                                        | 1025                                                 | 2.1                                     | 2.2  | 2.3  | 2.4  |
|                                                                                                 |                                        | 1050                                                 | 2.0                                     | 2.1  | 2.2  | 2.3  |
|                                                                                                 |                                        | 1075                                                 | 1.9                                     | 2.0  | 2.1  | 2.1  |
|                                                                                                 |                                        | 1100                                                 | 1.9                                     | 1.9  | 2.0  | 2.1  |
| U.S.A.                                                                                          | 2001<br>(611)<br>to<br>3000<br>(914)   | 800                                                  | 3.0                                     | 3.1  | 3.1  | 3.1  |
|                                                                                                 |                                        | 825                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                 |                                        | 850                                                  | 2.7                                     | 2.8  | 2.9  | 3.0  |
|                                                                                                 |                                        | 875                                                  | 2.5                                     | 2.6  | 2.7  | 2.8  |
|                                                                                                 |                                        | 900                                                  | 2.4                                     | 2.5  | 2.5  | 2.6  |
|                                                                                                 |                                        | 925                                                  | 2.2                                     | 2.3  | 2.4  | 2.5  |
|                                                                                                 |                                        | 950                                                  | 2.1                                     | 2.2  | 2.3  | 2.4  |
|                                                                                                 |                                        | 975                                                  | 2.0                                     | 2.1  | 2.2  | 2.2  |
|                                                                                                 |                                        | 1000                                                 | 1.9                                     | 2.0  | 2.1  | 2.1  |
| U.S.A.<br>Only                                                                                  | 3001<br>(915)<br>to<br>4000<br>(1219)  | 775                                                  | 3.0                                     | 3.1  | 3.1  | 3.1  |
|                                                                                                 |                                        | 800                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                 |                                        | 825                                                  | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                                 |                                        | 850                                                  | 2.5                                     | 2.6  | 2.6  | 2.7  |
|                                                                                                 |                                        | 875                                                  | 2.3                                     | 2.4  | 2.5  | 2.6  |
|                                                                                                 |                                        | 900                                                  | 2.2                                     | 2.3  | 2.3  | 2.4  |
|                                                                                                 |                                        | 925                                                  | 2.1                                     | 2.1  | 2.2  | 2.3  |
|                                                                                                 |                                        | 950                                                  | 2.0                                     | 2.0  | 2.1  | 2.2  |
|                                                                                                 |                                        | 975                                                  | 1.9                                     | 1.9  | 2.0  | 2.1  |
|                                                                                                 |                                        | 1000                                                 | 1.8                                     | 1.8  | 1.9  | 2.0  |
| U.S.A.<br>Only                                                                                  | 4001<br>(1220)<br>to<br>5000<br>(1524) | 750                                                  | 2.9                                     | 3.0  | 3.1  | 3.1  |
|                                                                                                 |                                        | 775                                                  | 2.7                                     | 2.8  | 2.9  | 3.0  |
|                                                                                                 |                                        | 800                                                  | 2.6                                     | 2.7  | 2.8  | 2.8  |
|                                                                                                 |                                        | 825                                                  | 2.4                                     | 2.5  | 2.6  | 2.7  |
|                                                                                                 |                                        | 850                                                  | 2.3                                     | 2.4  | 2.4  | 2.5  |
|                                                                                                 |                                        | 875                                                  | 2.1                                     | 2.2  | 2.3  | 2.4  |
|                                                                                                 |                                        | 900                                                  | 2.0                                     | 2.1  | 2.2  | 2.2  |
|                                                                                                 |                                        | 925                                                  | 1.9                                     | 2.0  | 2.0  | 2.1  |
|                                                                                                 |                                        | 950                                                  | 1.8                                     | 1.9  | 1.9  | 2.0  |
|                                                                                                 |                                        | 975                                                  | 1.8                                     | 1.8  | 1.8  | 1.9  |
|                                                                                                 |                                        | 1000                                                 | 1.8                                     | 1.8  | 1.8  | 1.8  |

**Table 17 – Gas Valve Outlet Pressure for Gas Heat Values at  
Altitude – 100,000**

| (Tabulated Data Based on 100,000 BTUH Input, for 0-ft (0-m)<br>to 5000-ft (1524-m) above sea level) |                                                |                                                      |                                         |      |      |      |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------|------------------------------------------------------|-----------------------------------------|------|------|------|
| ALTITUDE<br>RANGE<br>ft (m)                                                                         |                                                | AVG. GAS<br>HEAT VALUE<br>AT ALTITUDE<br>(Btu/cu ft) | SPECIFIC GRAVITY OF<br>NATURAL GAS      |      |      |      |
|                                                                                                     |                                                |                                                      | 0.58                                    | 0.60 | 0.62 | 0.64 |
|                                                                                                     |                                                |                                                      | Gas Valve Outlet Pressure<br>(in. W.C.) |      |      |      |
| U.S.A.                                                                                              | 0<br>(0)<br><br>to<br><br>2000<br>(610)        | 900                                                  | 3.3                                     | 3.4  | 3.5  | 3.6  |
|                                                                                                     |                                                | 925                                                  | 3.1                                     | 3.2  | 3.3  | 3.4  |
|                                                                                                     |                                                | 950                                                  | 2.9                                     | 3.0  | 3.1  | 3.2  |
|                                                                                                     |                                                | 975                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                     |                                                | 1000                                                 | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                                     |                                                | 1025                                                 | 2.5                                     | 2.6  | 2.7  | 2.8  |
|                                                                                                     |                                                | 1050                                                 | 2.4                                     | 2.5  | 2.6  | 2.6  |
|                                                                                                     |                                                | 1075                                                 | 2.3                                     | 2.4  | 2.4  | 2.5  |
|                                                                                                     |                                                | 1100                                                 | 2.2                                     | 2.3  | 2.3  | 2.4  |
| U.S.A.                                                                                              | 2001<br>(611)<br><br>to<br><br>3000<br>(914)   | 800                                                  | 3.5                                     | 3.7  | 3.8  | 2.8  |
|                                                                                                     |                                                | 825                                                  | 3.3                                     | 3.4  | 3.6  | 3.7  |
|                                                                                                     |                                                | 850                                                  | 3.1                                     | 3.2  | 3.3  | 3.5  |
|                                                                                                     |                                                | 875                                                  | 3.0                                     | 3.1  | 3.2  | 3.3  |
|                                                                                                     |                                                | 900                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                     |                                                | 925                                                  | 2.6                                     | 2.7  | 2.8  | 2.9  |
|                                                                                                     |                                                | 950                                                  | 2.5                                     | 2.6  | 2.7  | 2.8  |
|                                                                                                     |                                                | 975                                                  | 2.4                                     | 2.5  | 2.5  | 2.6  |
|                                                                                                     |                                                | 1000                                                 | 2.3                                     | 2.3  | 2.4  | 2.5  |
| U.S.A.<br>Only                                                                                      | 3001<br>(915)<br><br>to<br><br>4000<br>(1219)  | 775                                                  | 3.5                                     | 3.6  | 3.7  | 3.8  |
|                                                                                                     |                                                | 800                                                  | 3.3                                     | 3.4  | 3.5  | 3.6  |
|                                                                                                     |                                                | 825                                                  | 3.1                                     | 3.2  | 3.3  | 3.4  |
|                                                                                                     |                                                | 850                                                  | 2.9                                     | 3.0  | 3.1  | 3.2  |
|                                                                                                     |                                                | 875                                                  | 2.7                                     | 2.8  | 2.9  | 3.0  |
|                                                                                                     |                                                | 900                                                  | 2.6                                     | 2.7  | 2.8  | 2.8  |
|                                                                                                     |                                                | 925                                                  | 2.4                                     | 2.5  | 2.6  | 2.7  |
|                                                                                                     |                                                | 950                                                  | 2.3                                     | 2.4  | 2.5  | 2.6  |
| U.S.A.<br>Only                                                                                      | 4001<br>(1220)<br><br>to<br><br>5000<br>(1524) | 975                                                  | 2.2                                     | 2.3  | 2.3  | 2.4  |
|                                                                                                     |                                                | 1000                                                 | 2.1                                     | 2.2  | 2.2  | 2.3  |
|                                                                                                     |                                                | 750                                                  | 3.4                                     | 3.5  | 3.7  | 3.8  |
|                                                                                                     |                                                | 775                                                  | 3.2                                     | 3.3  | 3.4  | 3.5  |
|                                                                                                     |                                                | 800                                                  | 3.0                                     | 3.1  | 3.2  | 3.3  |
|                                                                                                     |                                                | 825                                                  | 2.8                                     | 2.9  | 3.0  | 3.1  |
|                                                                                                     |                                                | 850                                                  | 2.7                                     | 2.8  | 2.9  | 2.9  |
|                                                                                                     |                                                | 875                                                  | 2.5                                     | 2.6  | 2.7  | 2.8  |
| U.S.A.<br>Only                                                                                      | 5001<br>(1524)<br><br>to<br><br>6000<br>(1829) | 900                                                  | 2.4                                     | 2.5  | 2.5  | 2.6  |
|                                                                                                     |                                                | 925                                                  | 2.3                                     | 2.3  | 2.4  | 2.5  |
|                                                                                                     |                                                | 950                                                  | 2.1                                     | 2.2  | 2.3  | 2.4  |
|                                                                                                     |                                                | 975                                                  | 2.0                                     | 2.1  | 2.2  | 2.2  |
|                                                                                                     |                                                | 1000                                                 | 1.9                                     | 2.0  | 2.1  | 2.1  |
|                                                                                                     |                                                | 750                                                  | 3.4                                     | 3.5  | 3.7  | 3.8  |
|                                                                                                     |                                                | 775                                                  | 3.2                                     | 3.3  | 3.4  | 3.5  |
|                                                                                                     |                                                | 800                                                  | 3.0                                     | 3.1  | 3.2  | 3.3  |

## SERVICE AND MAINTENANCE PROCEDURES

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. A qualified service person should inspect the furnace once a year.

## ⚠ WARNING

### FIRE, INJURY, OR DEATH HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

The ability to properly perform maintenance on this equipment requires certain knowledge, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any maintenance on this equipment other than those procedures recommended in the User's Manual.

## ⚠ WARNING

### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing.

## ⚠ CAUTION

### ELECTRICAL OPERATION HAZARD

Failure to follow this caution may result in improper furnace operation or failure of furnace.

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

## INTRODUCTION

### GENERAL

These instructions are written as if the furnace is installed in an upflow application. An upflow furnace application is where the blower is located below the combustion and controls section of the furnace, and conditioned air is discharged upward. Since this furnace can be installed in any of the 4 positions shown in Fig. 4, you must revise your orientation to component location accordingly.

### ELECTRICAL CONTROLS AND WIRING

## ⚠ WARNING

### ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death.

There may be more than one electrical supply to the furnace. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label.

The electrical ground and polarity for 115-v wiring must be properly maintained. Refer to Fig. 24 for field wiring information and to Fig. 45 for furnace wiring information.

**NOTE:** If the polarity is not correct, the STATUS LED on the control will flash rapidly and prevent the furnace from heating.

The control system also requires an earth ground for proper operation of the control and flame-sensing electrode.

The 24-v circuit contains an automotive-type, 3-amp. fuse located on the control. (See Fig. 45) Any shorts of the 24-v wiring during installation, service, or maintenance will cause this fuse to blow. If fuse replacement is required, use ONLY a 3-amp. fuse. The control LED will display status code 24 when fuse needs to be replaced.

Proper instrumentation is required to service electrical controls. The control in this furnace is equipped with a Status Code LED (Light-Emitting Diode) to aid in installation, servicing, and troubleshooting. Status codes can be viewed at the sight glass in blower access door. The amber furnace control LED is either ON continuously, rapid flashing, or a code composed of 2 digits. The first digit is the number of short flashes, the second digit is the number of long flashes..

For an explanation of status codes, refer to service label located on blower access door or Fig. 38 and the troubleshooting guide which can be obtained from your distributor.

See Fig. 38, a brief Troubleshooting Guide.

For Variable Speed ECM Controls the stored status codes will NOT be erased from the control memory, when 115- or 24-v power is interrupted. The control will store up to the last 7 Status Codes in order of occurrence.

1. To retrieve status codes, proceed with the following:

**NOTE:** NO thermostat signal may be present at control, and all blower-OFF delays must be completed.

- a. Leave 115-v power to furnace turned on.
- b. Remove outer access door.
- c. Look into blower access door sight glass for current LED status.
- d. Remove blower access door.

**NOTE:** The Status Codes cannot be retrieved by disconnecting the limit switch or draft safeguard switch. To retrieve Status Codes, follow the procedure below.

2. Turn Setup Switch, SW1-1 "ON."
3. Manually close blower access door switch.
4. Control will flash up to 7 Status Codes.
5. The last Status Code, or 8th Code, will be code 11 .
6. Turn SW1-1 "OFF."
7. The Amber LED will be continuously-lit which indicates proper operation.
8. Release blower access door switch, install blower access door and replace outer door or refer to the SERVICE label on the front of the blower access door for more information.

#### **Component Self-Test**

Component Test can ONLY be initiated by performing the following:

1. Remove outer access door.
2. Remove blower access door.
3. Remove the wire from the "R" terminal of the control board.
4. Turn Setup Switch, SW-1-6 "ON."
5. Manually close blower access door switch.

Blower access door switch opens 115-v power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

## **⚠ WARNING**

### **ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could result in personal injury, or death.

Blower access door switch opens 115-v power to furnace control. No component operation can occur unless switch is closed. Exercise caution to avoid electrical shock from exposed electrical components when manually closing this switch for service purposes.

6. Component Test sequence will function as follows:

- a. Inducer motor turns on at 50% duty cycle for 15 secs, then stays on for the entire test.
- b. Hot surface ignitor is energized for 15 sec, then deenergized.
- c. Blower operates for 15 sec, then turns off.
- d. After component test is completed, one or more status codes (11, 25, 41 or 42) will flash. See component test section of service label for explanation of status codes.

**NOTE:** To repeat component test, turn setup switch SW1-6 OFF then back ON.

- e. Turn setup switch SW1-6 OFF.

7. RELEASE BLOWER ACCESS DOOR SWITCH, reattach wire to "R" terminal on furnace control board, replace blower access door, and replace outer access door.

### **CARE AND MAINTENANCE**

## **⚠ WARNING**

### **FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death and/or property damage.

Never store anything on, near, or in contact with the furnace, such as:

1. Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners, or other cleaning tools.
2. Soap powders, bleaches, waxes or other cleaning compounds, plastic or plastic containers, gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids, or other volatile fluids.
3. Paint thinners and other painting compounds, paper bags, or other paper products.

For continuing high performance and to minimize possible equipment failure, periodic maintenance must be performed on this equipment. Consult your local dealer about proper frequency of maintenance and the availability of a maintenance contract.

## **⚠ WARNING**

### **ELECTRICAL SHOCK AND FIRE HAZARD**

Failure to follow this warning could result in personal injury, death or property damage.

Turn off the gas and electrical supplies to the unit and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.



## ⚠ WARNING

### CARBON MONOXIDE POISONING AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.  
Never operate unit without a filter or with filter access door removed.

## ⚠ CAUTION

### CUT HAZARD

Failure to follow this caution may result in personal injury.  
Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts and servicing furnaces.

The minimum maintenance on this furnace is as follows:

1. Check and clean/replace air filter each month or more frequently if required. Replace if torn.
2. Check burner inlet elbow opening for cleanliness and any visible debris. Burner assembly removal should only be performed for troubleshooting and diagnosis of operational issues. Refer to troubleshooting and service guide.
3. Check blower motor and wheel for cleanliness each heating and cooling season. Clean as necessary.
4. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.
5. Inspect the vent pipe/vent system before each heating season for rust, corrosion, water leakage, sagging pipes or broken fittings. Have vent pipes/vent system serviced by a qualified service agency.
6. Inspect any accessories attached to the furnace such as a humidifier or electronic air cleaner. Perform any service or maintenance to the accessories as recommended in the accessory instructions.

### CLEANING AND/OR REPLACING AIR FILTER

The air filter arrangement will vary depending on the application. The filter is exterior to the furnace casing.

**NOTE:** If the filter has an airflow direction arrow, the arrow must point towards the blower.

**Table 18 – Filter Size Information (In. / mm)**

| FURNACE CASING WIDTH In. (mm) | FILTER SIZE (In. / mm)         |                                | FILTER TYPE |
|-------------------------------|--------------------------------|--------------------------------|-------------|
|                               | Side Return                    | Bottom Return                  |             |
| 17–1/2 (445)                  | 16 X 25 X 3/4 (406 x 635 x 19) | 16 X 25 X 3/4 (406 x 635 x 19) | Washable*   |
| 21 (533)                      | 16 x 25 x 3/4 (406 x 635 x 19) | 20 X 25 X 3/4 (508 x 635 x 19) | Washable*   |

\* Recommended

Accessory media cabinet filter procedures :

1. Turn off electrical supply to furnace before removing filter access door.
2. Remove filter cabinet door.
3. Slide filter out of cabinet.
4. If equipped with permanent, washable 3/4-in. (19 mm) filter, clean filter by spraying cold tap water through filter in opposite direction of airflow. Rinse filter and let dry. Oil-ing or coating of the filter is not recommended. See Table 18 for size information.
5. If equipped with factory-specified disposable media filter, replace only with media filter having the same part num-

ber and size. For expandable replacement media, refer to the instructions included with the replacement media.

6. Slide filter into cabinet.
7. Replace filter cabinet door.
8. Turn on electrical supply to furnace.

### BLOWER MOTOR AND WHEEL

## ⚠ WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Blower access door switch opens 115-v power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

**NOTE:** The blower wheel should not be dropped or bent as balance will be affected. The following steps should be performed by a qualified service agency.

To ensure long life and high efficiency, clean accumulated dirt and grease from blower wheel and motor annually.

The inducer and blower motors are pre-lubricated and require no additional lubrication. These motors can be identified by the absence of oil ports on each end of the motor.

Clean blower motor and wheel as follows:

1. Turn off electrical supply to furnace.
2. Remove outer door.
3. Remove two screws from blower access door and remove blower access door.
4. All factory wires can be left connected, but field thermostat connections may need to be disconnected depending on their length and routing.
5. Remove two screws holding blower assembly to blower deck and slide blower assembly out of furnace.
6. Clean blower wheel and motor using a vacuum with soft brush attachment. Blower wheel blades may be cleaned with a small paint or flux brush. Do not remove or disturb balance weights (clips) on blower wheel blades.
7. Vacuum any loose dust from blower housing, wheel and motor.
8. If a greasy residue is present on blower wheel, remove wheel from the blower housing and wash it with an appropriate degreaser. To remove wheel:

**NOTE:** Before disassembly, mark blower motor, and blower housing so motor and each arm is positioned at the same location during reassembly.

9. Reassemble motor and blower by reversing steps 9d finishing with 9a. Be sure to reattach ground wire to the blower housing.
  - a. Disconnect power choke wires (if used) and ground wire attached to blower housing.
  - b. Remove screws securing cutoff plate and remove cutoff plate from housing.
  - c. Loosen set screw holding blower wheel on motor shaft (160+/-20 in.-lb. when reassembling).
  - d. Remove bolts holding motor to blower housing and slide motor out of wheel (40+/-10 in.-lb. when reassembling).
  - e. Remove blower wheel from housing.
  - f. Clean wheel and housing.
10. Verify that blower wheel is centered in blower housing and set screw contacts the flat portion of the motor shaft.

Loosen set screw on blower wheel and reposition if necessary.

11. Spin the blower wheel by hand to verify that the wheel does not rub on the housing.
12. Reinstall blower assembly in furnace.
13. Reinstall two screws securing blower assembly to blower deck.

## ⚠ CAUTION

### UNIT DAMAGE HAZARD

Failure to follow this caution may result in shortened heat exchanger life.

Heating fan speed(s) **MUST** be adjusted to provide proper air temperature rise as specified on the rating plate. Recommended operation is at the midpoint of the rise range or slightly above. Refer to "SET TEMPERATURE RISE" under START-UP, ADJUSTMENT, and SAFETY CHECK.

**NOTE:** Refer to Table 11 for motor speed lead relocation if leads were not identified before disconnection.

14. Refer to furnace wiring diagram, and connect thermostat leads if previously disconnected.
15. To check blower for proper rotation:
  - a. Turn on electrical supply.

## ⚠ WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, or death.

Blower access door switch opens 115-v power to furnace control. No component operation can occur unless switch is closed. Exercise caution to avoid electrical shock from exposed electrical components when manually closing this switch for service purposes.

- b. Manually close blower access door switch.
  - c. Verify blower is rotating in the correct direction.
16. If furnace is operating properly, **RELEASE BLOWER ACCESS DOOR SWITCH**. Remove any jumpers or reconnect any disconnected thermostat leads. Replace blower access door.
17. Reinstall outer door.
18. Cycle furnace through one complete heating and cooling cycle. Verify the furnace temperature rise as shown in "Adjustments" Section. Adjust temperature rise as shown in "Adjustments" Section. If outdoor temperature is below 70°F, (21°C) turn off circuit breaker to outdoor unit before running furnace in the cooling cycle. Turn outdoor circuit breaker on after completing cooling cycle.

### FLAME SENSOR CLEANING AND SERVICING IGNITOR

#### Cleaning Flame Sensor

The following items must be performed by a qualified service technician. If the flame sensor develops an accumulation of light dirt or dust, it may be cleaned by using the following procedure:

## ⚠ WARNING

### ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

Refer to Fig. 43.

1. Disconnect power at external disconnect, fuse or circuit breaker.
2. Turn off gas at external shut-off or gas meter.
3. Remove control door and set aside.
4. Turn electric switch on gas valve to OFF.
5. Disconnect Flame Sensor wire from Flame Sensor.
6. Remove the flame sensor from the burner assembly.
7. (Optional) Remove the Hot Surface Ignitor (HSI) and bracket from the burner assembly.
8. Check ignitor resistance. Nominal resistance is 40 to 70 ohms at room temperature and is stable over the life of the ignitor.
9. Clean the flame sensor with fine steel wool (0000 grade). Do not use sand paper or emery cloth.

#### To reinstall ignitor and flame sensor:

1. Install the Hot Surface Ignitor (HSI) and bracket with gasket in burner assembly.
2. Install flame sensor in burner assembly.
3. When installing the HSI and flame sensor, 1/4" screws that are the same size of those removed must be used. Do not use longer screws.

**NOTE:** If insulation assembly is damaged, do not attempt to repair, must be replaced with insulation kit.

**NOTE:** Proper use of Personal Protective Equipment (PPE) must be followed, including safety glasses, gloves, and dust mask when removing and reinstalling the heat exchanger insulation assembly.

4. Connect the wire for the flame sensor.
5. Connect the wire for the Hot Surface Ignitor.

## ⚠ WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

6. Turn gas on at electric switch on gas valve and at external shut-off or meter
7. Turn power on at external disconnect, fuse or circuit breaker.
8. Run the furnace through two complete heating cycles to check for proper operation
9. Install control door when complete.

## CLEANING HEAT EXCHANGER

The following steps should be performed by a qualified service agency:

**NOTE:** If the heat exchangers get a heavy accumulation of soot and carbon, they should be replaced rather than trying to clean them thoroughly. A heavy build-up of soot and carbon indicates that a problem exists which needs to be corrected, such as improper adjustment of gas valve outlet pressure, insufficient or poor quality combustion air, incorrect size or damaged orifice(s), improper gas, or a restricted heat exchanger. Action must be taken to correct the problem.

If it becomes necessary to clean the heat exchangers because of dust or corrosion, proceed as follows:

1. Turn OFF gas and electrical power to furnace.
2. Remove outer access door.
3. Disconnect vent connector from furnace vent elbow.
4. Disconnect wires to the following components. Mark wires to aid in reconnection of (be careful when disconnecting wires from switches because damage may occur):
  - a. Inducer motor
  - b. Transducer
  - c. Limit over-temperature switch
  - d. Gas valve
  - e. Hot surface ignitor
  - f. Flame-sensing electrode
  - g. Burner thermal switch
  - h. DSS Draft Safeguard
5. Remove screws that fasten the inducer cover assembly to the cell panel. Be careful not to damage the collector box. Inducer assembly and elbow need not be removed from collector box.
6. Disconnect gas supply line from gas valve.
7. Remove screws that attach the burner assembly to the cell panel. The gas valve and burners tube need not be removed from burner box.

**NOTE:** Be very careful when removing burner assembly to avoid breaking ignitor.


8. Remove insulation assembly from burner tube inlets.

**NOTE:** Proper use of Personal Protective Equipment (PPE) must be followed, including safety glasses, gloves, and dust mask when removing and reinstalling the heat exchanger insulation assembly.

9. Using field-provided large caliber rifle cleaning brush, 36-in. (914 mm) long steel spring cable, a variable speed, reversible electric drill, and vacuum cleaner, clean cells as follows:

**NOTE:** The materials needed in item 9. can usually be purchased at local hardware stores.

- a. Remove metal screw fitting from wire brush to allow insertion into cable.
- b. Insert the twisted wire end of brush into end of spring cable, and crimp tight with crimping tool or crimp by striking with ball-peen hammer. TIGHTNESS IS VERY IMPORTANT.

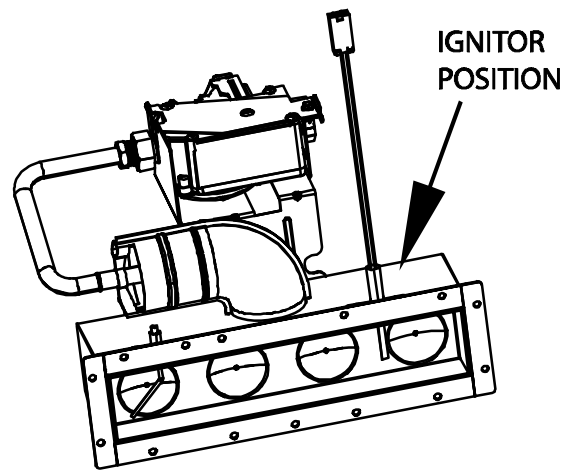

A180230

**Fig. 43 - Ignitor Position**

- (1.) Attach variable-speed, reversible drill to the end of spring cable (end opposite brush).
- (2.) Insert brush end of cable into the outlet opening of cell and slowly rotate with drill. DO NOT force cable. Gradually insert cable into upper pass of cell. (See Fig. 44)
- (3.) Work cable in and out of cell 3 or 4 times to obtain sufficient cleaning. DO NOT pull cable with great force. Reverse drill and gradually work cable out.
- (4.) Insert brush end of cable in burner inlet opening of cell, and proceed to clean two lower passes of cell in same manner as upper pass.
- (5.) Repeat foregoing procedures until each cell in furnace has been cleaned.
- (6.) Using vacuum cleaner, remove residue from each cell.
- (7.) Using vacuum cleaner with soft brush attachment, clean burner assembly.
- (8.) Clean flame sensor with fine steel wool.
- (9.) Reinstall the insulation assembly.

**NOTE:** If insulation assembly is damaged, do not attempt to repair, must be replaced with insulation kit.

**NOTE:** Proper use of Personal Protective Equipment (PPE) must be followed, including safety glasses, gloves, and dust mask when removing and reinstalling the heat exchanger insulation assembly.

- (10.) Reinstall burner assembly.

10. Remove old sealant from cell panel and collector box flange.

11. Spray releasing agent on the heat exchanger cell panel where inducer cover assembly contacts cell panel.

**NOTE:** A releasing agent such as cooking spray or equivalent (must not contain corn or canola oil, aromatic or halogenated hydrocarbons or inadequate seal may occur) and RTV sealant (G.E. 162, 6702, or Dow-Corning 738) are needed before starting installation.


**NOTE:** DO NOT substitute any other type of RTV sealant.

12. Apply new sealant to flange of collector box and attach to cell panel using existing screws, making sure all screws are secure.

13. Reconnect wires to the following components. (Use connection diagram on wiring label, if wires were not marked for reconnection locations.):

- a. Inducer motor

- b. Transducer
  - c. Limit over-temperature switch
  - d. Gas valve
  - e. Hot surface ignitor
  - f. Flame-sensing electrode
  - g. Burner thermal switch
  - h. DSS Draft Safeguard
14. Reinstall vent connector on furnace vent elbow. Securely fasten vent connector to vent elbow with two (2) field-supplied, corrosion-resistant, sheet metal screws located 180° apart.
  15. Replace blower access door only, if it was removed.
  16. Set thermostat above room temperature and check furnace for proper operation.
  17. Verify blower airflow and speed changes between heating and cooling.
  18. Check for gas leaks.
  19. Replace outer access door.

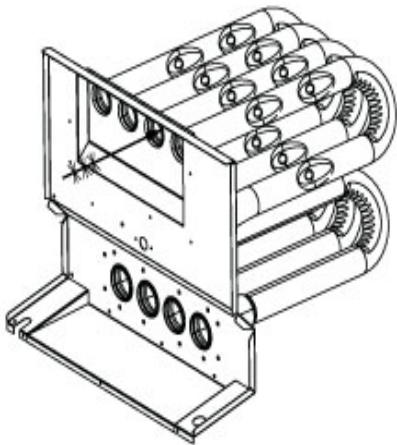

Representative drawing only, some models may vary in appearance.

A190291

**Fig. 44 - Cleaning Heat Exchanger Cell**

## ⚠ WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections.

### SEQUENCE OF OPERATION

**NOTE:** Furnace control must be grounded for proper operation or else control will lock out. Control is grounded through green/yellow wire routed to gas valve and burner box screw. Using the schematic diagram in Fig. 45, follow the sequence of operation through the different modes. Read and follow the wiring diagram very carefully.

**NOTE:** If a power interruption occurs during a call for heat W/W1, the control will start a 90-second blower-only ON period two seconds after power is restored, if the thermostat is still calling for gas heating. The amber LED light will flash code 12 during the 90-second period, after which the LED will be ON continuous, as long as no faults are detected. After the 90-second period, the furnace will respond to the thermostat normally.

The blower door must be installed for power to be conducted through the blower door interlock switch ILK to the furnace control CPU, transformer TRAN, inducer motor IDM, blower motor BLWM, hot-surface ignitor HSI, and gas valve GV.

### 1. Heating with Single-Stage Thermostat

#### See Fig. 25 - 28 for thermostat connections

The wall thermostat “calls for heat”, closing the R-to-W circuit. The furnace control performs a self-check, verifies the transducer reads no pressure present, and starts the inducer motor IDM ramp to prepurge.

#### a. Inducer Prepurge Period

- (1.) The furnace control CPU ramps up the inducer motor IDM to prepurge pressure then the furnace control CPU begins a 15-second prepurge period. If the transducer fails to reach target pressure the inducer motor IDM will remain running until target pressure is maintained. After the transducer maintains pressure target, the furnace control CPU will begin a 15-second prepurge period, and continue to run the inducer motor IDM at that pressure.

- b. **Ignitor Warm-Up** - At the end of the prepurge period, the Hot-Surface Ignitor HSI is energized for a 17-second ignitor warm-up period. Inducer maintains pressure during ignitor warm-up.

**Trial-For-Ignition Sequence** - When the ignitor warm-up period is completed the main gas valve relay contact GVR closes to energize the gas valve solenoid GV-M. The gas valve solenoid GV-M permits gas flow to the burners where it is ignited by the HSI. Five seconds after the GVR closes, a 2-second flame proving period begins. The HSI ignitor will remain energized until the flame is sensed or until the 2-second flame proving period begins.

- c. **Flame-Proving** - When the burner flame is proved at the flame-proving sensor electrode FSE, the inducer motor IDM will increase speed (after a short delay of 14 seconds on some modes) to a higher RUN pressure where the control will maintain this pressure once reached, and the furnace control CPU begins the blower-ON delay period and continues to hold the gas valve GV-M open. If the burner flame is not proved within two second flame proving period, the control CPU will de-energize the gas valve GV-M, and the control CPU will repeat the ignition sequence for up to three more Trials-For-Ignition before going to Ignition-Lockout. Lockout will be reset automatically after three hours, or by momentarily interrupting 115 vac power to the furnace, or by interrupting 24 vac power at SEC1 or SEC2 to the furnace control CPU (not at W/W1, G, R, etc.). If flame is proved when flame should not be present, the furnace control CPU will lock out of Gas-Heating mode and operate the inducer motor IDM until flame is no longer proved.

- d. **Blower-On delay** - If the burner flame is proven the blower-ON delays for heat are as follows:

**Heating** - 25 seconds after the gas valve GV-M is opened the BLWM is turned ON at heat airflow. Simultaneously, the humidifier terminal HUM and electronic air cleaner terminal EAC-1 are energized and remain energized throughout the heating cycle.

- e. **Blower-Off Delay** - When the thermostat is satisfied, the R to W circuit is opened, de-energizing the gas valve GV-M, stopping gas flow to the burners, and de-energizing the humidifier terminal HUM. The inducer motor IDM will remain energized for a 15-second post-purge period. The blower motor BLWM and air cleaner terminal EAC-1 will remain energized at

heat airflow for 90, 120, 150, or 180 seconds (depending on selection at blower-OFF delay switches). The furnace control CPU is factory-set for a 120-second blower-OFF delay.

## 2. Cooling mode

The thermostat “calls for cooling”.

### a. Single-Speed Cooling-

See Fig. 25 for thermostat connections

The thermostat closes the R-to-G-and-Y circuits. The R-to- Y circuit starts the outdoor unit, and the R-to-G-and-Y/Y2 circuits start the furnace blower motor BLWM on cooling airflow. Cooling airflow is based on the A/C selection shown in Fig. 42. The electronic air cleaner terminal EAC-1 is energized with 115 vac when the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y circuits are opened. The outdoor unit will stop, and the furnace blower motor BLWM will continue operating at cooling airflow for an additional 90 seconds.

Jumper Y/Y2 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 23)

### b. Single-Stage Thermostat and Two-Speed Cooling (Adaptive Mode)

See Fig. 28 for thermostat connections.

This furnace can operate a two-speed cooling unit with a single-stage thermostat because the furnace control CPU includes a programmed adaptive sequence of controlled operation, which selects low-cooling or high-cooling operation. This selection is based upon the stored history of the length of previous cooling period of the single-stage thermostat.

**NOTE:** The air conditioning relay disable jumper ACRDJ must be connected to enable the adaptive cooling mode in response to a call for cooling. (See Fig. 23) When ACRDJ is in place the furnace control CPU can turn on the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling.

The furnace control CPU can start up the cooling unit in either low- or high-cooling. If starting up in low-cooling, the furnace control CPU determines the low-cooling on-time (from 0 to 20 minutes) which is permitted before switching to high-cooling. If the power is interrupted, the stored history is erased and the furnace control CPU will select low-cooling for up to 20 minutes and then energize the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling, as long as the thermostat continues to call for cooling. Subsequent selection is based on stored history of the thermostat cycle times. The wall thermostat “calls for cooling”, closing the R-to-G-and-Y circuits. The R-to-Y1 circuit starts the outdoor unit on low-cooling speed, and the R-to-G-and-Y1 circuits starts the furnace blower motor BLWM at low-cooling airflow which is the true on-board CF selection as shown in Fig. 42. If the furnace control CPU switches from low-cooling to high-cooling, the furnace control CPU will energize the air conditioning relay ACR. When the air conditioning relay ACR is energized the R-to-Y1-and-Y2 circuits switch the outdoor unit to high-cooling speed, and the R-to-G-and-Y1-and-Y/Y2 circuits transition the furnace blower motor BLWM to high-cooling airflow. High-cooling airflow is based on the A/C selection shown in Fig. 42.

**NOTE:** When transitioning from low-cooling to high-cooling the outdoor unit compressor will shut down for 1 minute while the furnace blower motor BLWM transitions to run at high-cooling airflow.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y circuit are

opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 seconds. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 23)

### c. Two-Stage Thermostat and Two-Speed Cooling

See Fig. 26 for thermostat connections

**NOTE:** The air conditioning relay disable jumper ACRDJ must be disconnected to allow thermostat control of the outdoor unit staging. (See Fig. 23)

The thermostat closes the R-to-G-and-Y1 circuits for low-cooling or closes the R-to-G-and-Y1-and-Y2 circuits for high-cooling. The R-to-Y1 circuit starts the outdoor unit on low-cooling speed, and the R-to-G-and-Y1 circuit starts the furnace blower motor BLWM at low-cooling airflow which is the true on-board CF (continuous fan) selection as shown in Fig. 42. The R-to-Y1-and-Y2 circuits start the outdoor unit on high-cooling speed, and the R-to- G-and-Y/Y2 circuits start the furnace blower motor BLWM at high-cooling airflow. High-cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 42.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y1 or R-to-G-and-Y1-and-Y2 circuits are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 seconds. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 seconds. (See Fig. 23)

## 3. Thermidistat Mode

See Fig. 25-27 for thermostat connections.

The dehumidification output, DHUM on the Thermidistat should be connected to the furnace control thermostat terminal DHUM. When there is a dehumidify demand, the DHUM input is activated, which means 24 vac signal is removed from the DHUM input terminal. In other words, the DHUM input logic is reversed. The DHUM input is turned ON when no dehumidify demand exists. Once 24 vac is detected by the furnace control on the DHUM input, the furnace control operates in Thermidistat mode. If the DHUM input is low for more than 48 hours, the furnace control reverts back to non-Thermidistat mode.

The cooling operation described in item 2. above also applies to operation with a Thermidistat. The exceptions are listed below:

- a. **Low cooling**-When the R-to-G-and-Y1 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 86 percent of cooling airflow which is the true on-board CF (continuous fan) selection as shown in Fig. 42.
- b. **High cooling**-When the R-to-G-and Y/Y2 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 86 percent of cooling airflow. Cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 42.
- c. **Cooling off-delay**-When the “call for cooling” is satisfied and there is a demand for dehumidification, the cooling blower-off delay is decreased from 90 seconds to 5 seconds.

## 4. Super-Dehumidify Mode

Super-Dehumidify mode can only be entered if the furnace control is in the Thermidistat mode and there is a demand for dehumidification. The cooling operation described in item 3. above also applies to operation with a Thermidistat. The exceptions are listed below:

- a. When the R-to-Y1 circuit is closed, R-to-G circuit is open, and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 65 percent of low-cooling airflow for a maximum of 10 minutes each cooling cycle or until the R-to-G circuit closes or the demand for dehumidification is satisfied. Low-cooling airflow is the true on-board CF (continuous fan) selection as shown in Fig. 42.
- b. When the R-to-Y/Y2 circuit is closed, R-to-G circuit is open, and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 65 percent of high-cooling airflow for a maximum of 10 minutes each cooling cycle or until the R-to-G circuit closes or the demand for dehumidification is satisfied. High-cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 42.
- c. When the “call for cooling” is satisfied and there is a demand for dehumidification, the cooling blower-off delay is decreased from 90 seconds to 5 seconds.

#### 5. Continuous Blower Mode

When the R-to-G circuit is closed by the thermostat, the blower motor BLWM will operate at continuous blower airflow. Continuous blower airflow selection is initially based on the CF (continuous fan) selection shown in Fig. 42. Factory default is shown in Fig. 42. Terminal EAC-1 is energized as long as the blower motor BLWM is energized.

During a call for heat, the furnace control CPU will transition the blower motor BLWM to continuous blower airflow, heating airflow, or the mid-range airflow, whichever is lowest. The blower motor BLWM will remain ON until the main burners ignite then shut OFF and remain OFF for the blower-ON delay (25 seconds in heat), allowing the furnace heat exchangers to heat up more quickly, then restarts at the end of the blower-ON delay period at heating airflow.

The blower motor BLWM will revert to continuous-blower airflow after the heating cycle blower off-delay is completed.

When the thermostat “calls for low-cooling”, the blower motor BLWM will switch to operate at low-cooling airflow. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 seconds at cooling airflow before transitioning back to continuous-blower airflow.

When the thermostat “calls for high-cooling”, the blower motor BLWM will operate at high cooling airflow. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 seconds at high-cooling airflow before transitioning back to continuous-blower airflow. When the R-to-G circuit is opened, the blower motor BLWM will continue operating for an additional 5 seconds, if no other function requires blower motor BLWM operation.

#### Continuous Blower Speed Selection from Thermostat

To select different continuous-blower airflow from the room thermostat, momentarily turn off the FAN switch or push button on the room thermostat for 1-3 seconds after the blower motor BLWM is operating. The furnace control CPU will shift the continuous-blower airflow from the factory setting to the next highest CF selection airflow as shown in Fig. 42. Momentarily turning off the FAN switch again at the thermostat will shift the continuous-blower airflow up one more increment. If you repeat this procedure enough you will eventually shift the continuous-blower airflow to the lowest CF selection as shown in Fig. 42. The selection can be changed as many

times as desired and is stored in the memory to be automatically used following a power interruption.

**NOTE:** If the blower-off delay is set to the maximum (SW1-7 and 8 are ON), the adjustable continuous-fan feature is locked (i.e., fan speed cannot be changed from its current setting).

#### 6. Heat pump

See Fig. 27 - 28 for thermostat connections.

When installed with a heat pump, the furnace control automatically changes the timing sequence to avoid long blower off times during demand defrost cycles. Whenever W/W1 is energized along with Y1 or Y/Y2, the furnace control CPU will transition to or bring on the blower motor BLWM at cooling airflow, heat airflow, or the mid-range airflow, whichever is lowest. The blower motor BLWM will remain on until the main burners ignite then shut OFF and remain OFF for 25 seconds before coming back on at heating airflow. When the W/W1 input signal disappears, the furnace control begins a normal inducer post-purge period while changing the blower airflow. If Y/Y2 input is still energized the furnace control CPU will transition the blower motor BLWM airflow to cooling airflow. If Y/Y2 input signal disappears and the Y1 input is still energized the furnace control CPU will transition the blower motor BLWM to low-cooling airflow. If both the Y1 and Y/Y2 signals disappear at the same time, the blower motor BLWM will remain on heat airflow for the selected blower-OFF delay period. At the end of the blower-OFF delay, the blower motor BLWM will shut OFF unless G is still energized, in which case the blower motor BLWM will operate at continuous blower airflow.

#### 7. Component test

The furnace features a component test system to help diagnose a system problem in the case of a component failure. To initiate the component test procedure, ensure that there are no thermostat inputs to the control and all time delays have expired. Turn on setup switch SW1-6. (See Fig. 23)

**NOTE:** The component test feature will not operate if the control is receiving any thermostat signals or until all time delays have expired.

The component test sequence is as follows:

- a. The furnace control CPU turns the inducer motor ON at 50% torque and keeps it ON through step c.
- b. After waiting for 15 seconds of inducer only operation, the furnace control CPU turns the hot surface ignitor ON for 15 seconds, then OFF.
- c. The furnace control CPU then turns the blower motor BLWM on at mid-range airflow for 15 seconds, then OFF.
- d. After shutting the blower motor OFF the furnace control CPU switches the inducer OFF.

**NOTE:** The EAC terminals are energized when the blower is operating.

After the component test is completed, 1 or more status codes (11, 25, 41 or 42) will flash. See component test section or Service Label (Fig. 38) for explanation of status codes.

**NOTE:** To repeat component test, turn setup switch SW1-6 to OFF and then back ON.

#### Wiring Diagrams

Refer to Fig. 45 for wiring diagram.

#### Troubleshooting

Refer to the service label. (Fig. 38), and wiring diagram (Fig. 45) can be a useful tool in isolating furnace operation problems. The Guide will help to identify the problem or failed component. After replacing any component, verify correct operation sequence.





## PARTS REPLACEMENT INFORMATION GUIDE

### CASING GROUP

Outer door  
Blower door  
Top filler plate  
Bottom filler plate  
Bottom enclosure

### ELECTRICAL GROUP

Control bracket  
Junction box  
Limit switch(es)  
Circuit board  
Door switch  
Transformer  
Wiring harness 115v  
Wiring harness 24v

### BLOWER GROUP

Blower housing  
Blower cutoff  
Blower motor  
Blower wheel  
Grommet  
Power choke (where used)  
Auxiliary limit switches

### GAS CONTROL GROUP

Burner assembly  
Orifice  
Flame sensor  
Hot surface ignitor  
Gas valve  
Manual reset limit switches  
Burner support assembly

### HEAT EXCHANGER GROUP

Heat exchanger cell  
Cell panel

### INDUCER GROUP

Housing assembly  
Transducer  
Inducer motor  
Inducer wheel  
Vent elbow assembly

**TO OBTAIN INFORMATION ON PARTS:** Consult your installing dealer or classified section of your local telephone directory under “Heating Equipment” or “Air Conditioning Contractors and Systems” headings for dealer listing by brand name or contact:

### **CARRIER CORPORATION**

Consumer Relations Department  
P.O. Box 4808  
Syracuse, New York 13221-4808  
1-800-CARRIER

Have available the model number, series number, and serial number located on the unit rating plate to ensure correct replacement part.

### **Example of Model Number**

| MODEL  | HEATING<br>SIZE | MOTOR | WIDTH | VARIA-<br>TION | ELECTRICAL | MINOR<br>SERIES | VARIATION |
|--------|-----------------|-------|-------|----------------|------------|-----------------|-----------|
| 58CU0A | 060             | C     | 17    | --             | 1          | 1               | A         |

### **Training**

My Learning Center is your central location for professional residential HVAC training resources that help strengthen careers and businesses. We believe in providing high quality learning experiences both online and in the classroom.

Access My Learning Center with your HVACpartners credentials at [www.MLCTraining.com](http://www.MLCTraining.com). Please contact us at [mylearning@utc.com](mailto:mylearning@utc.com) with questions.