

## 59CU5A

# Single-Stage, Upflow/Horizontal Communicating, Variable Speed ECM, Ultra Low NOx, 35-in Tall Condensing Gas Furnace



Turn to the experts

## Installation, Start-up, Operating and Service and Maintenance Instructions

**NOTE:** Read the entire instruction manual before starting the installation.

Approved for installations up to 5,400 feet (1646 meters)

### TABLE OF CONTENTS

|   |    |
|---|----|
| Required Notice for Massachusetts Installations . . . . .   | 2  |
| SAFETY CONSIDERATIONS . . . . .   | 4  |
| Table 1 – Minimum Clearances to Combustible Materials for All Units                                       | 5  |
| INTRODUCTION . . . . .  | 5  |
| Table 2 – Loose Parts Bag . . . . .   | 6  |
| CODES AND STANDARDS . . . . .   | 6  |
| ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE . . . . .   | 7  |
| ACCESSORIES . . . . .   | 7  |
| LOCATION . . . . .  | 7  |
| AIR FOR COMBUSTION AND VENTILATION . . . . .  | 8  |
| Table 3 – Minimum Free Area Required for Each Combustion Air Opening or Duct to Outdoors . . . . .        | 10 |
| Table 4 – Minimum Space Volumes for 100% Combustion, Ventilation and Dilution Air from Outdoors . . . . . | 10 |
| CONDENSATE TRAP . . . . .   | 11 |
| Condensate Drain Connection . . . . .   | 11 |
| Table 5 – Condensate Trap Configurations . . . . .  | 13 |
| INSTALLATION . . . . .  | 13 |
| Table 6 – Evaporator Coil Spacer or Shield Requirements . . . . .   | 16 |
| AIR DUCTS . . . . .   | 20 |
| Table 7 – Air Filter Selection and Duct Sizing - In. (mm) . . . . .                                       | 21 |
| Table 8 – Opening Dimensions - In. (mm) . . . . .   | 21 |
| Table 9 – Filter Media Pressure Drop (Clean) Versus Airflow - In. W.C. (Pa) . . . . .                     | 21 |
| Table 10 – Filter Media Pressure Drop (Clean) Versus Face Velocity-In. W.C. (Pa) . . . . .                | 22 |
| Table 11 – Air Delivery - CFM (With Filter) . . . . .   | 22 |
| GAS PIPING . . . . .  | 23 |
| Table 12 – Maximum Capacity of Pipe . . . . .   | 24 |

|   |    |
|---|----|
| ELECTRICAL CONNECTIONS . . . . .  | 25 |
| Table 13 – Electrical Data . . . . .  | 29 |
| NOTES FOR THERMOSTATS . . . . .   | 31 |
| VENTING . . . . .   | 31 |
| Table 14 – Vent Termination Kit for Direct Vent (2-pipe) Systems  | 32 |
| Table 15 – Hanger Spacing . . . . .   | 38 |
| Notes for Venting Options . . . . .   | 40 |
| Table 16 – Approved Combustion-Air and Vent Pipe, Fitting and Cement Materials (U.S.A. Installations) . . . . . | 41 |
| Table 17 – Maximum Allowable Exposed Vent Length in Unconditioned Space - Ft. . . . .                           | 41 |
| Table 18 – Maximum Equivalent Vent Length - Ft. . . . .   | 42 |
| Table 19 – Deductions from Maximum Equivalent Vent Length - Ft. (M) . . . . .                                   | 42 |
| START-UP, ADJUSTMENT, AND SAFETY CHECK . . . . .  | 48 |
| Table 20 – Altitude Derate Multiplier for USA . . . . .   | 50 |
| Table 21 – Blower Off Delay Setup Switch . . . . .  | 51 |
| Table 22 – Gas Rate (CU ft./hr) . . . . .   | 52 |
| Table 23 – Gas Valve Outlet Pressure for Gas Heat Values at Altitude - 60,000 . . . . .                         | 53 |
| Table 24 – Gas Valve Outlet Pressure for Gas Heat Values at Altitude - 80,000 . . . . .                         | 53 |
| Table 25 – Gas Valve Outlet Pressure for Gas Heat Values at Altitude - 100,000 . . . . .                        | 54 |
| SERVICE AND MAINTENANCE PROCEDURES . . . . .  | 54 |
| WINTERIZATION . . . . .   | 61 |
| SERVICE GUIDE . . . . .   | 68 |
| PARTS REPLACEMENT INFORMATION GUIDE . . . . .   | 69 |
| Model Nomenclature . . . . .  | 69 |



Portions of the text and tables are reprinted from NFPA 54/ANSI Z223.1E, with permission of National Fire Protection Association, Quincy, MA 02269 and American Gas Association, Washington DC 20001. This reprinted material is not the complete and official position of the NFPA or ANSI on the referenced subject, which is represented only by the standard in its entirety.

A200352

## **Required Notice for Massachusetts Installations**

### **IMPORTANT**

The Commonwealth of Massachusetts requires compliance with regulation 248 CMR as follows:

5.08: Modifications to NFPA-54, Chapter 10

2) Revise 10.8.3 by adding the following additional requirements:

- a. For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:
1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors
  - a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
  - b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.
2. **APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
3. **SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".
4. **INSPECTION.** The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.
5. **EXEMPTIONS:** The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:
  - (1.)The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
  - (2.)Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.
    - a. **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED.** When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:
      1. Detailed instructions for the installation of the venting system design or the venting system components; and
      2. A complete parts list for the venting system design or venting system.
        - a. **MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED.** When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:
          1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
          2. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.
            - (1.) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

For questions regarding these requirements, please contact the Commonwealth of Massachusetts Board of State Examiners of Plumbers and Gas Fitters, 239 Causeway Street, Boston, MA 02114. 617-727-9952.

**Fig. 1 – Dimensional Drawing**

**Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.**

 **WARNING****CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in personal injury and/or death.

Carbon Monoxide (CO) is a colorless, odorless, and tasteless poisonous gas that can be fatal when inhaled. Follow all installation, maintenance, and service instructions. See additional information below regarding the installation of a CO Alarm.

Most states in the USA and jurisdictions in Canada have laws that require the use of Carbon Monoxide (CO) alarms with fuel burning products. Examples of fuel burning products are furnaces, boilers, space heaters, generators, water heaters, stoves/ranges, clothes dryers, fireplaces, incinerators, automobiles, and other internal combustion engines. Even if there are no laws in your jurisdiction requiring a CO Alarm, it's highly recommended that whenever any fuel burning product is used in or around the home or business that the dwelling be equipped with a CO Alarm(s). The Consumer Product Safety Commission recommends the use of CO Alarm(s). The CO Alarm(s) must be installed, operated, and maintained according to the CO Alarm manufacturer's instructions. For more information about Carbon Monoxide, local laws, or to purchase a CO Alarm online, please visit the following website. <https://www.kidde.com>.

**SAFETY CONSIDERATIONS** **WARNING****FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in dangerous operation, personal injury, death, or property damage.

Improper installation, adjustment, alteration, service, maintenance, or use can cause carbon monoxide poisoning, explosion, fire, electrical shock, or other conditions which may cause personal injury or property damage. Consult a qualified service agency, local gas supplier, or your distributor or branch for information or assistance. The qualified service agency must use only factory-authorized and listed kits or accessories when modifying this product.

 **WARNING****FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in dangerous operation, personal injury, death, or property damage.

Furnaces shall NOT be twinned. These furnaces are not approved for installation in recreational vehicles, outdoors or in manufactured/mobile homes.

 **WARNING****FIRE HAZARD**

Failure to follow this warning could result in personal injury, death, or property damage.

Solvents, cements and primers are combustible. Keep away from heat, sparks and open flame. Use only in well-ventilated areas. Avoid breathing in vapor or allowing contact with skin or eyes.

 **CAUTION****FURNACE RELIABILITY HAZARD**

Failure to follow this caution may result in unit component damage.

Application of this furnace should be indoors with special attention given to vent sizing and material, gas input rate, air temperature rise, unit leveling, and unit sizing.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory-authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing.

Installing and servicing heating equipment can be hazardous due to gas and electrical components. Only trained and qualified personnel should install, repair, or service heating equipment. Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. When working on heating equipment, observe precautions in literature, on tags, and on labels attached to or shipped with furnace and other safety precautions that may apply.


These instructions cover minimum requirements and conform to existing national standards and safety codes. In some instances, these instructions exceed certain local codes and ordinances, especially those that may not have kept up with changing residential construction practices. We require these instructions as a minimum for a safe installation.

Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Have a fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit.

 **CAUTION****CUT HAZARD**

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

This is the safety-alert symbol . When you see this symbol on the furnace and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which will result in severe personal injury or death. WARNING signifies a hazard which could result in personal injury or death. CAUTION is used to identify hazards which may result in minor personal injury or product and property damage. NOTE and NOTICE are used to highlight suggestions which will result in enhanced installation, reliability, or operation.

1. Use only with type of gas approved for this furnace. Refer to the furnace rating plate.
2. Install this furnace only in a location and position as specified in the "Location" section of these instructions.
3. Provide adequate combustion and ventilation air to the furnace space as specified in "Air for Combustion and Ventilation" section.

4. Combustion products must be discharged outdoors. Connect this furnace to an approved vent system only, as specified in the “Venting” section of these instructions.
5. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections, as specified in the “Gas Piping” section.
6. Always install furnace to operate within the furnace’s intended temperature-rise range with a duct system which has an external static pressure within the allowable range, as specified in the “Start-Up, Adjustments, and Safety Check” section. See furnace rating plate.
7. When a furnace is installed so that supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace. See “Air Ducts” section.
8. A gas-fired furnace for installation in a residential garage must be installed as specified in the warning box in the “Location” section.
9. The furnace is not permitted to be used for heating of buildings under construction.
10. These Upflow/Horizontal Gas-Fired Furnaces are CSA design-certified for use with natural gas (see furnace rating plate) and for installation in alcoves, attics, basements, closets, utility rooms, crawlspaces, and garages. The furnace is factory-shipped for use with natural gas and cannot be converted to propane gas.
11. For required clearances to combustible construction, see [Table 1](#). Ensure sufficient clearance for furnace condensate trap installation. See Location and Condensate Trap sections for required and recommended clearances, see [Fig. 6](#) and [Fig. 7](#).

**Table 1 – Minimum Clearances to Combustible Materials for All Units**

| POSITION   | CLEARANCE |
|--|-----------|
| REAR   | 1 in.     |
| FRONT<br>(Combustion air openings in furnace and in structure) | 1 in.     |
| Required for service   | 24 in.*   |
| All Sides of Supply Plenum                                     | 1 in.     |
| Sides  | 1 in.**   |
| Vent   | 0         |
| Top of Furnace   | 1 in.     |

\* Consult local building codes.

\*\* Additional clearance is required for condensate trap installation.

**NOTE:** Furnace edge contact is permissible with combustible materials unless local codes state otherwise.

12. Maintain a 1-in. (25 mm) clearance from combustible materials to supply air ductwork for a distance of 36 in. (914 mm) horizontally from the furnace. See NFPA 90B or local code for further requirements.
13. These furnaces SHALL NOT be installed directly on carpeting, combustible tile, or any other combustible material other than wood flooring. Clearance to combustible construction information, see [Table 1](#).


## NOTICE

### Important Installation and Start-up Procedures

Failure to follow this procedure may result in a nuisance smoke or odor complaint.

The manifold pressure, gas rate by meter clocking, temperature rise and operation must be checked after installation. Minor smoke and odor may be present temporarily after start-up from the manufacturing process. Some occupants are more sensitive to this minor smoke and odor. It is recommended that doors and windows be open during the first heat cycle.

## INTRODUCTION

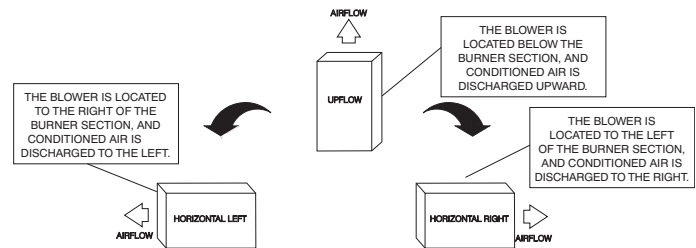

**Fig. 2 – Upflow/Horizontal Orientations**

A190213


**NOTE:** Downflow not permitted.

This Upflow/Horizontal Category IV condensing furnace is CSA design-certified as a direct-vent (2-pipe) furnace using outside air for combustion, see [Fig. 2](#). It is also certified as a non-direct vent (1-pipe) furnace using indoor air for combustion or air from a well-ventilated attic or crawl space, where permitted by local code.

The furnace is factory-shipped for use with natural gas only and cannot be converted to propane gas.

These furnaces are not approved for installation in recreational vehicles outdoors, or in manufactured/mobile homes. When installed on a wood floor, the furnace must be installed on a factory-supplied accessory combustible floor base or evaporator coil casing.

This furnace is designed for minimum continuous return-air temperature of 60°F (15°C) db or intermittent operation down to 55°F (13°C) db such as when used with a night setback thermostat. Return-air temperature must not exceed 80°F (27°C) db. Failure to follow these return-air temperature limits may affect reliability of heat exchangers, motors, and controls, see [Fig. 3](#).

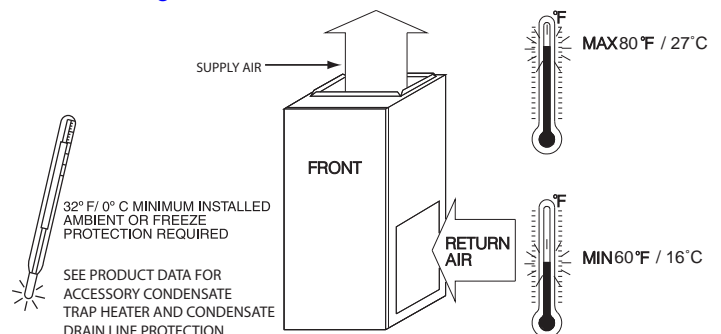

**Fig. 3 – Freeze Protection and Return Air Temperature**

A150573


The furnace should be sized to provide 100 percent of the design heating load requirement plus any margin that occurs because of furnace model size capacity increments. None of the furnace model sizes can be used if the heating load is less than half of the furnace model’s output capacity. Use Air Conditioning Contractors of America (Manual J and S); American Society of Heating, Refrigerating, and Air-Conditioning Engineers; or other approved engineering method to calculate heating

load estimates and select the furnace. Excessive oversizing of the furnace may cause the furnace and/or vent to fail prematurely, customer discomfort and/or vent freezing.

Failure to follow these guidelines is considered faulty installation and/or misapplication of the furnace; and resulting failure, damage, or repairs may impact warranty coverage.

For accessory installation details, refer to the applicable instruction literature.

**NOTE:** Remove all shipping materials, loose parts bags, and literature before operating the furnace, see Table 2. The Ultra Low NOx condensing furnaces also contain an additional parts bag for the condensate trap, see Condensate Trap section.

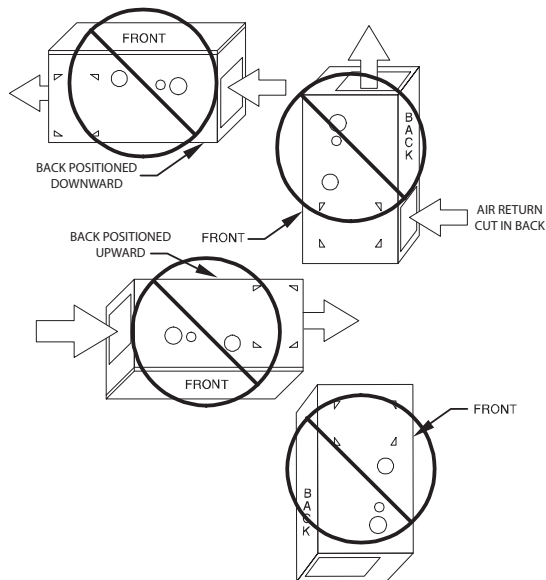

**Fig. 4 – Prohibited Installations**  
Downflow not permitted with any return air configuration.


A190256

## ! WARNING

### FIRE HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

Do not install the furnace on its back or hang furnace with control compartment facing downward. Safety control operation will be adversely affected. Never connect return-air ducts to the back of the furnace, see Fig. 4.

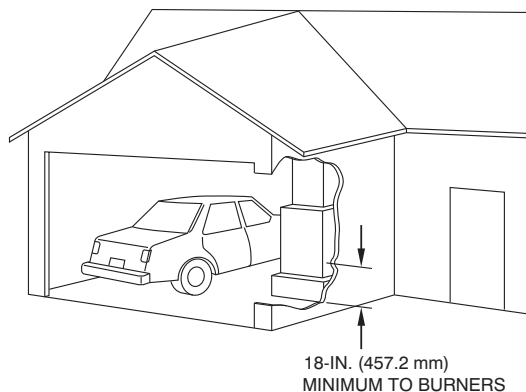

**Fig. 5 – Installation in a Garage**

A93044

**Table 2 – Loose Parts Bag**

| DESCRIPTION                               | QTY |
|---|-----|
| Air Intake Pipe Flange                    | 1   |
| Vent Pipe Flange                          | 1   |
| Pipe Flange Gaskets                       | 2   |
| Sharp Tip Screws (Vent and Inlet Flanges) | 10  |
| Vent Pipe Coupling                        | 1   |
| Vent Pipe Coupling Clamps                 | 2   |
| Gas Line Grommet                          | 1   |
| Junction Box Cover                        | 1   |
| Junction Box Base                         | 1   |
| Green Ground Screw                        | 1   |
| Blunt Tip Screws (Junction Box)           | 3   |
| Thermostat Wire Grommet                   | 1   |
| Rubber Drain Elbow                        | 1   |
| Drain Tube Clamps                         | 2   |
| 1/2-in. CPVC to 3/4-in. PVC Pipe Adapter  | 1   |

## CODES AND STANDARDS

Follow all national and local codes and standards in addition to these instructions. The installation must comply with regulations of the serving gas supplier, local building, heating, plumbing, and other codes. In absence of local codes, the installation must comply with the national codes listed below and all authorities having jurisdiction.

In the United States, follow all codes and standards for the following:

### Safety

- Current edition of US: National Fuel Gas Code (NFGC) NFPA 54/ANSI Z223.1 and the Installation Standards, Warm Air Heating and Air Conditioning Systems ANSI/NFPA 90B

### General Installation

- US: NFGC and the NFPA 90B. For copies, contact the National Fire Protection Association Inc., Batterymarch Park, Quincy, MA 02269; or for only the NFGC contact the American Gas Association, 400 N. Capitol, N.W., Washington DC 20001

### Combustion and Ventilation Air

- US: Current edition of Section 9.3 of the NFPA54/ANSI Z223.1 Air for Combustion and Ventilation

### Duct Systems

- US: Current edition of Air Conditioning Contractors Association (ACCA) Manual D, Sheet Metal and Air Conditioning Contractors National Association (SMACNA), or American Society of Heating, Refrigeration, and Air Conditioning Engineers (ASHRAE) Fundamentals Handbook Chapter 35

### Acoustical Lining and Fibrous Glass Duct

- US: Current edition of SMACNA, NFPA 90B as tested by UL Standard 181 for Class I Rigid Air Ducts

### Gas Piping and Gas Pipe Pressure Testing

- US: Current edition of NFPA 54/ANSI Z223.1 NFGC; Chapters 5, 6, 7, and 8 and national plumbing codes.

In the state of Massachusetts:

- This product must be installed by a licensed plumber or gas fitter.
- When flexible connectors are used, the maximum length shall not exceed 36 in. (914 mm).
- When lever type gas shutoffs are used they shall be T-handle type.
- The use of copper tubing for gas piping is not approved by the state of Massachusetts.

### Electrical Connections

- US: Current edition of National Electrical Code (NEC) NFPA 70

### Condensate Drain Connection

- US: Current edition of National Standard Plumbing Code, Section 8.7.

## ELECTROSTATIC DISCHARGE (ESD) PRECAUTIONS PROCEDURE

### ! CAUTION

#### FURNACE RELIABILITY HAZARD

Failure to follow this caution may result in unit component damage.

Electrostatic discharge can affect electronic components. Take precautions during furnace installation and servicing to protect the furnace electronic control. Precautions will prevent electrostatic discharges from personnel and hand tools which are held during the procedure. These precautions will help to avoid exposing the control to electrostatic discharge by putting the furnace, the control, and the person at the same electrostatic potential.

1. Disconnect all power to the furnace. Multiple disconnects may be required. **DO NOT TOUCH THE CONTROL OR ANY WIRE CONNECTED TO THE CONTROL PRIOR TO DISCHARGING YOUR BODY'S ELECTROSTATIC CHARGE TO GROUND.**
2. Firmly touch the clean, unpainted, metal surface of the furnace chassis which is close to the control. Tools held in a person's hand during grounding will be satisfactorily discharged.
3. After touching the chassis, you may proceed to service the control or connecting wires as long as you do nothing to recharge your body with static electricity (for example; **DO NOT** move or shuffle your feet, do not touch ungrounded objects, etc.).
4. If you touch ungrounded objects (and recharge your body with static electricity), firmly touch a clean, unpainted metal surface of the furnace again before touching control or wires.
5. Use this procedure for installed and uninstalled (ungrounded) furnaces.
6. Before removing a new control from its container, discharge your body's electrostatic charge to ground to protect the control from damage. If the control is to be installed in a furnace, follow items 1 through 4 before bringing the control or yourself in contact with the furnace. Put all used and new controls into containers before touching ungrounded objects.
7. An ESD service kit (available from commercial sources) may also be used to prevent ESD damage.

## ACCESSORIES

See Product Data Specification Sheet for a list of accessories for this product.

## LOCATION

### ! CAUTION


#### PERSONAL RELIABILITY HAZARD

Failure to follow this caution may result in unit component damage.

Furnace may not be used for heating buildings under construction.

**IMPORTANT: IMPORTANT:** Clearances for Condensate Trap

Before locating furnace, refer to condensate trap installation instructions section for required clearances for trap installation.

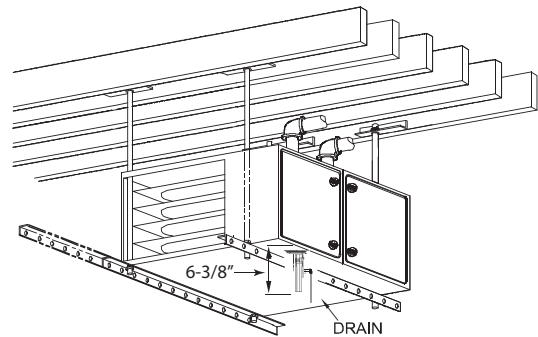


ADDITIONAL 1" CLEARANCE BELOW TRAP  
RECOMMENDED FOR SERVICE

**Fig. 6 – Trap Clearance in Horizontal Application**

A200083

**NOTE:** Local codes may require a drain pan and condensate tray when a condensing furnace is installed over a finished ceiling.

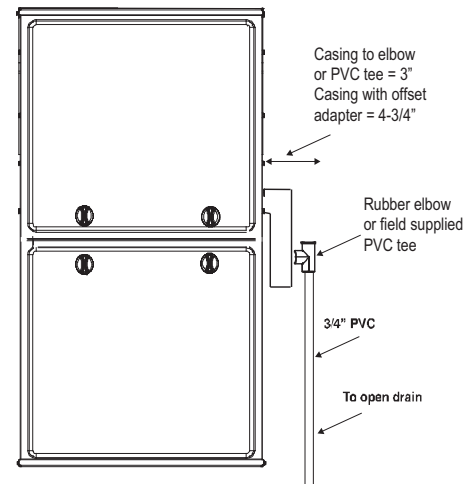

**Fig. 7 – Trap Clearance in Upflow Application**

A200084

## General

These furnaces are shipped with materials to assist in proper furnace installation. These materials are shipped in the main blower compartment.

Loose parts bag contents, see [Table 2](#).

This furnace must:

- be installed so the electrical components are protected from water.
- not be installed directly on any combustible material other than wood flooring (refer to SAFETY CONSIDERATIONS).
- be located close to the chimney or vent and attached to an air distribution system. Refer to Air Ducts section.
- be provided ample space for servicing and cleaning. Always comply with minimum fire protection clearances, see [Table 1](#).

## WARNING

### **CARBON MONOXIDE POISONING / COMPONENT DAMAGE HAZARD**

Failure to follow this warning could result in personal injury or death and unit component damage.

Corrosive or contaminated air may cause failure of parts containing flue gas, which could leak into the living space. Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements can corrode heat exchangers and shorten furnace life. Air contaminants are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products. Do not install furnace in a corrosive or contaminated atmosphere. Make sure all combustion and circulating air requirements are met, in addition to all local codes and ordinances.

The following types of furnace installations may require OUTDOOR AIR for combustion due to chemical exposures:

- Commercial buildings
- Buildings with indoor pools
- Laundry rooms
- Hobby or craft rooms
- Chemical storage areas

If air is exposed to the following substances, it should not be used for combustion air, and outdoor air may be required for combustion:

- Permanent wave solutions
- Chlorinated waxes and cleaners
- Chlorine based swimming pool chemicals
- Water softening chemicals
- De-icing salts or chemicals
- Carbon tetrachloride
- Halogen type refrigerants
- Cleaning solvents (such as perchloroethylene)
- Printing inks, paint removers, varnishes, etc.
- Hydrochloric acid
- Cements and glues
- Antistatic fabric softeners for clothes dryers
- Masonry acid washing materials

All fuel-burning equipment must be supplied with air for fuel combustion. Sufficient air must be provided to avoid negative pressure in the equipment room or space. A positive seal must be made between the furnace cabinet and the return-air duct to prevent pulling air from the burner area.

## WARNING

### **FIRE, INJURY OR DEATH HAZARD**

Failure to follow this warning could result in personal injury, death and/or property damage.

When the furnace is installed in a residential garage, the burners and burner ignition devices must be located at least 18 in. (457 mm) above the floor. The furnace must be located or protected to avoid damage by vehicles. When the furnace is installed in a public garage, airplane hangar, or other building having a hazardous atmosphere, the furnace must be installed in accordance with the current edition of NFPA 54/ANSI Z223.1 or CAN/CSA B149.2, see [Fig. 5](#).

## **Location Relative to Cooling Equipment**

The cooling coil must be installed parallel with, or on the downstream side of the unit to avoid condensation in the heat exchangers. When installed parallel with the furnace, dampers or other flow control must prevent chilled air from entering the furnace. If the dampers are manually operated, they must be equipped with means to prevent operation of either unit unless the damper is in the full-heat or full-cool position. Refer to Installation of Evaporator Coil section for install requirements for unshielded coils, see [Table 6](#).

## **AIR FOR COMBUSTION AND VENTILATION**

### **Introduction**

#### **2-pipe Applications**

When the furnace is installed as a 2-pipe furnace, no special provisions for air for combustion are required. However, other gas appliances installed in the space with the furnace may require outside air for combustion. Follow the guidelines below to ensure that other gas appliances have sufficient air for combustion.

#### **1-pipe Applications**

When the furnace is installed as a 1-pipe furnace, it will be necessary to ensure there is adequate air for combustion. Other gas appliances installed with the furnace may also require air for combustion and ventilation in addition to the amount of combustion air and ventilation air required for the furnace. Follow the guidelines below to ensure that the furnace and other gas appliances have sufficient air for combustion.

#### **Ventilated Combustion Air Applications**

When the furnace is installed using the ventilated combustion air option, the attic or crawlspace must freely communicate with the outdoor to provide sufficient air for combustion. The combustion air pipe cannot be terminated in attics or crawlspaces that use ventilation fans designed to operate during the heating season. If ventilation fans are present in these areas, the combustion air pipe must terminate outdoors as a 2-Pipe system.

All air for combustion is piped directly to the furnace from a space that is well ventilated with outdoor air (such as an attic, crawl space or equipment closet) and the space is well isolated from the living space or garage. In addition, other gas appliances installed in the space with the furnace may require outside air for combustion. Follow the guidelines below to ensure that the roof or crawlspace walls have sufficient free area to provide sufficient air for combustion and ventilation for the furnaces. The guidelines below can be used to ensure that other gas appliances have sufficient air for combustion.

Provisions for adequate combustion, ventilation, and dilution air must be provided in accordance with:

- U.S.A. Installations: Current edition of Section 9.3 of the NFPA 54/ANSI Z223.1 , Air for Combustion and Ventilation and applicable provisions of the local building codes.

## CAUTION

### **FURNACE CORROSION HAZARD**

Failure to follow this caution may result in furnace damage.

Air for combustion must not be contaminated by halogen compounds, which include fluoride, chloride, bromide, and iodide. These elements can corrode heat exchangers and shorten furnace life. Air contaminants are found in aerosol sprays, detergents, bleaches, cleaning solvents, salts, air fresheners, and other household products.

## ! WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death. The operation of exhaust fans, kitchen ventilation fans, clothes dryers, attic exhaust fans or fireplaces could create a **NEGATIVE PRESSURE CONDITION** at the furnace. Make-up air **MUST** be provided for the ventilation devices, in addition to that required by the furnace. Refer to the Carbon Monoxide Poisoning Hazard warning in the venting section of these instructions to determine if an adequate amount of make-up air is available.

The requirements for combustion and ventilation air depend upon whether or not the furnace is located in a space having a volume of at least 50 cubic feet per 1,000 Btuh input rating for all gas appliances installed in the space.

- Spaces having less than 50 cubic feet per 1,000 Btuh (4.8 cubic meters per kW) require the Outdoor Combustion Air Method.
- Spaces having at least 50 cubic feet per 1,000 Btuh (4.8 cubic meters per kW) may use the Indoor Combustion Air, Standard or Known Air Infiltration Method.

### Outdoor Combustion Air Method

1. Provide the space with sufficient air for proper combustion, ventilation, and dilution of flue gases using permanent horizontal or vertical duct(s) or opening(s) directly communicating with the outdoors or spaces that freely communicate with the outdoors.
2. Provide **TWO OUTDOOR OPENINGS**, one inlet and one outlet combustion and ventilation air opening, to the outdoors, see [Fig. 8](#).
  - a. One opening **MUST** commence within 12 in. (300 mm) of the ceiling and the second opening **MUST** commence within 12 in. (300 mm) of the floor.
  - b. Size openings and ducts, see [Fig. 8](#) and [Table 3](#).
  - c. **TWO HORIZONTAL DUCTS** require 1 sq. in. (645 sq. mm) of free area per 2,000 Btuh (1,100 mm2/kW) of combined input for all gas appliances in the space, see [Fig. 8](#) and [Table 3](#).
  - d. **TWO OPENINGS OR VERTICAL DUCTS** require 1 sq. in. (645 sq. mm) of free area per 4,000 Btuh (550 mm2/kW) for combined input of all gas appliances in the space, see [Fig. 8](#) and [Table 3](#).
3. **ONE OUTDOOR OPENING** requires:
  - a. 1 sq. in. (645 sq. mm) of free area per 3,000 Btuh (734 mm2/kW) for combined input of all gas appliances in the space, see [Fig. 8](#) and [Table 3](#).
  - b. Not less than the sum of the areas of all vent connectors in the space.

The opening shall commence within 12 in. (300 mm) of the ceiling. Appliances in the space shall have clearances of at least 1 in. (25 mm) from the sides and back and 6 in. (150 mm) from the front. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces (crawl or attic) that freely communicate with the outdoors.

### Indoor Combustion AirE NFPA & AGA

### Standard and Known-Air-Infiltration Rate Methods

Indoor air is permitted for combustion, ventilation, and dilution, if the Standard or Known-Air-Infiltration Method is used.

## ! WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death. Many homes require air to be supplied from outdoors for furnace combustion, ventilation, and dilution of flue gases. The furnace combustion air supply must be provided in accordance with this instruction manual.

### Standard Method

1. The space has no less volume than 50 cubic feet per 1,000 Btuh of the maximum input ratings for all gas appliances installed in the space and
2. The air infiltration rate is not known to be less than 0.40 air changes per hour (ACH).

The Known Air Infiltration Rate Method shall be used, if the infiltration rate is known to be:

3. Less than 0.40 ACH and
4. Equal to or greater than 0.10 ACH

Infiltration rates greater than 0.60 ACH shall not be used. The minimum required volume of the space varies with the number of ACH and shall be determined, see [Table 4](#), or Equations 1 and 2. Determine the minimum required volume for each appliance in the space and add the volumes together to get the total minimum required volume for the space.

[Table 4](#) - Minimum Space Volumes were determined by using the following equations from the current edition of the National Fuel Gas Code ANSI Z223.1/NFPA 54, 9.3.2.2:

1. For other than fan-assisted appliances, such as a draft hood-equipped water heater:

$$\text{Volume}_{\text{Other}} = \frac{21\text{ft}^3}{\text{ACH}} \left( \frac{I_{\text{other}}}{1000 \text{ Btu/hr}} \right)$$

A04002

2. For fan-assisted appliances such as this furnace:

$$\text{Volume}_{\text{Fan}} = \frac{15\text{ft}^3}{\text{ACH}} \left( \frac{I_{\text{fan}}}{1000 \text{ Btu/hr}} \right)$$

A04003

If:  $I_{\text{other}}$  = combined input of all other than fan-assisted appliances in Btuh/hr

Ifan = combined input of all fan-assisted appliances in Btuh/hr

ACH = air changes per hour (ACH shall not exceed 0.60.)

The following requirements apply to the Standard Method and to the Known Air Infiltration Rate Method.

1. Adjoining rooms can be considered part of a space if:
  - a. There are no closeable doors between rooms.
  - b. Combining spaces on same floor level. Each opening shall have free area of at least 1 in.2/1,000 Btuh (2,000 mm2/kW) of the total input rating of all gas appliances in the space, but not less than 100 in.2 (0.06 m2). One opening shall commence within 12 in. (300 mm) of the ceiling and the second opening shall commence within 12 in. (300 mm) of the floor. The minimum dimension of air openings shall be at least 3 in. (80 mm), see [Fig. 9](#).
  - c. Combining space on different floor levels. The volumes of spaces on different floor levels shall be considered as communicating spaces if connected by one or more permanent openings in doors or floors having free area of at least 2 in.2/1,000 Btuh (4,400 mm2/kW) of total input rating of all gas appliances.

2. An attic or crawlspace may be considered a space that freely communicates with the outdoors provided there are adequate permanent ventilation openings directly to outdoors having free area of at least 1-in.2/4,000 Btuh of total input rating for all gas appliances in the space.
3. In spaces that use the Indoor Combustion Air Method, infiltration should be adequate to provide air for combustion, permanent ventilation and dilution of flue gases. However, in buildings with unusually tight construction, additional air MUST be provided using the methods described in the Outdoor Combustion Air Method section.
4. Unusually tight construction is defined as Construction with:
  - a. Walls and ceilings exposed to the outdoors have a continuous, sealed vapor barrier. Openings are gasketed or sealed and
  - b. Doors and openable windows are weatherstripped and
  - c. Other openings are caulked or sealed. These include joints around window and door frames, between sole plates and floors,

between wall-ceiling joints, between wall panels, at penetrations for plumbing, electrical and gas lines, etc.

### **Combination of Indoor and Outdoor Air**

1. Indoor openings shall comply with the Indoor Combustion Air Method below and,
2. Outdoor openings shall be located as required in the Outdoor Combustion Air Method mentioned previously and,
3. Outdoor openings shall be sized as follows:
  - a. Calculate the Ratio of all Indoor Space volume divided by required volume for Indoor Combustion Air Method below.
  - b. Outdoor opening size reduction Factor is 1 minus the Ratio in a. above.
  - c. Minimum size of Outdoor openings shall be the size required in Outdoor Combustion Air Method above multiplied by reduction Factor in b. above. The minimum dimension of air openings shall be not less than 3 in. (80 mm).

**Table 3 – Minimum Free Area Required for Each Combustion Air Opening or Duct to Outdoors**

| FURNACE INPUT<br>(BTUH) | TWO HORIZONTAL DUCTS<br>(1 SQ. IN./2,000 BTUH)<br>(1,100 SQ. MM/KW) |                            | SINGLE DUCT OR OPENING<br>(1 SQ. IN./3,000 BTUH)<br>(734 SQ. MM/KW) |                            | TWO OPENINGS OR<br>VERTICAL DUCTS<br>(1 SQ. IN./4,000 BTUH)<br>(550 SQ. MM/KW) |                             |
|-------------------------|---|----------------------------|---|----------------------------|--|-----------------------------|
|                         | Free Area of<br>Opening and Duct<br>Sq. In (Sq. mm)                 | Round Duct<br>In. (mm) Dia | Free Area of<br>Opening and Duct<br>Sq. In (Sq. mm)                 | Round Duct<br>In. (mm) Dia | Free Area of<br>Opening and Duct<br>Sq. In (mm)                                | Round Duct<br>In. (mm) Dia. |
| <b>40,000</b>           | 20 (12904)  | 5 (127)                    | 14 (8696)   | 5 (127)                    | 10 (6452)  | 4 (102)                     |
| <b>60,000</b>           | 30 (19355)  | 6 (152)                    | 20 (13043)  | 5 (127)                    | 15 (9678)  | 5 (127)                     |
| <b>80,000</b>           | 40 (25807)  | 7 (178)                    | 27 (17391)  | 6 (152)                    | 20 (12904)   | 5 (127)                     |
| <b>100,000</b>          | 50 (32258)  | 8 (203)                    | 34 (21739)  | 7 (178)                    | 25 (16130)   | 6 (152)                     |

EXAMPLES: Determining Free Area

| FURNACE |   | WATER HEATER |   | TOTAL INPUT                |   |  |
|---------|---|--------------|---|----------------------------|---|--|
| 60,000  | + | 40,000       | = | (100,000 divided by 3,000) | = | 33.3 Sq. In. for each Single Duct or Opening         |
| 80,000  | + | 30,000       | = | (110,000 divided by 2,000) | = | 55.0 Sq. In. for each two Horizontal Ducts           |
| 100,000 | + | 30,000       | = | (130,000 divided by 4,000) | = | 32.5 Sq. In. for each two Vertical Ducts or Openings |

**Table 4 – Minimum Space Volumes for 100% Combustion, Ventilation and Dilution Air from Outdoors**

| AIR<br>CHANGES<br>PER HOUR<br>(ACH) | OTHER THAN FAN-ASSISTED TOTAL<br>(1,000'S BTUH GAS INPUT RATE) |               |                | FAN-ASSISTED TOTAL<br>(1,000'S BTUH GAS INPUT RATE) |               |               |                |                |                |                |
|-------------------------------------|--|---------------|----------------|---|---------------|---------------|----------------|----------------|----------------|----------------|
|                                     | 30   | 40            | 50             | 26  | 40            | 60            | 80             | 100            | 120            | 140            |
|                                     | Space Volume Ft3 (M3)  |               |                |   |               |               |                |                |                |                |
| <b>0.60</b>                         | 1,050 (29.7)   | 1,400 (39.6)  | 1,750 (49.5)   | 910 (25.8)  | 1,400 (39.6)  | 1,500 (42.5)  | 2,000 (56.6)   | 2,500 (70.8)   | 3,000 (84.9)   | 3,500 (99.1)   |
| <b>0.50</b>                         | 1,260 (35.6)   | 1,680 (47.5)  | 2,100 (59.4)   | 1092 (30.9)   | 1,680 (47.5)  | 1,800 (51.0)  | 2,400 (67.9)   | 3,000 (84.9)   | 3,600 (101.9)  | 4,200 (118.9)  |
| <b>0.40</b>                         | 1,575 (44.5)   | 2,100 (59.4)  | 2,625 (74.3)   | 1365 (38.7)   | 2,100 (59.4)  | 2,250 (63.7)  | 3,000 (84.9)   | 3,750 (106.1)  | 4,500 (127.3)  | 5,250 (148.6)  |
| <b>0.30</b>                         | 2,100 (59.4)   | 2,800 (79.2)  | 3,500 (99.1)   | 1820 (51.5)   | 2,800 (79.2)  | 3,000 (84.9)  | 4,000 (113.2)  | 5,000 (141.5)  | 6,000 (169.8)  | 7,000 (198.1)  |
| <b>0.20</b>                         | 3,150 (89.1)   | 4,200 (118.9) | 5,250 (148.6)  | 2730 (77.3)   | 4,200 (118.9) | 4,500 (127.3) | 6,000 (169.8)  | 7,500 (212.2)  | 9,000 (254.6)  | 10,500 (297.1) |
| <b>0.10</b>                         | 6,300 (178.0)  | 8,400 (237.8) | 10,500 (297.3) | 5460 (154.6)  | 8,400 (237.8) | 9,000 (254.6) | 12,000 (339.5) | 15,000 (424.4) | 18,000 (509.2) | 21,000 (594.1) |
| <b>0.00</b>                         | NP   | NP            | NP             | NP  | NP            | NP            | NP             | NP             | NP             | NP             |

NP = Not Permitted

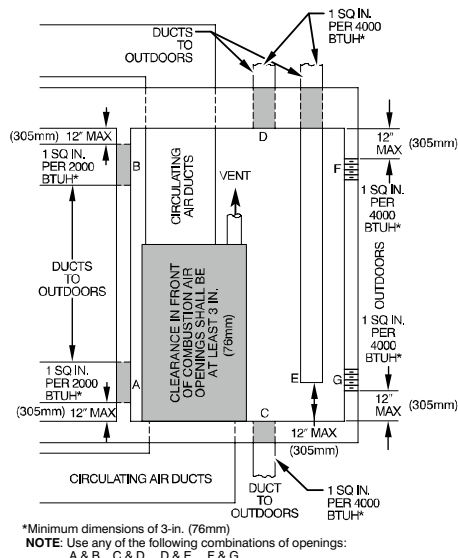


Fig. 8 – Air for Combustion, Ventilation, and Dilution for Outdoors

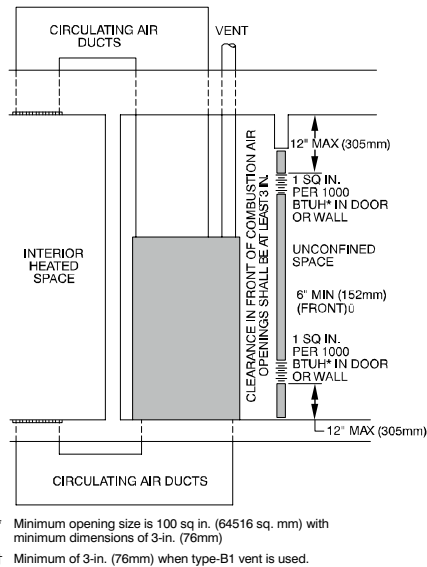


Fig. 9 – Air for Combustion, Ventilation, and Dilution from Indoors

## CONDENSATE TRAP

The condensate trap is a field installed trap. A bag of loose parts needed to install the trap is provided with the furnace. How to install the trap is shown in the Installation section of this manual. Only use the trap provided with the furnace.

## ! WARNING

### CARBON MONOXIDE POISONING AND PROPERTY DAMAGE HAZARD

Failure to follow this warning could result in property damage, personal injury or death.

The condensate trap provided with furnace must be installed per the furnace installation instructions. Do not modify the trap or substitute a different trap.

## ! NOTICE

The condensate trap extends below the underside of the casing in the horizontal position. A minimum of 6⅜-in. of physical clearance is required and 1-in. of additional clearance is recommended between the casing side and the furnace platform for the trap to extend out of the slope down.

## Condensate Drain Connection

## ! CAUTION

### FROZEN AND BURST WATER PIPE HAZARD

Failure to protect against the risk of freezing may result in property damage.

Special precautions **MUST** be made if installing furnace in an area which may drop below freezing. This can cause improper operation or damage to equipment. If furnace environment has the potential of freezing, the drain trap and drain line must be protected. The use of accessory electric heat tape and/or RV antifreeze is required for these installations.

## ! CAUTION

### PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in burst water pipes and/or property damage.

If a condensate pump is installed, a plugged condensate drain or a failed pump may cause the furnace to shut down. Do not leave the home unattended during freezing weather without turning off water supply and draining water pipes or otherwise protecting against the risk of frozen pipes.

DO NOT trap condensate water in the drain line in any other location than at the condensate drain trap supplied with the furnace. If possible, DO NOT route the drain line where it may freeze. The drain line must terminate at an inside drain to prevent freezing of the condensate and possible property damage.


Special precautions **MUST** be made if installing furnace in an area which may drop below 32° F (0° C). This can cause improper operation or damage to the equipment. If the furnace environment has the potential of freezing, the drain trap and drain line must be protected. In areas where the temperature may be below 32° F (0° C), a Condensate Freeze Protection heat tape kit is strongly recommended. Refer to the Accessory section of the Product Data Specification for current kit number. A self-regulating, shielded and waterproof heat tape rated at 3 to 6 watt per foot (10 to 20 watt per meter) at 115 volt, 40°F (4°C) may be used to provide freeze protection of the remaining condensate drain line. Wrap the drain trap and drain line with the heat tape and secure with appropriate plastic ties. Follow the heat tape manufacturer's recommendations. Prime the trap before furnace operation.

The condensate drain line must be supported and/or secured per local codes. Supports and clamps should be spaced to prevent the drain line from sagging or being dislocated from the furnace or termination point. In the absence of local codes, consult the current edition of the National Standard Plumbing Code, in the U.S.


An indoor coil condensate drain or humidifier drain can be connected to the external furnace condensate drain provided:

- The drains are not hard piped together, and


- There is an air gap at the point where the two drain lines meet or
- All condensate piping is at least 3/4" PVC and there is a relief tee at the top of condensate drain piping as shown, see Fig. 11.

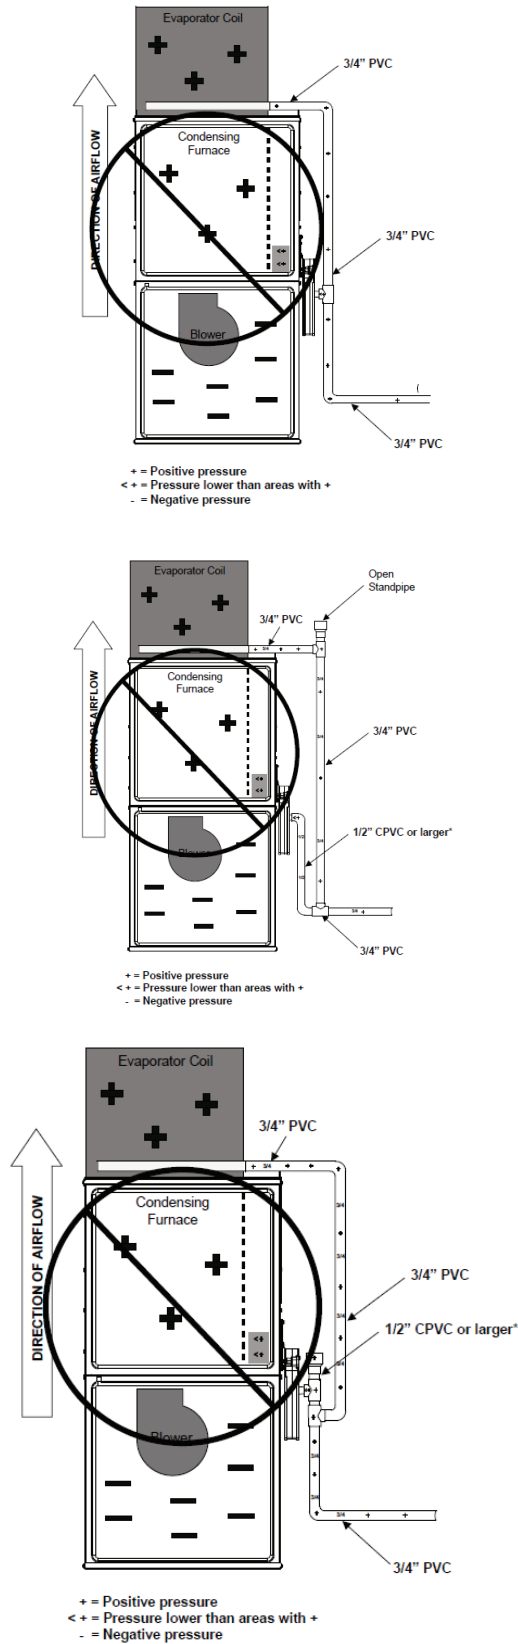


A200069

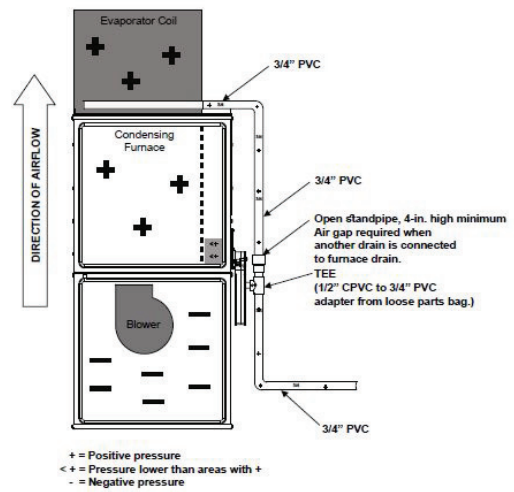

A200070

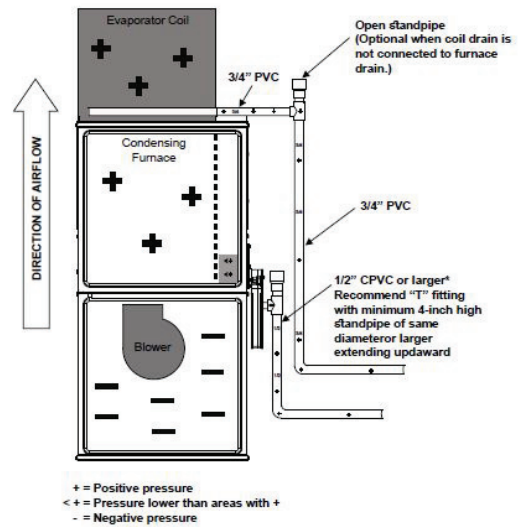

A200071

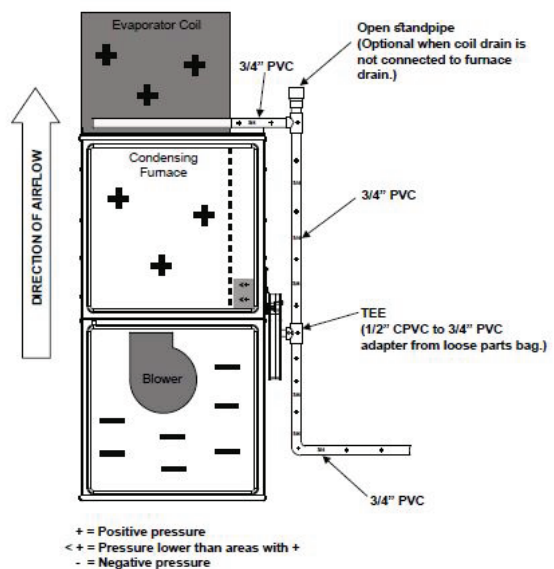

A200074

Fig. 10 – Example of Field Drain Attachment (Not Allowed)





A200071

NOTE: Coil may require metal spacer or shield between furnace and coil. See coil install requirements, see Table 6.

Fig. 11 – Example of Field Drain Attachment

A200074

**Table 5 – Condensate Trap Configurations**
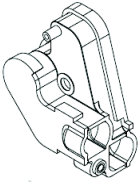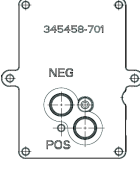
| Part  | Installation Configuration |              |   |
|---|----------------------------|--------------|---|
|   | Horizontal                 | Upflow       | Upflow Offset                                 |
| <br>D5333<3<br>Pd1q#Wuds                         | Required                   | Required     | Required                                      |
| <br>D5333<4<br>Dgdswhu                           | Not Required               | Required     | Required                                      |
| <br>345458-701<br>NEG<br>POS<br>D5333<5<br>Sodwh | Not Required               | Required     | Required                                      |
| <br>345456-701<br>D5333<6<br>Riivhw#Dgdswhu      | Not Required               | Not Required | Required (accessory kit purchased separately) |


## ! NOTICE

Upflow installation utilizing the right side air return opening should follow the Upflow Specific Steps - Offset Installation to ensure the full opening is available for return ductwork

## INSTALLATION

### Preparing the Furnace – Before Setting in Place

1. Remove appropriate knockout based off the installation orientation.

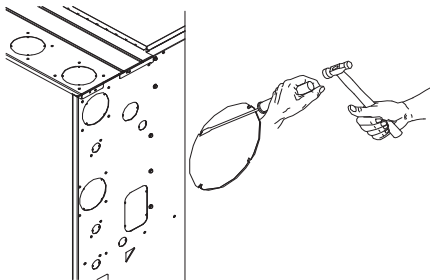

## ! CAUTION


### CUT HAZARD

Failure to follow this caution may result in personal injury. Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

**Fig. 12 – Knockout Removal**

L12F019B

2. Remove two of the factory-installed drain plugs from collector box. Orientation specific drain plugs, see [Fig. 13](#).
3. Check that all pre-installed gaskets on trap components are present, adhered, and undamaged.

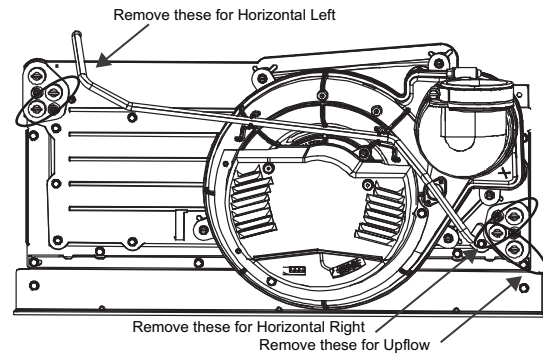**Fig. 13 – Drain Plugs**


A200075

## ! WARNING


### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in property damage, personal injury or death.

Missing or damaged gaskets on trap components may result in flue gas leakage and water leakage.

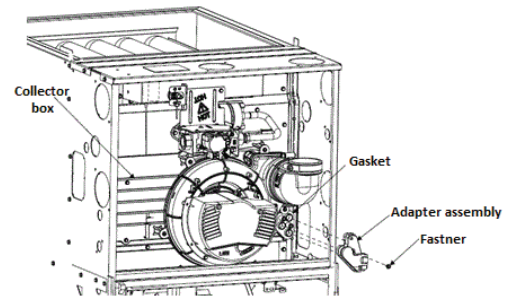**Fig. 14 – Upflow Example of Trap Adapter Installation**

A200076

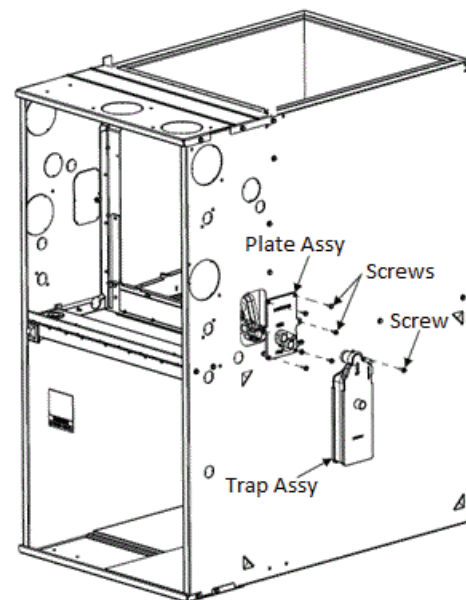**Fig. 15 – Upflow Condensate Drain**

A200064

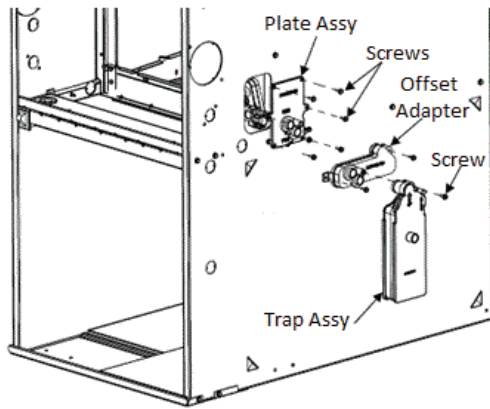


Fig. 16 – Upflow - Offset of Condensate Drain

A200065

## ! NOTICE

Upflow installations utilizing the right side air return opening should follow the Upflow Specific Steps - Offset Installation to ensure the full opening is available for return ductwork.

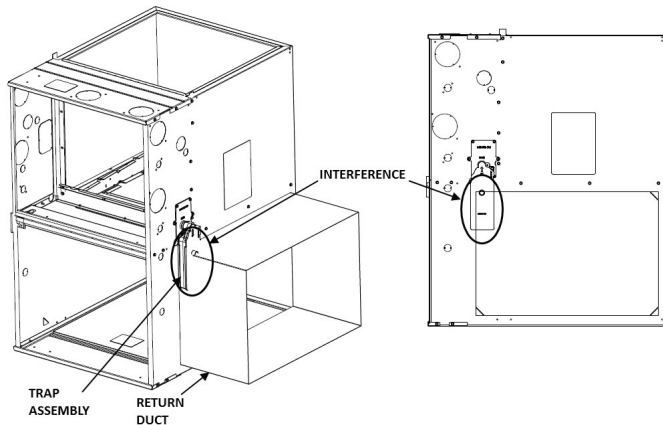


Fig. 17 – Upflow Right Side Return Configuration - Trap Interference

A200119

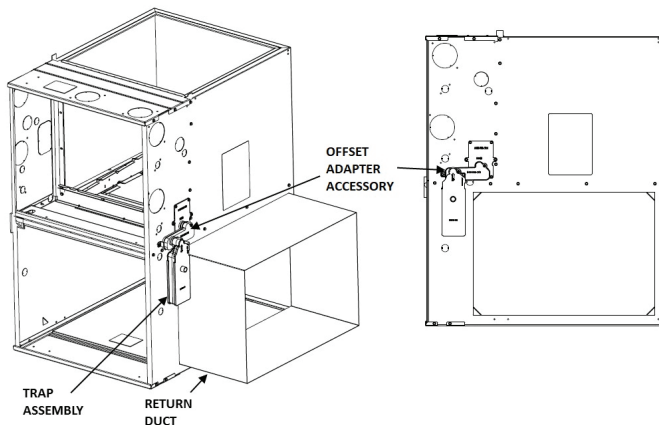


Fig. 18 – Upflow Right Side Return Configuration - Required Upflow Offset Installation

A200120

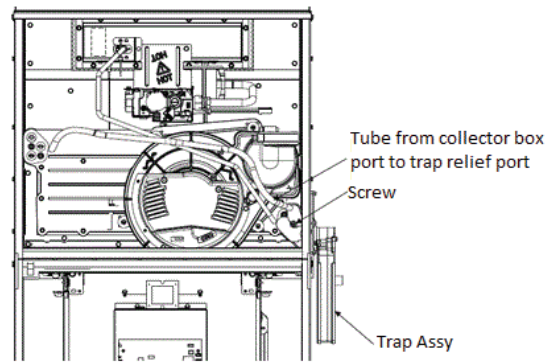


Fig. 19 – Example of Tube Connection

A200077

## Upflow Specific Steps – Standard Installation

1. Install trap adapter to the collector box using provided machine screw, see Fig. 14.
2. Screw the adapter plate to the trap adapter using provided machine screw, see Fig. 15.
3. Screw the adapter plate to the side of casing using six (6) of the provided sheet metal screws, see Fig. 15. Drilling pilot holes is recommended to better align the plate with the knockout opening.
4. Screw the trap to the adapter plate using provided machine screw, see Fig. 15.
5. Remove factory-installed collector box cap. Run tube from port on upper left of the collector box to the relief port on the trap adapter, see Fig. 19. If the tube is too long, cut any extra length from the tube.

## Upflow Specific Steps – Offset Installation

1. Trap Offset Adapter Accessory Kit (purchased separately) is required. Instead of installing the trap to the adapter plate, screw the trap offset adapter to the adapter plate, see Fig. 16.
2. Screw the trap to the trap offset adapter, see Fig. 16.
3. Screw the trap adapter plate to the casing using the supplied sheet metal screw, see Fig. 16.
4. Remove factory-installed collector box cap. Run tube from port on upper left of the collector box to the relief port on the trap adapter, see Fig. 19. If the tube is too long, cut any extra length from the tube.

## Horizontal Specific Steps

1. Accessory Horizontal Installation Kit (trap grommet) is required for all direct-vent horizontal installations (only). The kit contains a rubber casing grommet designed to seal between the furnace casing and the condensate trap, see Fig. 20.


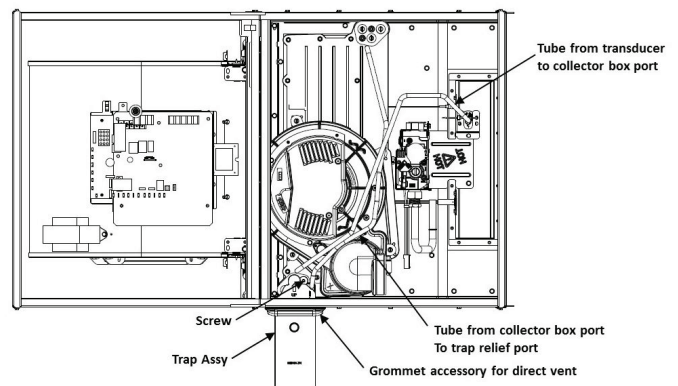


Fig. 20 – Horizontal Right - Trap Assembly Aid

A200067

2. Install the grommet in the casing when required for direct-vent horizontal applications.
3. Allow for 6-3/8" (162 mm) of clearance underneath the furnace for the condensate trap and drain line. It is recommended to leave an additional 1" clearance under the trap for service, see Fig 21.
4. Remove appropriate collector box drain plug, see Fig 13.
5. Attach trap to collector box using provided machine screw, see Fig 20.
6. For horizontal right side down:
  - a. Remove factory-installed collector box cap.
  - b. Remove the factory-installed cap from the relief port on the trap and run tube from port on the collector box corner opposite of the trap to the relief port on the trap, see Fig. 20. If the tube is too long, cut any extra length from the tube. In the installed position, the transducer tubing should be in the lower pressure port and the relief tubing should be in the higher port.

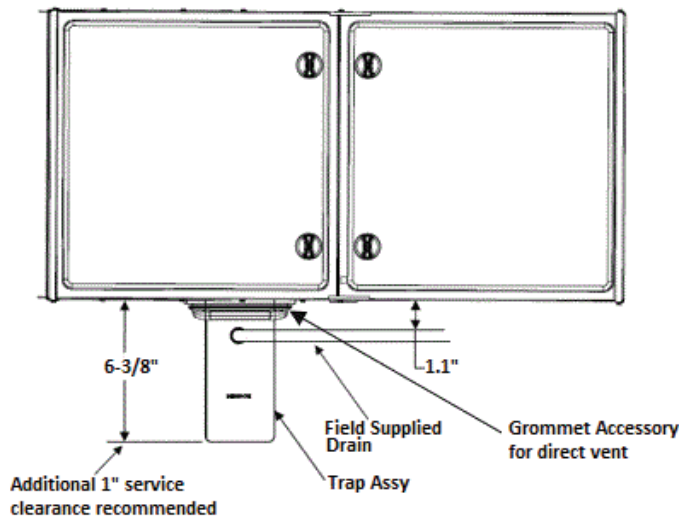

**Fig. 21 – Trap Clearance in Horizontal Application**  
(Note: Drain line can be run horizontally or vertically)

**NOTE:** Field Supplied Drain can be routed horizontally from the trap, allow at least 1/4-in. per foot of slope down.

## ! NOTICE

Extra water in transducer pressure tubing may inhibit furnace operation because of incorrect pressure readings.


**Fig. 22 – Horizontal Left - Trap Assembly Aid**

7. For horizontal left side down:
  - a. Remove factory-installed collector box cap.
  - b. Remove the factory-installed cap from the relief port on the trap and run tube from port on the collector box corner opposite of the trap to the relief port on the trap, see Fig 22. This will require removing the transducer pressure tubing from the factory-installed position. If the tube is too long, cut any extra length from the tube.
  - c. Install transducer pressure tubing on the collector box port closest to the trap where the factory-installed collector box cap was installed, see Fig 22. Trim transducer pressure tubing length ensuring no traps or loops for extra water collections. In the installed position, the transducer tubing should be in the lower pressure port and the relief tubing should be in the higher port.

It is permissible to run the trap up to 5 ft. away from the furnace to an area with the required trap clearance provided the following steps and conditions are followed.

## Alternate Horizontal Option - Remote Trap Installation Specific Steps

1. The trap can be installed using a second adapter plate purchased separately.  
Install trap adapter to the collector box using provided machine screw, see Fig. 14.
2. Screw the adapter plate to the side of casing using six (6) of the provided sheet metal screws, see Fig. 15.
3. Screw the adapter plate to the trap adapter using provided machine screw, see Fig. 23. Drilling pilot holes is recommended to better align the plate with the knockout opening.
4. Install the second trap plate at the remote location, 5 ft. or less away from the furnace, see Fig 23.
5. Using two field supplied 1/2-in. CPVC tubes of the desired length (5 ft. or less) and 2 field supplied CPVC elbows, run the drain from the adapter plate on the furnace to the remote adapter plate, see Fig 23.
6. Screw the trap to the adapter plate using provided machine screw, see Fig 23. Ensure trap is firmly secured and supported.
7. Follow steps 6 and 7 in the above section, Horizontal Specific Steps, for the proper routing of pressure tubing depending on furnace orientation. Substitute the relief port on the trap adapter for the relief port on the trap in remote trap installations. The factory-installed cap over the relief port on the trap should remain in place. Tubing should remain inside the furnace.

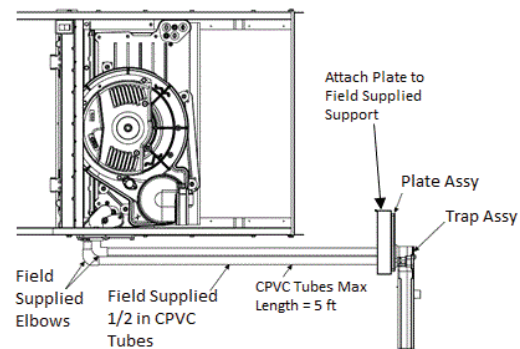

**Fig. 23 – Alternate Horizontal Option - Remote Trap Condensate Drain Connection**

1. Use of the condensate drain elbow in the loose parts bag is required to make a connection to the field supplied drain.
2. Remove the pre-formed rubber drain elbow, and two spring clamps from the loose parts bag.
3. Connect the full elbow to the outlet of the condensate trap with one spring clamp. Avoid misalignment of the drain pipe which may cause kinks in the elbow or grommet, see Fig. 24.
4. The remaining drain line can be constructed from field-supplied 1/2-in. CPVC or 3/4-in. PVC pipe, in compliance with local building codes. A factory-supplied 1/2-in. CPVC to 3/4-in. PVC adapter is supplied in the loose parts bag for use as required.
5. Install the adapter or connect the 1/2-in. CPVC pipe by sliding a spring clamp over the open end of the elbow or grommet on the outside the furnace casing.
6. Open the spring clamp and insert the long end of the adapter or the 1/2-in. CPVC pipe into the outlet stub on the drain tube, see Fig. 24.
7. Connect additional condensate piping to a code-approved drain, or to a condensate pump approved for use with acidic furnace condensate and compatible with mineral and vegetable oils, such as canola oil.

8. Allow at least 1/4-in. per foot (20 mm per meter) of slope down and away from the furnace in horizontal sections of drain line.

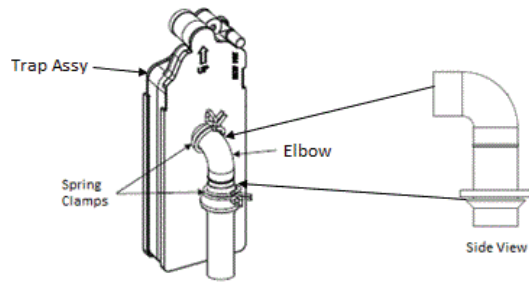


Fig. 24 – Condensate Drain Connection

A200094

## Installation of Evaporator Coils

When installing the evaporator coil, refer to the allowed installation configurations, see Table 6. Some coils require an 8-in. tall sheet metal spacer between the furnace and the coil or some require a metal shield between the drain pan of the coil and the discharge flanges of the furnace. This is to protect the composite drain pan of the evaporator coil. The coil offset adapter kits in the product accessory list will require an additional field fabricated adapter to ensure the 8-in. separation.

### ! WARNING

#### FIRE HAZARD

When installing evaporator coils that have composite (plastic) drain pans and are exposed directly to the furnace heat exchanger, a sheet metal spacer/transition or drain pan shield is required.

Failure to protect the coil composite drain pan could result in fire, personal injury, or death. (Table 6)


Table 6 – Evaporator Coil Spacer or Shield Requirements.

| Type of Coil                                   | Install Flush to Furnace | Install with 8-in. Spacer   | Install with Metal Shield |
|--|--------------------------|---|---------------------------|
| Furnace Manufacturer's N Coil                  | Allowed                  | Not Required  | Not Required              |
| Furnace Manufacturer's A Coil                  | Not Allowed              | Allowed<br>(Except 100k BTU size in Horizontal Right - MUST use shield) | Allowed<br>(See Note 2)   |
| 3rd Party Coil - Factory Shielded (See Note 1) | Allowed                  | Not Required  | Not Required              |
| 3rd Party Coil - Unshielded                    | Not Allowed              | Allowed<br>(Except 100k BTU size in Horizontal Right - MUST use shield) | Allowed<br>(See Note 3)   |


#### NOTE:

- 3rd Party Coils that are factory-supplied with a metallic shield over the plastic composite drain pan must completely shield all plastic composite materials from direct exposure to any part of the heat exchanger. Consult with 3rd Party Manufacturer to ensure coil is properly shielded. Coils that are only partially shielded should be treated as un-shielded and require a spacer.
- Field-fabricated metallic shield must completely shield all plastic composite materials from direct exposure to any part of the heat exchanger. Coils that are only partially shielded should be treated as un-shielded and require a spacer. Dimensional requirements, see Fig. 26.
- For 3rd party unshielded coils, consult manufacturer for design of a field-fabricated shield that completely shields all plastic composite materials from direct exposure to any part of the heat exchanger.

All adapters are field fabricated according to the dimensions for the metal shield, see Fig. 25, and for the 8-in. tall sheet metal spacer, see Fig. 26.

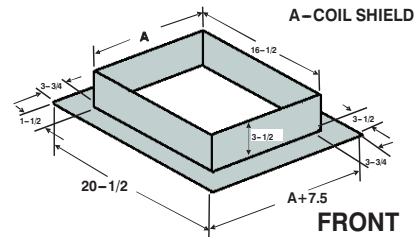

A190295

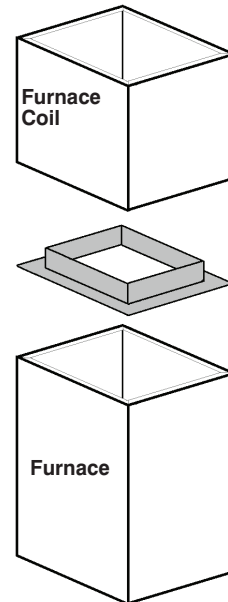


A190296

| Cabinet Size | Dimension "A" |
|--------------|---------------|
| 17-in.       | 10-in.        |
| 21-in.       | 13.5-in.      |

Fig. 25 – Dimensions Metal Shield

**NOTE:** The metal shield in the figure above is only recommended for use with furnace manufacturer's A-Coil and may not be compatible with 3rd party coils. In the event the shield shown above is incompatible with the desired coil, use a spacer or consult 3rd Party Manufacturer for recommended dimensions and design of suitable shield.

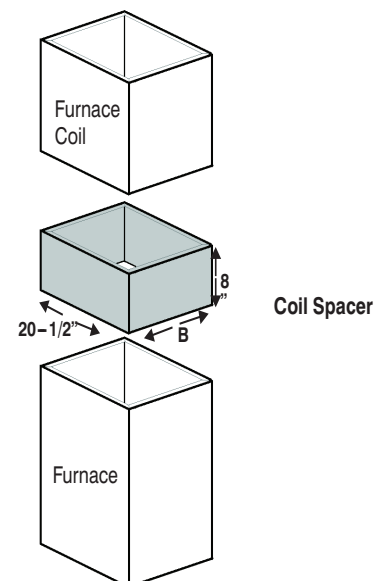

Representative drawing only, some models may vary.

A190301

| Cabinet Size | Dimension "B" |
|--------------|---------------|
| 17-in.       | 17-1/2-in.    |
| 21-in.       | 21-in.        |

**Fig. 26 – Dimensions of 8-in. Tall Metal Spacer**

**NOTE:** The allowable use of the 8-in. spacer demonstration, see [Table 6](#) and [Fig. 26](#). The spacer may taper to accommodate different coil/furnace width combinations but must always keep an 8-in. minimum height if used. Space between the top of the furnace casing and the bottom of the coil.

**NOTE:** When the indoor coil is placed in an unconditioned space, insulation should be applied and wrapped around the outside of coil casing, 8-in. adapter and supply duct contact point.

1. Create field fabricated adapter (if needed), see [Table 6](#).
2. If adapter is needed, place field fabricated adapter on furnace. Adapter should be tapered to fit coil/furnace combination when one of them is larger than the other.
3. Set coil on adapter.
4. Ensure coil is level for proper condensate drainage. In upflow application, do not tip coil toward condensate drain. In the horizontal application, ensure coil cabinet is level side to side and front to back. It is allowable to add up to 1/2-in additional slope over length and depth of coil cabinet in the direction of drain pan connection.
5. Attach coil casing to furnace using sheet metal screws. If 8-in. spacer is required, attach coil casing to spacer and attach spacer to furnace using sheet metal screws.
6. Seal joints between coil casing, adapter (if needed), see [Table 6](#), and furnace to create an air tight seal using locally approved materials.


## Upflow Installation

**NOTE:** The furnace must be pitched for proper condensate drainage, see [Fig. 31](#).

### Supply Air Connections

For a furnace not equipped with a cooling coil, the outlet duct shall be provided with a removable access panel. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the air stream. The cover attachment shall prevent leaks.

Connect supply-air duct to flanges on furnace supply-air outlet. Bend flange upward to 90° with wide duct pliers, see [Fig. 27](#). The supply-air duct must be connected to ONLY the furnace supply-outlet-air duct flanges or air conditioning coil casing (when used). DO NOT cut main furnace casing side to attach supply air duct, humidifier, or other accessories. All supply-side accessories MUST be connected to duct external to furnace main casing.

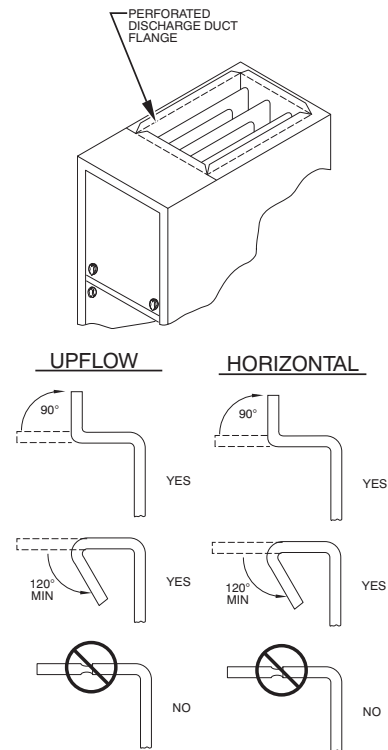

Representative drawing only, some models may vary.

A190216

**Fig. 27 – Duct Flanges**

Representative drawing only, some models may vary.

**NOTE:** Coil offset kits do not meet the 8-in. separation between the coil pan and furnace if required, see [Table 6](#). Additional metal shield or an extension to achieve an 8-in. total separation is required.

### Return Air Connections




#### FIRE HAZARD

A failure to follow this warning could cause personal injury, death and/or property damage.

Never connect return-air ducts to the back of the furnace. Follow instructions below.


The return-air duct must be connected to bottom, sides (left or right), or a combination of bottom and side(s) of main furnace casing. Refer to [Table 11](#) footnotes for other return-air restrictions. Bypass humidifier may be attached into unused return air side of the furnace casing, see [Fig. 28](#) and [Fig. 29](#).

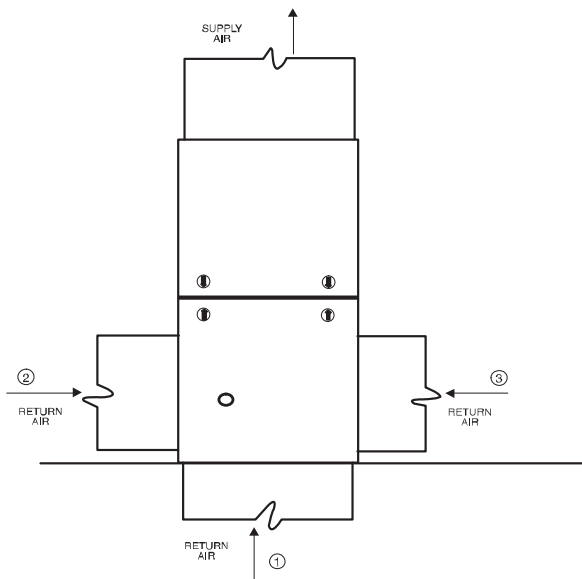

**NOTE:** For Upflow Right Side Return, use upflow offset installation for condensate trap. Refer to Table 11 footnotes for other return-air restrictions.

**Fig. 28 – Upflow Return Air Configurations and Restrictions**

A200426

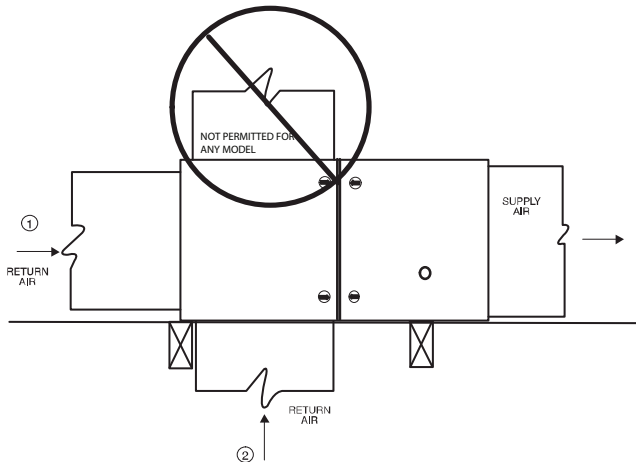

**Fig. 29 – Horizontal Return Air Configurations and Restrictions**

A200425

**NOTE:** Refer to Table 11 footnotes for other return-air restrictions.

### **Bottom Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, see Fig. 34.

### **Side Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. This panel **MUST** be in place when only side return air is used. Where required by code, seal bottom closure to furnace with tape, mastic or other durable sealing method.


**NOTE:** For allowable side returns in horizontal configurations, see Fig. 29.

## **! NOTICE**

**Upflow installations utilizing the right side air return opening should follow the Upflow Specific Steps - Offset Installation to ensure the full opening is available for return ductwork.**

### **Leveling Legs (If Desired)**

In upflow position with side return inlet(s), leveling legs may be used, see Fig. 30. Install field-supplied, 5/16 x 1-1/2 in. (8 x 38 mm) (max) corrosion-resistant machine bolts, washers and nuts.

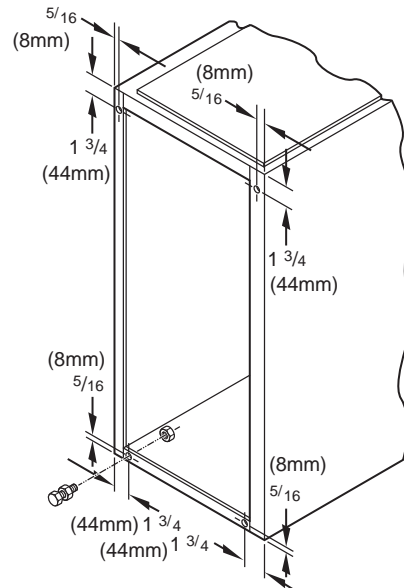

**Fig. 30 – Leveling Legs**

A89014

**NOTE:** Bottom closure must be used when leveling legs are used. It may be necessary to remove and reinstall bottom closure panel to install leveling legs. To remove bottom closure panel, see Fig. 34.

To install leveling legs:

- Position furnace on its back. Locate and drill a hole in each bottom corner of furnace.
- For each leg, install nut on bolt and then install bolt with nut in hole. (Install flat washer if desired.)
- Install another nut on other side of furnace base. (Install flat washer if desired.)
- Adjust outside nut to provide desired height, and tighten inside nut to secure arrangement.
- Reinstall bottom closure panel if removed.

## **! CAUTION**

### **CUT HAZARD**

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

### **Horizontal Installation**

**NOTE:** The furnace must be pitched forward for proper condensate drainage, see Fig. 31.

## ! WARNING

### FIRE, EXPLOSION, AND CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

Do not install the furnace on its back or hang furnace with control compartment facing downward. Safety control operation will be adversely affected. Never connect return-air ducts to the back of the furnace.


## ! CAUTION

### MINOR PROPERTY HAZARD

Failure to follow this caution may result in minor property damage.

Local codes may require a drain pan under entire furnace and condensate trap when a condensing furnace is used in an attic application or over a finished ceiling.

The furnace can be installed horizontally in an attic or crawlspace on either the left-hand (LH) or right-hand (RH) side. The furnace can be hung from floor joists, rafters or trusses or installed on a non-combustible platform, blocks, bricks or pad.

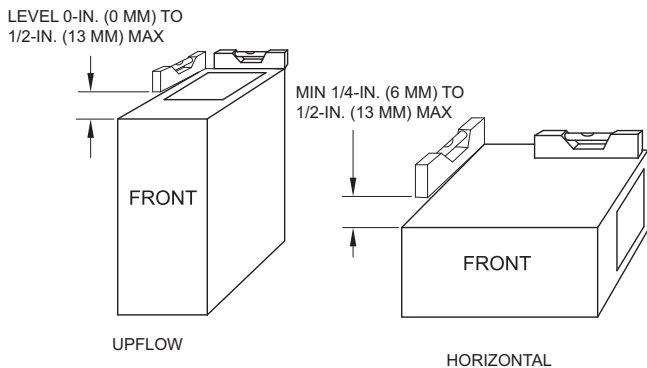

**Fig. 31 – Furnace Pitch Requirements**

A200368

### Platform Furnace Support

Construct working platform at location where all required furnace clearances are met., see Table 1 and Fig. 32. For furnaces with 1-in. (25 mm) clearance requirement on side, set furnace on non-combustible blocks, bricks or angle iron. For crawlspace installations, if the furnace is not suspended from the floor joists, the ground underneath furnace must be level and the furnace set on blocks or bricks. Condensate Trap section for required and recommended clearances for trap installation, see Fig. 6, Fig 21, and Fig. 32.


### Suspended Furnace Support

The furnace must be supported under the entire length of the furnace with threaded rod and angle iron, see Fig. 33. Secure angle iron to bottom of furnace as shown.

### Roll-Out Protection

Provide a minimum 12-in. x 22-in. (305 x 559 mm) piece of sheet metal for flame roll-out protection in front of burner area for furnaces closer than 12-in. (305 mm) above the combustible deck or suspended furnaces closer than 12-in. (305 mm) to joists. The sheet metal MUST extend underneath the furnace casing by 1-in. (25 mm) with the door removed.

The bottom closure panel on furnaces of widths 17-1/2-in. (445 mm) and larger may be used for flame roll-out protection when bottom of furnace is used for return air connection.

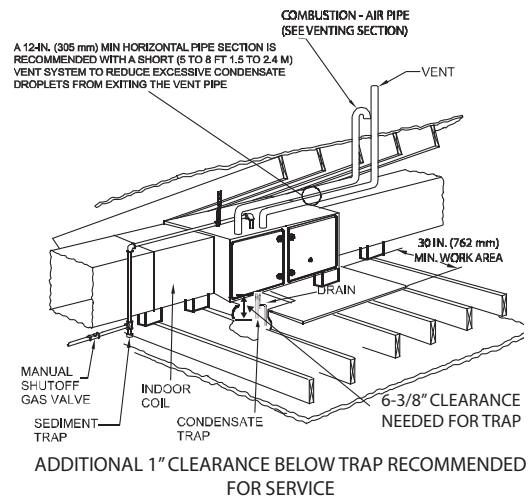


**Fig. 32 – Working Platform for Attic Installation**

A200088

**NOTE:** Furnace shown is a direct vent application. Refer to the venting section for allowable vent configurations.

**NOTE:** N Coil only, add 8-in. separation between coil and furnace for all other unshielded coils, see evaporator coil spacer or shield requirements.)

**NOTE:** Local codes may require a drain pan and condensate trap when a condensing furnace is installed over a finished ceiling.

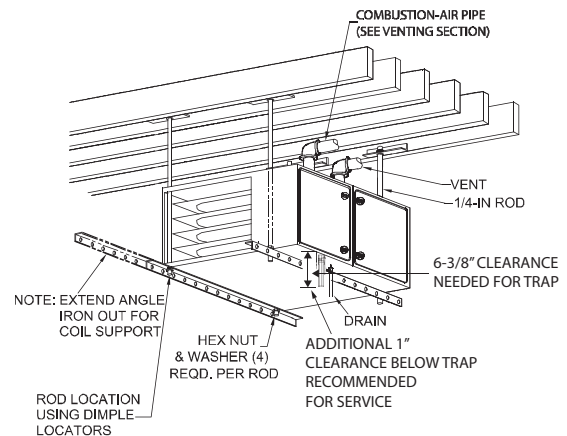

**NOTE:** FURNACE SHOWN IS A DIRECT VENT APPLICATION. REFER TO THE VENTING SECTION FOR ALLOWABLE VENT CONFIGURATIONS.

**NOTE:** (N COIL ONLY, ADD 8\"/>

**Fig. 33 – Suspended Furnace Installation**

A200085

**NOTE:** Furnace shown is a direct vent application. Refer to the venting section for allowable vent configurations.

**NOTE:** N Coil only, add 8-in. separation between coil and furnace for all other unshielded coils, see evaporator coil spacer or shield requirements.)

**NOTE:** Local codes may require a drain pan and condensate trap when a condensing furnace is installed over a finished ceiling.

### Supply Air Connections

For a furnace not equipped with a cooling coil, the outlet duct shall be provided with a removable access panel. This opening shall be accessible when the furnace is installed and shall be of such a size that the heat exchanger can be viewed for possible openings using light assistance or a probe can be inserted for sampling the air stream. The cover attachment shall prevent leaks.

Connect supply-air duct to flanges on furnace supply-air outlet. Bend flange upward to 90° with wide duct pliers, see Fig. 27. The supply-air

duct must be connected to ONLY the furnace supply-outlet-air duct flanges or air conditioning coil casing (when used). DO NOT cut main furnace casing side to attach supply air duct, humidifier, or other accessories. All supply-side accessories MUST be connected to duct external to furnace main casing.

### **Return Air Connections**

The return-air duct may be connected to bottom of the furnace. The side of casing that faces downward may also be used for return air connection. A combination of the bottom and downward facing side may also be used. The upward facing side of the casing cannot be used as a return air connection, see Fig. 29.


### **Bottom Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. Remove and discard this panel when bottom return air is used. To remove bottom closure panel, see Fig. 34.

### **Side Return Air Inlet**

These furnaces are shipped with bottom closure panel installed in bottom return-air opening. This panel MUST be in place when side return air inlet(s) are used without a bottom return air inlet.

Not all horizontal furnaces are approved for side return air connections, see Fig. 29. Where required by code, seal bottom closure to furnace with tape, mastic, or other durable sealing method.

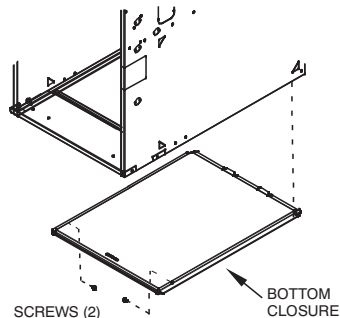

Representative drawing. Models may vary.

1. Lay furnace on the back or side
2. Remove the two (2) screws that secure the bottom closure panel to the furnace casing and remove the panel

A170123

**Fig. 34 – Removing Bottom Closure Panel (2 Screws)**

### **Filter Arrangement**

## **! WARNING**

### **FIRE, CARBON MONOXIDE AND POISONING HAZARD**

Failure to follow this warning could result in fire, personal injury or death.

Never operate a furnace without a filter or filtration device installed.  
Never operate a furnace with filter or filtration device access doors removed.

There are no provisions for an internal filter in these furnaces. An external filter rack is required and is purchased separately. A field supplied accessory air cleaner may also be used in place of the filter rack.

For upflow applications, the filter can be installed on either side of the furnace, the bottom of the furnace or any combination of side and bottom of the furnace, see Fig. 28.

For horizontal applications, the filter rack (or field supplied accessory air cleaner) can be connected to the bottom opening on the furnace. For side

return use in the horizontal position, see Fig. 29. If both side and bottom openings are used, see Fig. 29, each opening used will require a filter.

A filter rack or any field supplied accessory air cleaner can also be installed in the common return duct prior to entering the return air opening in any orientation.

The furnace may be used with an optional external media filter cabinet. The optional media filter cabinet uses either a standard 1-in. (25 mm) filter or 4-in. (102 mm) wide media filter which can be purchased separately. A field supplied accessory air cleaner may also be used in place of the media cabinet.

### **Filter and Return Duct Sizing**

Pressure drop must be taken into account when sizing filters, filter racks, IAQ devices, and associated system ductwork. For a comparison of Pressure Drop (initial/clean resistance to airflow) versus Airflow for a variety of filter media types and sizes, see Table 9. These are representative numbers. Consult the filter or IAQ device manufacturers' specification sheet for performance data for a particular filter media or IAQ device.

Design the filter and associated ductwork for the best match of pressure drop versus filter size. Best practice usually chooses filter systems with pressure drops under 0.2 in. w.c. (50 Pa), with the best blower electrical efficiency and system airflow performance occurring with filter pressure drops under 0.1 in. w.c. (25 Pa).

Due to the relatively high pressure drops of 1-in. (25 mm) thick after-market filter media, it is recommended that the filtration system be designed for at least 2-in. (51 mm) thick media.

**TIPS FROM CONTRACTORS:** Install a media cabinet capable of incorporating a 4-in. (102 mm) thick media filter. This allows room for future upgrades to other IAQ devices.

## **! NOTICE**

**Design the duct system FIRST to determine how much pressure drop may be allowed in the filter system. See the Air Ducts section. Excessive filter pressure drop often compromises system airflow and duct performance, causes inadequate airflow to the furthest ends of the duct system, as well as causes excess noise and higher than anticipated electrical consumption.**

Provide duct transitions, as required, to smoothly transition airflow from the return duct system to the filter (or IAQ device) to the furnace when the dimensions of the ductwork or furnace return air opening do not match the required filter or IAQ device dimensions. See the instructions supplied with factory-accessory duct adapters.

## **AIR DUCTS**

## **! NOTICE**

**Many states, provinces and localities are considering or have implemented standards and/or restrictions on duct sizing practices, ductwork leakage, and/or ductwork thermal, airflow and electrical efficiencies. CONSULT LOCAL CODE OFFICIALS for ductwork design and performance requirements in your area.**

### **General Requirements**

The duct system should be designed and sized according to accepted national standards such as those published by: Air Conditioning Contractors Association (ACCA Manual D), Sheet Metal and Air Conditioning Contractors National Association (SMACNA) or

American Society of Heating, Refrigerating and Air Conditioning Engineers (ASHRAE) or consult The Air Systems Design Guidelines reference tables available from your local distributor. The duct system should be sized to handle the required system design CFM at the design external static pressure. The furnace airflow rates are provided, see [Table 11](#) - CFM (with Filter). When a furnace is installed so that the supply ducts carry air circulated by the furnace to areas outside the space containing the furnace, the return air shall also be handled by duct(s) sealed to the furnace casing and terminating outside the space containing the furnace.

Secure ductwork with proper fasteners for type of ductwork used. Seal supply- and return-duct connections to furnace with code approved tape or duct sealer.

## ! NOTICE

Cabinet air leakage is less than 2% at 1.0 in. w.c. Cabinet air leakage is less than 1.4% at 0.5 in. w.c. when tested in accordance with ASHRAE Standard 193.

**NOTE:** Flexible connections should be used between ductwork and furnace to prevent transmission of vibration.

Ductwork passing through unconditioned space should be insulated to enhance system performance. When air conditioning is used, a vapor barrier is recommended.

Maintain a 1-in. (25 mm) clearance from combustible materials to supply air ductwork for a distance of 36-in. (914 mm) horizontally from the furnace. See NFPA 90B or local code for further requirements.

## Return Duct Sizing

Refer to the Filter Selection and Duct Sizing section for information on the proper selection of filter sizes and the associated ductwork and duct transitions. Improperly designed filtering systems and return ductwork are the most common causes of airflow and/or noise complaints in HVAC systems.

## Ductwork Acoustical Treatment

**NOTE:** Metal duct systems that do not have a 90 degree elbow and 10 ft. (3 M) of main duct to the first branch take-off may require internal acoustical lining. As an alternative, fibrous ductwork may be used if constructed and installed in accordance with the latest edition of SMACNA construction standard on fibrous glass ducts. Both acoustical lining and fibrous ductwork shall comply with NFPA 90B as tested by UL Standard 181 for Class 1 Rigid air ducts.

**NOTE:** For horizontal applications, the top most flange may be bent past 90° to allow the evaporator coil to hang on the flange temporarily while the remaining attachment and sealing of the coil are performed.

**Table 7 – Air Filter Selection and Duct Sizing - In. (mm)**

| FURNACE CASING WIDTH | FILTER SIZE                       |                                   | FILTER TYPE |
|----------------------|-----------------------------------|-----------------------------------|-------------|
|                      | SIDE RETURN                       | BOTTOM RETURN                     |             |
| 17-1/2 (445)         | 16 x 25 x 3/4<br>(406 x 635 x 19) | 16 x 25 x 3/4<br>(406 x 635 x 19) | Washable*   |
| 21 (533)             | 16 x 25 x 3/4<br>(406 x 635 x 19) | 20 x 25 x 3/4<br>(508 x 635 x 19) | Washable*   |

\* Recommended to maintain air filter face velocity. See Specification Product Data for part number.

**Table 8 – Opening Dimensions - In. (mm)**

| FURNACE CASING WIDTH IN. (mm) | APPLICATION  | PLENUM OPENING |              | FLOOR OPENING |              |
|-------------------------------|--|----------------|--------------|---------------|--------------|
|                               |  | A              | B            | C             | D            |
| 17-1/2 (445)                  | Upflow Applications on Combustible or Noncombustible Flooring (subbase not required) | 16 (406)       | 21-5/8 (549) | 16-5/8 (422)  | 22-1/4 (565) |
| 21 (533)                      | Upflow Applications on Combustible or Noncombustible Flooring (subbase not required) | 19-1/2 (495)   | 21-5/8 (549) | 20-1/8 (511)  | 22-1/4 (565) |

**Table 9 – Filter Media Pressure Drop (Clean) Versus Airflow - In. W.C. (Pa)**

| 16 x 25 Filter (406 x 635 mm) |       | Factory-Accessory Washable |      | Factory-Accessory Media* |      | Representative After-Market Filter Media* |      |                |      |                  |      |                |      |
|-------------------------------|-------|----------------------------|------|--------------------------|------|---|------|----------------|------|------------------|------|----------------|------|
|                               |       |                            |      |                          |      | Fiberglass*                               |      |                |      | Pleated*         |      |                |      |
| CFM                           | L/s   | (1-in. / 2.5 cm)           |      | (4-in. / 10 cm)          |      | (1-in. / 2.5 cm)                          |      | (2-in. / 5 cm) |      | (1-in. / 2.5 cm) |      | (2-in. / 5 cm) |      |
| 600                           | (283) | 0.04                       | (10) | 0.05                     | (13) | 0.06                                      | (15) | 0.09           | (22) | 0.20             | (51) | 0.13           | (34) |
| 800                           | (378) | 0.05                       | (13) | 0.07                     | (18) | 0.08                                      | (21) | 0.13           | (32) | 0.29             | (72) | 0.20           | (49) |
| 1000                          | (472) | 0.06                       | (16) | 0.11                     | (28) | 0.11                                      | (28) | 0.17           | (43) | -                | -    | 0.27           | (67) |
| 1200                          | (566) | 0.07                       | (18) | 0.15                     | (37) | 0.14                                      | (36) | 0.22           | (56) | -                | -    | -              | -    |
| 1400                          | (661) | 0.08                       | (21) | 0.19                     | (48) | 0.18                                      | (45) | 0.28           | (70) | -                | -    | -              | -    |
| 1600                          | (755) | 0.09                       | (23) | 0.24                     | (60) | 0.21                                      | (54) | -              | -    | -                | -    | -              | -    |
| 1800                          | (850) | 0.10                       | (25) | -                        | -    | 0.26                                      | (64) | -              | -    | -                | -    | -              | -    |

| 20 x 25 Filter (508 x 635 mm) |        | Factory-Accessory Washable |      | Factory-Accessory Media* |      | Representative After-Market Filter Media* |      |                |      |                  |      |                |      |
|-------------------------------|--------|----------------------------|------|--------------------------|------|---|------|----------------|------|------------------|------|----------------|------|
|                               |        |                            |      |                          |      | Fiberglass*                               |      |                |      | Pleated*         |      |                |      |
| CFM                           | (L/s)  | (1-in. / 2.5 cm)           |      | (4-in. / 10 cm)          |      | (1-in. / 2.5 cm)                          |      | (2-in. / 5 cm) |      | (1-in. / 2.5 cm) |      | (2-in. / 5 cm) |      |
| 800                           | (378)  | 0.04                       | (11) | 0.05                     | (12) | 0.06                                      | (16) | 0.09           | (24) | 0.22             | (55) | 0.15           | (37) |
| 1000                          | (472)  | 0.05                       | (13) | 0.07                     | (18) | 0.08                                      | (21) | 0.13           | (32) | 0.29             | (72) | 0.20           | (49) |
| 1200                          | (566)  | 0.06                       | (15) | 0.09                     | (22) | 0.11                                      | (27) | 0.16           | (41) | -                | -    | 0.25           | (63) |
| 1400                          | (661)  | 0.07                       | (17) | 0.12                     | (31) | 0.13                                      | (33) | 0.20           | (51) | -                | -    | 0.31           | (79) |
| 1600                          | (755)  | 0.08                       | (19) | 0.15                     | (38) | 0.16                                      | (40) | 0.24           | (61) | -                | -    | -              | -    |
| 1800                          | (850)  | 0.08                       | (21) | 0.18                     | (47) | 0.18                                      | (47) | 0.29           | (73) | -                | -    | -              | -    |
| 2000                          | (944)  | 0.09                       | (23) | 0.22                     | (56) | 0.21                                      | (54) | -              | -    | -                | -    | -              | -    |
| 2200                          | (1038) | 0.09                       | (24) | 0.26                     | (66) | 0.25                                      | (62) | -              | -    | -                | -    | -              | -    |

If the filter size that you are looking for is not contained in [Table 9](#), see [Table 10](#) for a comparison of Pressure Drop (initial/clean resistance to airflow) versus Face Velocity for a variety of filter media types.

The following equations relate Face Velocity (FPM), Filter Area and Airflow (CFM):

Filter Face Velocity = Airflow / Filter Area

Minimum Filter Area = Rated System Airflow / Maximum Filter Face Velocity

**Table 10 – Filter Media Pressure Drop (Clean) Versus Face Velocity- In. W.C. (Pa)**

| Face Velocity |       | Factory-Accessory Washable |      | Representative After-Market Filter Media* |      |                |      |                  |      |                |      |
|---------------|-------|----------------------------|------|---|------|----------------|------|------------------|------|----------------|------|
|               |       |                            |      | Fiberglass*                               |      |                |      | Pleated*         |      |                |      |
| FPM           | (m/s) | (1-in. / 2.5 cm)           |      | (1-in. / 2.5 cm)                          |      | (2-in. / 5 cm) |      | (1-in. / 2.5 cm) |      | (2-in. / 5 cm) |      |
| 200           | (1)   | 0.04                       | (10) | 0.05                                      | (13) | 0.08           | (20) | 0.18             | (47) | 0.12           | (31) |
| 300           | (1.5) | 0.05                       | (14) | 0.09                                      | (22) | 0.13           | (34) | 0.30             | (75) | 0.21           | (52) |
| 400           | (2)   | 0.07                       | (17) | 0.13                                      | (32) | 0.20           | (50) | -                | -    | 0.31           | (78) |
| 500           | (2.5) | 0.08                       | (21) | 0.18                                      | (44) | 0.27           | (69) | -                | -    | -              | -    |
| 600           | (3)   | 0.09                       | (23) | 0.23                                      | -    | -              | -    | -                | -    | -              | -    |
| 700           | (3.6) | 0.10                       | (26) | 0.29                                      | -    | -              | -    | -                | -    | -              | -    |

\*Representative estimates from filter manufacturer data sheets.

See manufacturers' specifications for pressure drop versus airflow data for specific filter media.

**Table 11 – Air Delivery - CFM (With Filter)**

| COOLING <sup>4</sup> AND HEATING AIR DELIVERY - CFM (Bottom Return With Filter) |                                  |       |       |                                |      |        |        |        |        |        |      |        |      |
|---|----------------------------------|-------|-------|--------------------------------|------|--------|--------|--------|--------|--------|------|--------|------|
| (SW1-5 and SW4-3 set to OFF, except as indicated. See notes 1 and 2)            |                                  |       |       |                                |      |        |        |        |        |        |      |        |      |
| Unit Size:<br>060C17-16   | Clg/CF Switch settings           |       |       | External Static Pressure (ESP) |      |        |        |        |        |        |      |        |      |
| Clg Switches:   | SW2-3                            | SW2-2 | SW2-1 | 0.1                            | 0.2  | 0.3    | 0.4    | 0.5    | 0.6    | 0.7    | 0.8  | 0.9    | 1.0  |
| Clg Default:  | OFF                              | OFF   | OFF   | 1300                           | 1295 | 1300   | 1300   | 1295   | 1290   | 1280   | 1265 | 1240   | 1200 |
| CF Switches   | SW3-3                            | SW3-2 | SW3-1 |                                |      |        |        |        |        |        |      |        |      |
| Low-Clg Default:  | OFF                              | OFF   | OFF   | 1300                           | 1295 | 1300   | 1300   | 1295   | 1290   | 1280   | 1265 | 1240   | 1200 |
| Cooling<br>(SW2)  | OFF                              | OFF   | ON    | 545                            | 545  | 540    | Note 4 |        |        |        |      |        |      |
|   | OFF                              | ON    | OFF   | 710                            | 720  | 720    | 725    | 720    | Note 4 |        |      |        |      |
|   | OFF                              | ON    | ON    | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
|   | ON                               | OFF   | OFF   | 1090                           | 1105 | 1115   | 1120   | 1120   | 1120   | 1110   | 1100 | 1095   | 1080 |
|   | ON                               | OFF   | ON    | 1300                           | 1295 | 1300   | 1300   | 1295   | 1290   | 1280   | 1265 | 1240   | 1200 |
|   | ON                               | ON    | OFF   | 1470                           | 1465 | 1455   | 1420   | 1385   | 1350   | 1315   | 1275 | 1240   | 1200 |
|   | ON                               | ON    | ON    | 1470                           | 1465 | 1455   | 1420   | 1385   | 1350   | 1315   | 1275 | 1240   | 1200 |
| Maximum Clg Airflow <sup>2</sup>  |                                  |       | 1515  | 1480                           | 1455 | 1420   | 1385   | 1350   | 1315   | 1275   | 1240 | 1200   |      |
| CF Switches   | SW3-3                            | SW3-2 | SW3-1 |                                |      |        |        |        |        |        |      |        |      |
| Cont. Fan Default:  | OFF                              | OFF   | OFF   | 545                            | 545  | 540    | Note 4 |        |        |        |      |        |      |
| Continuous Fan<br>(SW3)   | OFF                              | OFF   | ON    | 545                            | 545  | 540    | Note 4 |        |        |        |      |        |      |
|   | OFF                              | ON    | OFF   | 710                            | 720  | 720    | 725    | 720    | Note 4 |        |      |        |      |
|   | OFF                              | ON    | ON    | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
|   | ON                               | OFF   | OFF   | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
|   | ON                               | OFF   | ON    | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
|   | ON                               | ON    | OFF   | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
|   | ON                               | ON    | ON    | 895                            | 910  | 920    | 920    | 920    | 915    | 895    | 885  | Note 4 |      |
| Heating (SW1)   | Heat Airflow <sup>3</sup>        |       |       | 1035                           | 1030 | 1035   | 1035   | 1040   | 1035   | 1035   | 1025 | 1015   | 1005 |
|   |                                  |       |       |                                |      |        |        |        |        |        |      |        |      |
| Unit Size:<br>080C21-20 <sup>5</sup>  | Clg/CF Switch settings           |       |       | External Static Pressure (ESP) |      |        |        |        |        |        |      |        |      |
| Clg Switches:   | SW2-3                            | SW2-2 | SW2-1 | 0.1                            | 0.2  | 0.3    | 0.4    | 0.5    | 0.6    | 0.7    | 0.8  | 0.9    | 1.0  |
| Clg Default:  | OFF                              | OFF   | OFF   | 1825                           | 1830 | 1830   | 1825   | 1825   | 1825   | 1815   | 1810 | 1805   | 1785 |
| CF Switches   | SW3-3                            | SW3-2 | SW3-1 |                                |      |        |        |        |        |        |      |        |      |
| Low-Clg Default:  | OFF                              | OFF   | ON    | 695                            | 700  | Note 4 |        |        |        |        |      |        |      |
| Cooling<br>(SW2)  | OFF                              | ON    | OFF   | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | OFF                              | ON    | ON    | 1045                           | 1060 | 1070   | 1070   | 1070   | 1070   | Note 4 |      |        |      |
|   | ON                               | OFF   | OFF   | 1310                           | 1315 | 1315   | 1315   | 1310   | 1300   | 1290   | 1280 | Note 4 |      |
|   | ON                               | OFF   | ON    | 1470                           | 1475 | 1480   | 1480   | 1480   | 1475   | 1465   | 1460 | 1450   | 1440 |
|   | ON                               | ON    | OFF   | 1825                           | 1830 | 1830   | 1825   | 1825   | 1825   | 1815   | 1810 | 1805   | 1785 |
|   | ON                               | ON    | ON    | 2170                           | 2180 | 2180   | 2175   | 2170   | 2150   | 2080   | 1995 | 1915   | 1825 |
|   | Maximum Clg Airflow <sup>2</sup> |       |       | 2230                           | 2225 | 2235   | 2230   | 2195   | 2165   | 2110   | 2020 | 1935   | 1845 |
| CF Switches   | SW3-3                            | SW3-2 | SW3-1 |                                |      |        |        |        |        |        |      |        |      |
| Cont. Fan Default:  | OFF                              | OFF   | OFF   | 695                            | 700  | Note 4 |        |        |        |        |      |        |      |
| Continuous Fan<br>(SW3)   | OFF                              | OFF   | ON    | 695                            | 700  | Note 4 |        |        |        |        |      |        |      |
|   | OFF                              | ON    | OFF   | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | OFF                              | ON    | ON    | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | ON                               | OFF   | OFF   | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | ON                               | OFF   | ON    | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | ON                               | ON    | OFF   | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
|   | ON                               | ON    | ON    | 870                            | 885  | 880    | 880    | Note 4 |        |        |      |        |      |
| Heating (SW1)   | Heat Airflow <sup>3</sup>        |       |       | 1425                           | 1430 | 1435   | 1435   | 1435   | 1425   | 1420   | 1410 | 1400   | 1390 |
|   |                                  |       |       |                                |      |        |        |        |        |        |      |        |      |

**Air Delivery - CFM (With Filter) continued**

| Unit Size:<br>100C21-22 <sup>6</sup> | Clg/CF Switch settings           |       |       | External Static Pressure (ESP) |        |        |        |        |        |      |        |      |      |
|--------------------------------------|----------------------------------|-------|-------|--------------------------------|--------|--------|--------|--------|--------|------|--------|------|------|
| Clg Switches:                        | SW2-3                            | SW2-2 | SW2-1 | 0.1                            | 0.2    | 0.3    | 0.4    | 0.5    | 0.6    | 0.7  | 0.8    | 0.9  | 1.0  |
| Clg Default:                         | OFF                              | OFF   | OFF   | 1765                           | 1775   | 1790   | 1805   | 1810   | 1820   | 1820 | 1820   | 1820 | 1820 |
| CF Switches                          | SW3-3                            | SW3-2 | SW3-1 |                                |        |        |        |        |        |      |        |      |      |
| Cooling<br>(SW2)                     | OFF                              | OFF   | ON    | 630                            | Note 4 |        |        |        |        |      |        |      |      |
|                                      | OFF                              | ON    | OFF   | 805                            | 830    | Note 4 |        |        |        |      |        |      |      |
|                                      | OFF                              | ON    | ON    | 1065                           | 1075   | 1080   | 1085   | Note 4 |        |      |        |      |      |
|                                      | ON                               | OFF   | OFF   | 1240                           | 1250   | 1265   | 1270   | 1270   | Note 4 |      |        |      |      |
|                                      | ON                               | OFF   | ON    | 1410                           | 1415   | 1435   | 1445   | 1450   | 1455   | 1460 | Note 4 |      |      |
|                                      | ON                               | ON    | OFF   | 1765                           | 1775   | 1790   | 1805   | 1810   | 1820   | 1820 | 1820   | 1820 | 1820 |
|                                      | ON                               | ON    | ON    | 2115                           | 2115   | 2125   | 2140   | 2145   | 2150   | 2145 | 2140   | 2080 | 1985 |
|                                      | Maximum Clg Airflow <sup>2</sup> |       |       | 2165                           | 2185   | 2200   | 2215   | 2225   | 2240   | 2250 | 2210   | 2120 | 2030 |
| CF Switches                          | SW3-3                            | SW3-2 | SW3-1 |                                |        |        |        |        |        |      |        |      |      |
| Cont. Fan Default:                   | OFF                              | OFF   | OFF   | 630                            | Note 4 |        |        |        |        |      |        |      |      |
| Continuous Fan<br>(SW3)              | OFF                              | OFF   | ON    | 630                            | Note 4 |        |        |        |        |      |        |      |      |
|                                      | OFF                              | ON    | OFF   | 805                            | 830    | Note 4 |        |        |        |      |        |      |      |
|                                      | OFF                              | ON    | ON    | 1020                           | 1040   | 1050   | Note 4 |        |        |      |        |      |      |
|                                      | ON                               | OFF   | OFF   | 1020                           | 1040   | 1050   | Note 4 |        |        |      |        |      |      |
|                                      | ON                               | OFF   | ON    | 1020                           | 1040   | 1050   | Note 4 |        |        |      |        |      |      |
|                                      | ON                               | ON    | OFF   | 1020                           | 1040   | 1050   | Note 4 |        |        |      |        |      |      |
|                                      | ON                               | ON    | ON    | 1020                           | 1040   | 1050   | Note 4 |        |        |      |        |      |      |
|                                      |                                  |       |       |                                |        |        |        |        |        |      |        |      |      |
| Heating (SW1)                        | Heat Airflow <sup>3</sup>        |       |       | 1790                           | 1800   | 1815   | 1830   | 1835   | 1845   | 1850 | 1850   | 1855 | 1855 |

- Nominal 350 CFM/ton cooling airflow is delivered with SW1-5 and SW4-3 set to OFF.  
Set SW1-5 to ON for nominal 400 CFM/ton (+15% airflow).  
Set SW4-3 to ON for nominal 325 CFM/ton (-7% airflow).  
Set both SW1-5 and SW4-3 on ON for nominal 370 CFM/ton (+7% airflow).  
The above adjustments in airflow are subject to motor horsepower range/capacity.  
This applies to Cooling and Low-Cooling airflow, but does not affect continuous fan airflow.
- Maximum cooling airflow is achieved when switches SW2-3, SW2-2, SW2-1 and SW1-5 are set to ON, and SW4-3 is set to OFF.
- All heating CFM's are when comfort/efficiency adjustment switch (SW1-4) is set to OFF
- Ductwork must be sized for high-heating CFM within the operational range of ESP. Operation within the blank areas of the chart is not recommended because heat operation will be above 1.0 ESP.
- All airflows on noted 21" (533 mm) casing size furnaces are 5% less on side return only installations.
- Side returns for noted models, require two sides, or a side and bottom to allow sufficient airflow at the return of the furnace.
- Airflows over 1800 CFM require bottom return, two-side return, or bottom and a side return or excessive watt draw may result. A minimum filter size of 20 x 25" (508 x 635 mm) is required.

**GAS PIPING****! WARNING****FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

**! WARNING****FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Use proper length of pipe to avoid stress on gas control manifold and gas valve.

**! WARNING****FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Gas valve inlet and/or inlet pipe must remain capped until gas supply line is permanently installed to protect the valve from moisture and debris. Also, install a sediment trap in the gas supply piping at the inlet to the gas valve.

Gas piping must be installed in accordance with national and local codes. Refer to current edition of NFPA in the U.S.A.

Installations must be made in accordance with all authorities having jurisdiction. If possible, the gas supply line should be a separate line running directly from meter to furnace.

**NOTE:** Use a back-up wrench on the inlet of the gas valve when connecting the gas line to the gas valve.

## ! NOTICE

1. Gas supply connections **MUST** be performed by a licensed plumber or gas fitter.
2. When flexible connectors are used, the maximum length shall not exceed 36 in. (915 mm).
3. When lever handle type manual equipment shutoff valves are used, they shall be T-handle valves.
4. The use of copper tubing for gas piping is **NOT** approved by the state of Massachusetts.

For recommended gas pipe sizing, see [Table 12](#). Risers must be used to connect to furnace and to meter. Support all gas piping with appropriate straps, hangers, etc. Use a minimum of one hanger every 6 ft. (2 M). Joint compound (pipe dope) should be applied sparingly and only to male threads of joints.

## ! WARNING

### FIRE OR EXPLOSION HAZARD

A failure to follow this warning could result in personal injury, death, and/or property damage.

If local codes allow the use of a flexible gas appliance connector, always use a new listed connector. Do not use a connector which has previously served another gas appliance. Black iron pipe shall be installed at the furnace gas control valve and extend a minimum of 2-in. (51 mm) outside the furnace.

## ! CAUTION

### FURNACE DAMAGE HAZARD

Failure to follow this caution may result in furnace damage.

Connect gas pipe to furnace using a backup wrench to avoid damaging gas controls and burner misalignment.

An accessible manual equipment shutoff valve **MUST** be installed external to furnace casing and within 6 ft. (2 M) of furnace.

Install a sediment trap externally in the riser leading to furnace, see [Fig. 37](#). Connect a capped nipple into lower end of tee. Capped nipple should extend below level of furnace gas controls. Place a ground joint union between furnace gas control valve and exterior manual equipment gas shutoff valve.

A 1/8-in. (3 mm) NPT plugged tapping, accessible for test gauge connection, **MUST** be installed immediately upstream of gas supply connection to furnace and downstream of manual equipment shutoff valve.

Piping should be pressure and leak tested in accordance with the current edition of the NFGC in the United States, local, and national plumbing and gas codes before the furnace has been connected. After all connections have been made, purge lines and check for leakage at furnace prior to operating furnace.

**NOTE:** The furnace gas control valve inlet pressure tap connection is suitable to use as test gauge connection providing test pressure **DOES NOT** exceed maximum 0.5 psig (14-in. w.c.) stated on gas control valve, see [Fig. 68](#).

If pressure exceeds 0.5 psig (14-in. w.c.), gas supply pipe must be disconnected from furnace and capped before and during supply pipe pressure test. If test pressure is equal to or less than 0.5 psig (14-in. w.c.), turn off electric shutoff switch located on furnace gas control valve and accessible manual equipment shutoff valve before and during supply

pipe pressure test. After all connections have been made, purge lines and check for leakage at furnace prior to operating furnace.

The gas supply pressure shall be within the maximum and minimum inlet supply pressures marked on the rating plate with the furnace burners ON and OFF.

Gas entry can be from left or right side, or top panel, see [Fig. 35](#) and [Fig. 36](#).

## Gas Pipe Grommet

For direct vent (2-pipe) applications, the knockout for the gas pipe must be sealed to prevent air leakage. Remove the knockout, install the grommet in the knockout, then insert the gas pipe. The grommet is included in the loose parts bag, see [Fig. 35](#).

Table 12 – Maximum Capacity of Pipe

| NOMINAL<br>IRON PIPE<br>SIZE<br>IN. (MM) | LENGTH OF PIPE - FT (M) |          |          |           |           |
|--|-------------------------|----------|----------|-----------|-----------|
|  | 10 (3.0)                | 20 (6.0) | 30 (9.1) | 40 (12.1) | 50 (15.2) |
| 1/2 (13)                                 | 175                     | 120      | 97       | 82        | 73        |
| 3/4 (19)                                 | 360                     | 250      | 200      | 170       | 151       |
| 1 (25)                                   | 680                     | 465      | 375      | 320       | 285       |
| 1-1/4 (32)                               | 1400                    | 950      | 770      | 660       | 580       |
| 1-1/2 (39)                               | 2100                    | 1460     | 1180     | 990       | 900       |

\* Cubic ft of gas per hr for gas pressures of 0.5 psig (14-in. w.c.) or less and a pressure drop of 0.5-in. w.c. (based on a 0.60 specific gravity gas). Ref: [Table 12](#) and 6.2 of NFPA54/ANSI Z223.1 (current edition).

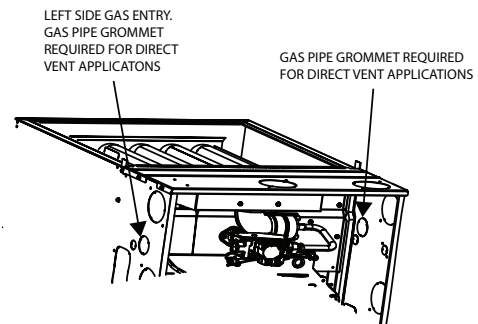


Fig. 35 – Gas Entry

A190265

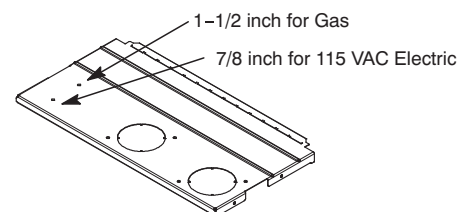


Fig. 36 – Alternate Gas and Electric Entry

A170125

**NOTE:** Top plate may be field drilled for alternate gas and 115 VAC electric entry

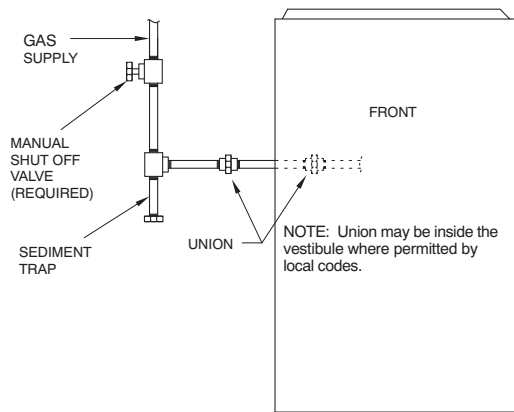


Fig. 37 – Typical Gas Pipe Arrangement

A11035

## ELECTRICAL CONNECTIONS

### ! WARNING

#### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow safety warnings could result in dangerous operation, serious injury, death or property damage.

Improper servicing could result in dangerous operation, serious injury, death or property damage.

- Before servicing, disconnect all electrical power to furnace.
- When servicing controls, label all wires prior to disconnection. Reconnect wires correctly.
- Verify proper operation after servicing.
- Always reinstall access doors after completing service and maintenance.

### ! WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Blower door switch opens 115-v power to control. No component operation can occur. Do not bypass or close switch with blower door removed.

Field wiring diagram showing typical field 115-V wiring, see Fig. 40. Check all factory and field electrical connections for tightness.

Field-supplied wiring shall conform with the limitations of 63°F (35°C) rise.

### ! WARNING

#### ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

The cabinet **MUST** have an uninterrupted or unbroken ground according to NEC NFPA 70 or local codes to minimize personal injury if an electrical fault should occur. This may consist of electrical wire, conduit approved for electrical ground or a listed, grounded power cord (where permitted by local code) when installed in accordance with existing electrical codes. Refer to the power cord manufacturer's ratings for proper wire gauge. Do not use gas piping as an electrical ground.

### ! CAUTION

#### FURNACE MAY NOT OPERATE HAZARD

Failure to follow this caution may result in intermittent furnace operation.

Furnace control must be grounded for proper operation or else control will lock out. Control must remain grounded through green/yellow wire routed to gas valve and manifold bracket screw.

### 115-V Wiring

Furnace must have a 115-v power supply properly connected and grounded.

**NOTE:** Proper polarity must be maintained for 115-v wiring. If polarity is incorrect, control LED status indicator light will flash rapidly and furnace will NOT operate.

Verify that the voltage, frequency, and phase correspond to that specified on unit rating plate. Also, check to be sure that service provided by utility is sufficient to handle load imposed by this equipment. Refer to rating plate or equipment electrical specifications, see Table 13.

**U.S.A. Installations:** Make all electrical connections in accordance with the current edition of the National Electrical Code (NEC) NFPA 70 and any local codes or ordinances that might apply.

### ! WARNING

#### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.

Do not connect aluminum wire between disconnect switch and furnace. Use only copper wire, see Fig. 39.

Use a separate, fused branch electrical circuit with a properly sized fuse or circuit breaker for this furnace. For wire size and fuse specifications, see Table 13. A readily accessible means of electrical disconnect must be located within sight of the furnace

### J-Box Installation

### ! WARNING

#### FIRE OR ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury, death, or property damage.


High voltage field connections must be located in with furnace, or in field supplied external disconnect mounted to furnace.

If field-supplied manual disconnect switch is to be mounted on furnace casing side, select a location where a drill or fastener cannot damage electrical or gas components.


The J-Box must be used when field line voltage electrical connections are made to the furnace wiring harness inside the furnace casing. The J-Box cover is not required if a field-supplied external electrical box is attached to the outside of the furnace casing. The field ground wire and furnace main ground wire are grounded when the J-Box bracket is attached to the furnace and the field ground wire and factory ground wire are secured to the bracket grounding screw. If the J-Box cover is not used, the field and factory spliced connections must be located inside the external electrical box. Do not leave splice connections unprotected inside the furnace.

The J-Box cover, mounting bracket and screws are shipped in the loose parts bag included with the furnace. J-Box mounting locations, see Fig. 38.

The J-Box mounting bracket and green ground screw is used as a grounding point for all line voltage wiring options. The J-Box cover may be omitted when electrical connections are made inside an external electrical box mounted external to the casing.

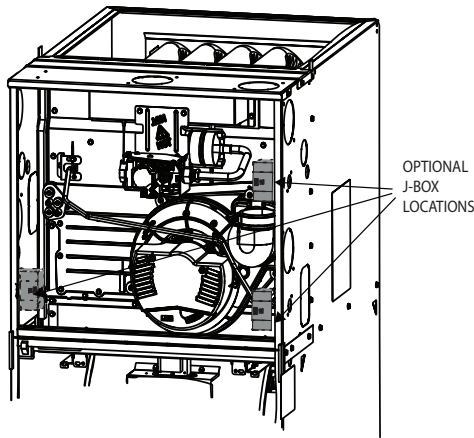

A190263

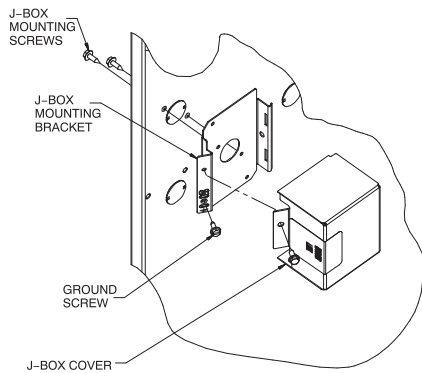

A190264

**Fig. 38 – Installing J-Box (When Used)**

### External Electrical Box on Furnace Casing

**NOTE:** Check to ensure that external electrical box does not interfere with duct work, gas piping or the indoor coil drain. Alternate electric entry through top panel, see Fig. 36.

1. Select and remove 7/8-in. (22 mm) knock-out on the desired side of the casing. Remove the knock-out from the casing.


**NOTE:** If electrical entry through the furnace top panel is used, a 7/8-in. (22 mm) hole must be drilled through the top panel.

2. Drill two (2) 1/8-in. (3 mm) pilot holes through the dimples in the furnace casing near the 7/8-in. knock-out.

**NOTE:** If electrical entry through the furnace top panel is used, mark the screw hole locations using the mounting holes in the external electrical box as a template.

#### **For a side-mounted external electrical box, complete the following:**

1. Align the J-Box bracket with the knock-out inside the furnace casing.
2. Install the threaded end of a strain-relief bushing through the J-Box bracket and the furnace casing. Strain-relief bushing should be installed so that the bushing can be tightened around the wiring harness inside the furnace casing.
3. Align the external electrical box with the 7/8-in. (22 mm) knock-out.
4. Install and tighten the lock-nut on the strain-relief bushing inside the external electrical box.
5. Fasten the external electrical box to the furnace casing using two (2) sheet metal screws.

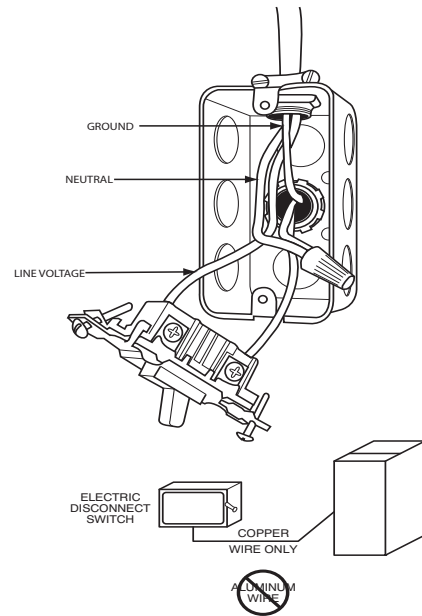

A11146

**Fig. 39 – Field-Supplied External Electrical Box on Furnace Casing**

6. Route field power wiring into external electrical box.
7. Pull furnace line voltage power wires through strain-relief bushing of the external electrical box.
8. Pull the ground wire of the field line voltage wiring through the strain-relief bushing into the furnace casing.
9. Install the green ground screw to the J-Box bracket and attach both ground wires to the green ground screw.
10. Connect any code required external disconnect(s) to field power wiring.
11. Connect field power and neutral leads to furnace power leads inside the external electrical box, see Fig. 32.

#### **For a top panel-mounted external electrical box, complete the following:**

1. Drill two (2) 1/8-in. (3 mm) pilot holes through the dimples in the furnace casing near the 7/8-in. knock-out on the side of the casing. Do not remove the knock-out in the side of the casing.
2. Align the J-Box bracket with the pilot holes inside the furnace casing.
3. Install 2 screws through the outside of the casing to secure the J-Box bracket to the furnace casing.
4. Route field power wiring into external electrical box.
5. Pull furnace line voltage power wires through strain-relief bushing of the external electrical box.
6. Pull the ground wire of the field line voltage wiring through the strain-relief bushing into the furnace casing.
7. Install the green ground screw to the J-Box bracket and attach both ground wires to the green ground screw.
8. Connect any code required external disconnect(s) to field power wiring.
9. Connect field power and neutral leads to furnace power leads inside the external electrical box, see Fig. 34.

### **Power Cord Installation in Furnace J-Box**

**NOTE:** Power cords must be able to handle the electrical requirements, see Table 13. Refer to power cord manufacturer's listings.

1. Install J-Box mounting bracket to inside of furnace casing, see Fig. 38.
2. Route listed power cord through 7/8-in. (22 mm) diameter hole in casing and J-Box bracket.

- Secure power cord to J-Box bracket with a strain relief bushing or a connector approved for the type of cord used.
- Pull furnace power wires through 1/2-in. (12 mm) diameter hole in J-Box. If necessary, loosen power wires from strain—relief wire-tie on furnace wiring harness.
- Connect field ground wire and factory ground wire to green ground screw on J-Box mounting bracket, see [Fig. 38](#).
- Connect power cord power and neutral leads to furnace power leads, see [Fig. 40](#).
- Attach furnace J-Box cover to mounting bracket with screws supplied in loose parts bag. Do not pinch wires between cover and bracket, see [Fig. 38](#).

### **BX Cable Installation in Furnace J-Box**

- Install J-Box mounting bracket to inside of furnace casing, see [Fig. 38](#).
- Route BX connector through 7/8-in. (22 mm) diameter hole in casing and J-Box bracket.
- Secure BX cable to J-Box bracket with connectors approved for the type of cable used.
- Connect field ground wire and factory ground wire to green ground screw on J-Box mounting bracket, see [Fig. 38](#).
- Connect field power and neutral leads to furnace power leads, see [Fig. 40](#).
- Attach furnace J-Box cover to mounting bracket with screws supplied in loose parts bag. Do not pinch wires between cover and bracket.

## **WARNING**

### **FIRE, EXPLOSION, ELECTRICAL SHOCK, AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in dangerous operation, personal injury, death, or property damage.

Do not drill into blower shelf of furnace to route control wiring. Route any control or accessory wiring to the blower compartment through external knockouts on the casing.

### **24-V Wiring**

Make field 24-v connections at the 24-v terminal strip, see [Fig. 42](#). Connect terminal Y/Y2, see [Fig. 76](#), for proper cooling operation. Use only AWG No. 18, color-coded, copper thermostat wire.

**NOTE:** Use AWG No. 18 color-coded copper thermostat wire for lengths up to 100 ft. (31 M). For wire lengths over 100 ft., use AWG No. 16 wire.

The 24-v circuit contains an automotive-type, 3-amp. fuse located on the control. Any direct shorts during installation, service, or maintenance could cause this fuse to blow. If fuse replacement is required, use ONLY a 3-amp. fuse of identical size, see [Fig. 42](#).

### **Thermostats**

A single stage heating and cooling thermostat can be used with the furnace. The furnace control board CPU will control the outdoor unit staging. A 2-stage thermostat can also be used to control the two-stage cooling. For 2-stage thermostat control of a 2-stage outdoor unit, remove the ACRDJ jumper from the furnace control board. Refer to typical thermostat wiring diagrams and the Sequence of Operation section for additional details. Consult the thermostat installation instructions for specific information about configuring the thermostat. , see [Fig. 42](#) and Thermostat wiring)

## **ACCESSORIES**

### **1. Electronic Air Cleaner (EAC)**

Connect an accessory Electronic Air Cleaner (if used) using 1/4-in. female quick connect terminals to the two male 1/4-in. quick-connect terminals on the control board marked EAC-1 and EAC-2. The terminals are rated for 115VAC, 1.0 amps maximum and are energized during blower motor operation.

### **2. Humidifier (HUM)**

The HUM terminal is a 24 VAC output, energized when the blower is operating during a call for heat. Connect an accessory 24 VAC, 0.5 amp. maximum humidifier (if used) to the 1/4-in. male quick-connect HUM terminal and COM-24V screw terminal on the control board thermostat strip.

**NOTE:** : If the humidifier has its own 24 VAC power supply, an isolation relay may be required. Connect the 24 VAC coil of the isolation relay to the HUM and COM/24V screw terminal on the control board thermostat strip, see [Fig. 42](#).

### **3. Communication Connector (communication connection)** This connection is used when the furnace is controlled by an optional communicating User Interface instead of a standard thermostat. The communication plug is supplied with the User Interface. Refer to the instructions supplied with the User Interface for complete details, see [Fig. 42](#).


### **4. Outside Air Thermistor (OAT)**

The OAT connection is used in conjunction with communicating User Interface. It is not required when the furnace is controlled by a standard type thermostat. Refer to the instructions supplied with the User Interface for complete details.

## **Alternate Power Supplies**


This furnace is designed to operate on utility generated power which has a smooth sinusoidal waveform. If the furnace is to be operated on a generator or other alternate power supply, the alternate power supply must produce a smooth sinusoidal waveform for compatibility with the furnace electronics. The alternate power supply must generate the same voltage, phase, and frequency (Hz) ([Table 13](#)) or the furnace rating plate. Power from an alternate power supply that is non-sinusoidal may damage the furnace electronics or cause erratic operation.

Contact the alternate power supply manufacturer for specifications and details.

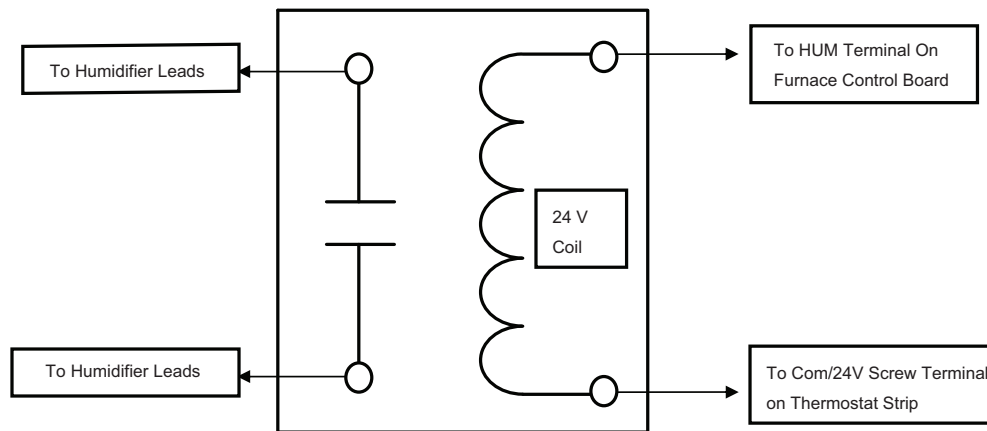


**Fig. 40 – Field-supplied Isolation Relay for Humidifiers with Internal Power Supply**

A11157

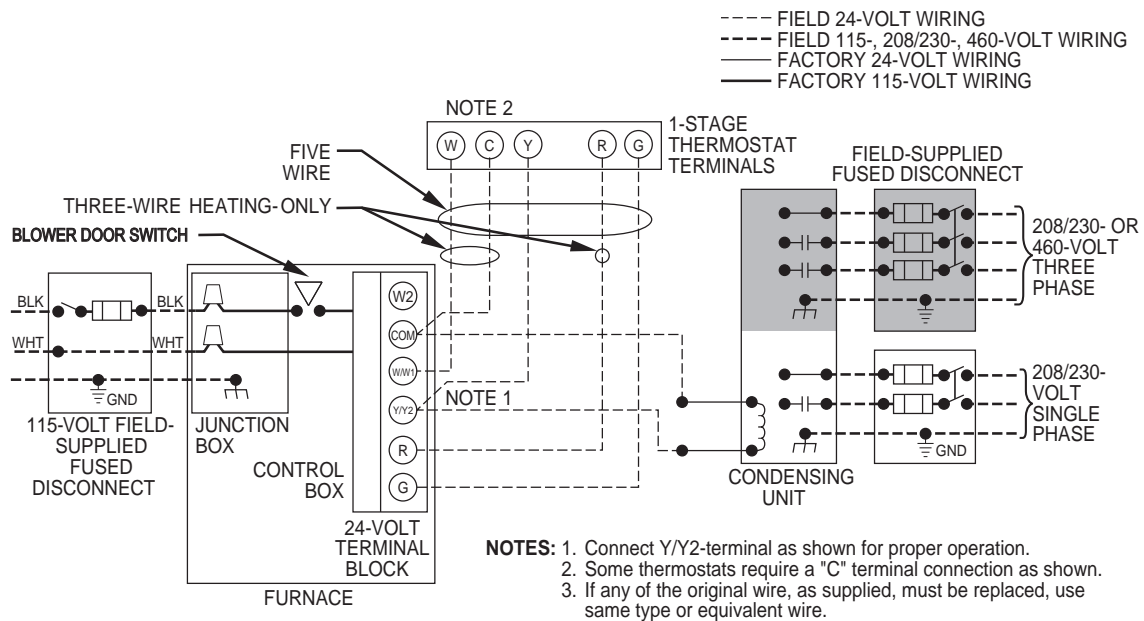

**Fig. 41 – Typical Single-Stage Wiring Diagram**

A200310

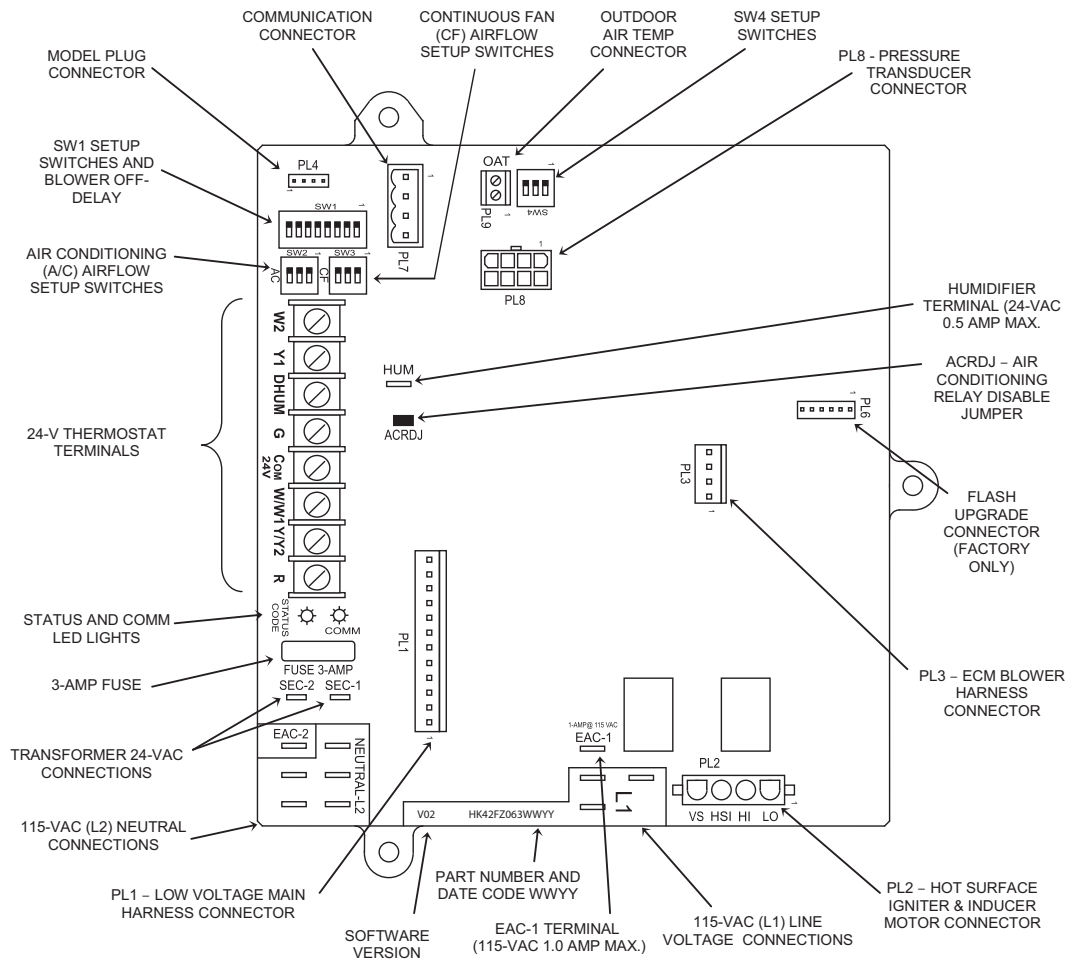

**Fig. 42 – Furnace Control**

A190350

### Table 13 – Electrical Data

| FURNACE SIZE | VOLTS-HERTZ-PHASE | OPERATING VOLTAGE RANGE* |          | MAXIMUM UNIT AMPS | UNIT AMPACITY† | MINIMUM WIRE SIZE AWG | MAXIMUM WIRE LENGTH FT (M)‡ | MAXIMUM FUSE OR CKT BKR AMPS** |
|--------------|-------------------|--------------------------|----------|-------------------|----------------|-----------------------|-----------------------------|--------------------------------|
|              |                   | Maximum*                 | Minimum* |                   |                |                       |                             |                                |
| 060C17--16   | 115-60-1          | 127                      | 104      | 11.4              | 12.6           | 14                    | 29                          | 15                             |
| 080C21--20   | 115-60-1          | 127                      | 104      | 14.3              | 15.4           | 12                    | 37                          | 20                             |
| 100C21--22   | 115-60-1          | 127                      | 104      | 14.3              | 15.4           | 12                    | 37                          | 20                             |

\*. Permissible limits of the voltage range at which the unit operates satisfactorily.

†. Unit ampacity = 125 percent of largest operating component's full load amps plus 100 percent of all other potential operating components' (EAC, humidifier, etc.) full load amps.

‡. Length shown is as measured one way along wire path between furnace and service panel for maximum 2 percent voltage drop.

\*\* . Time-delay type is recommended.

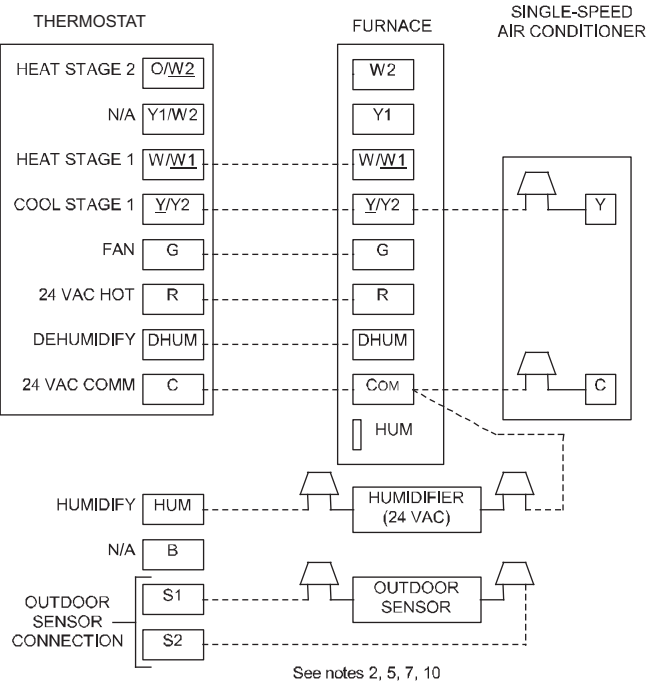


Fig. 43 – 1-Speed Variable Furnace with Single-Speed Air Conditioner

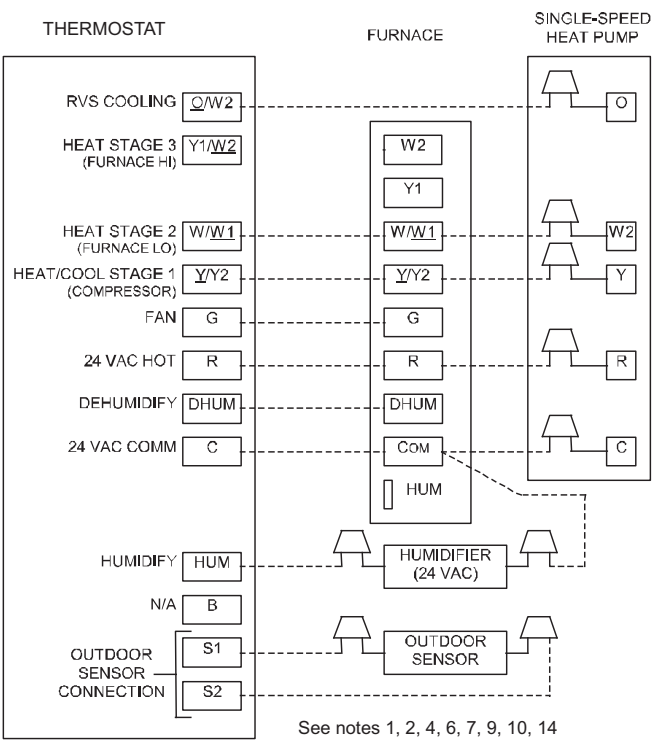


Fig. 45 – 1-Speed Variable Furnace with Single-Speed Heat Pump (Dual Fuel)

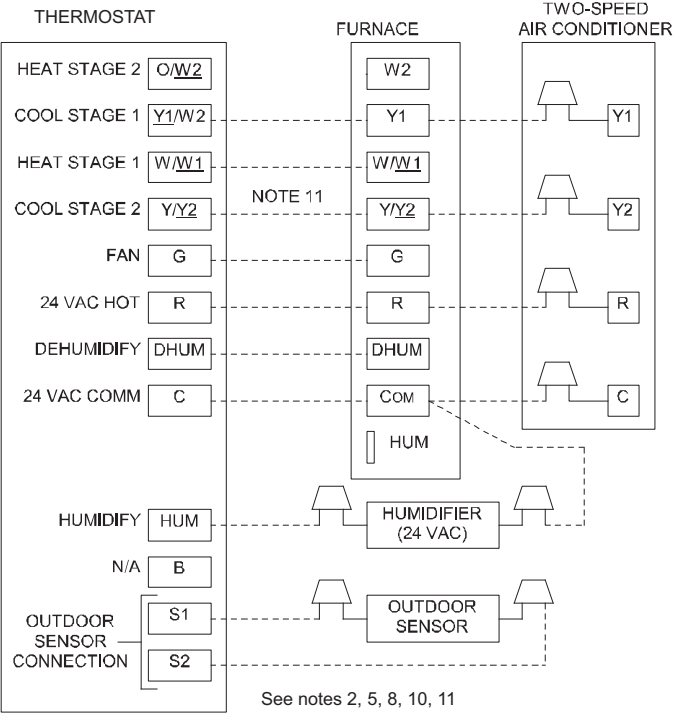


Fig. 44 – 1-Speed Variable Furnace with Two-Speed Air Conditioner


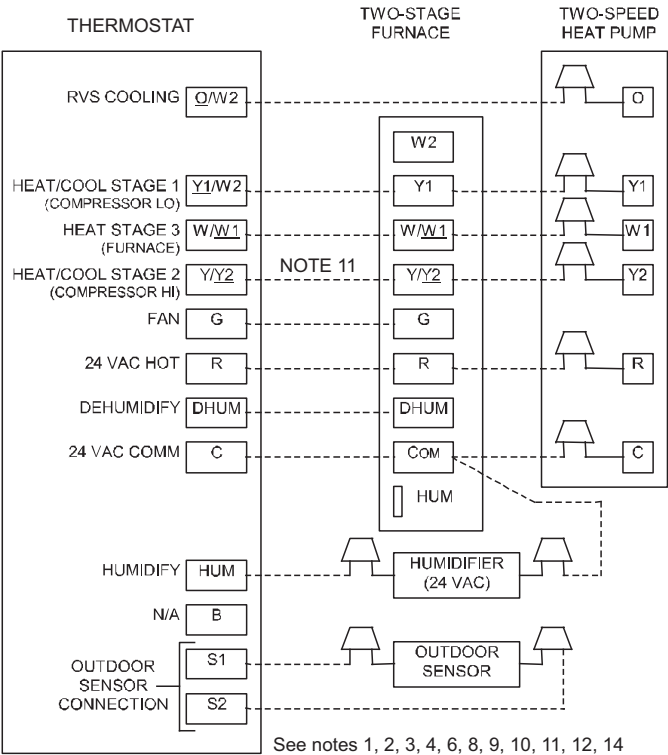


Fig. 46 – 1-Speed Variable Furnace with Two-Speed Heat Pump (Dual Fuel)

## NOTES FOR THERMOSTATS

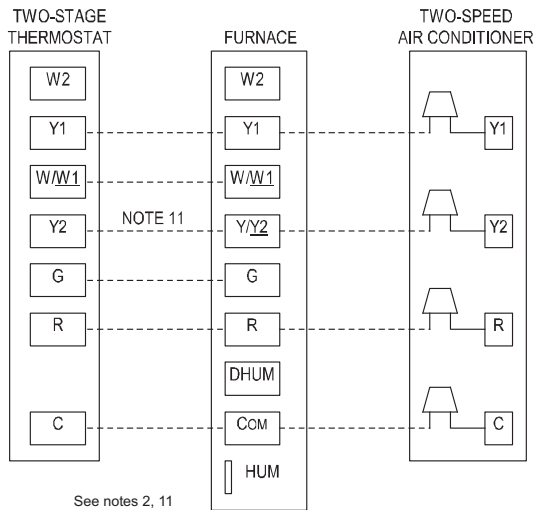

**Fig. 47 – Two-Stage Thermostat with 1-Speed Variable Furnace and Two-Speed Air Conditioner**

A190371

- Heat pump **MUST** have a high pressure switch for dual fuel applications.
- Refer to outdoor equipment Installation Instructions for additional information and setup procedure.
- If the heat pump date code is 1501E or earlier, select the “ZONE” position on the two-speed heat pump control. Heat pumps having date codes 1601E and later do not have or require a “ZONE” selection.
- Outdoor Air Temperature Sensor must be attached in all dual fuel applications.
- Dip switch No. 1 on Thermidistat should be set in OFF position for air conditioner installations. This is factory default.
- Dip switch No. 1 on Thermidistat should be set in ON position for heat pump installations.
- Dip switch No. 2 on Thermidistat should be set in OFF position for single-speed compressor operation. This is factory default.
- Dip switch No. 2 on Thermidistat should be set in ON position for two-speed compressor operation.
- Configuration Option No. 10 “Dual Fuel Selection” must be turned ON in all dual fuel applications.
- NO connection should be made to the furnace HUM terminal when using a Thermidistat.
- Optional connection: If wire is connected, ACRDJ jumper on furnace control should be removed to allow Thermidistat/Thermostat to control outdoor unit staging.
- The RVS Sensing terminal “L” should not be connected. This is internally used to sense defrost operation.
- DO NOT SELECT the “FURNACE INTERFACE” or “BALANCE POINT” option on the two-speed heat pump control board. This is controlled internally by the Thermidistat/Dual Fuel Thermostat.
- Dip switch D on Dual Fuel Thermostat should be set in OFF position for single-speed compressor operation. This is factory default.
- Dip switch D on Dual Fuel Thermostat should be set in ON position for two-speed compressor operation.

## VENTING

### WARNING

#### CARBON MONOXIDE POISONING HAZARD

Failure to follow the steps outlined below for each appliance connected to the venting system being placed into operation could result in carbon monoxide poisoning or death.

The following steps shall be followed for each appliance connected to the venting system being placed into operation, while all other appliances connected to the venting system are not in operation:

- Seal any unused openings in venting system.
- Inspect the venting system for proper size and horizontal pitch, as required in the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or the CSA B149 Natural Gas and Propane Installation Code and these instructions. Determine that there is no blockage or restriction, leakage, corrosion and other deficiencies, which could cause an unsafe condition.
- As far as practical, close all building doors and windows and all doors between the space in which the appliance(s) connected to the venting system are located and other spaces of the building.
- Close fireplace dampers.
- Turn on clothes dryers and any appliance not connected to the venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they are operating at maximum speed. Do not operate a summer exhaust fan.
- Follow the lighting instructions. Place the appliance being inspected into operation. Adjust the thermostat so appliance is operating continuously.
- Test for spillage from draft hood equipped appliances at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle.
- If improper venting is observed during any of the above tests, the venting system must be corrected in accordance with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1 Natural Gas and Propane Installation Code.
- After it has been determined that each appliance connected to the venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-fired burning appliance to their previous conditions of use.

**NOTE:** Planning for the venting system should be done in conjunction with planning for the ductwork, drainage, and furnace accessories, such as air cleaners and humidifiers. Begin assembling the venting system **AFTER** the furnace is set in place in the required orientation.

Venting for this furnace shall follow all Local codes for Category IV venting systems. This furnace is CSA approved for venting with PVC/ABS DWV venting systems. This furnace is also CSA approved for venting with M&G DuraVent® PolyPro® polypropylene venting systems.

**NOTE:** THESE INSTRUCTIONS **DO NOT** CONTAIN DETAILED INSTALLATION INSTRUCTIONS FOR POLYPROPYLENE VENTING SYSTEMS. Refer to the polypropylene venting system manufacturer’s installation instructions for the polypropylene venting system installation.

**NOTE:** When using polypropylene venting systems, all venting materials used, including the vent terminations, must be from the same manufacturer.

#### General

If this furnace replaces a furnace that was connected to a vent system or chimney, the vent or vent connectors of other remaining appliances may

need to be re-sized. Vent systems or vent connectors of other appliances must be sized to the minimum size as determined using appropriate table found in the current edition of National Fuel Gas Code NFPA 54/ANSI Z-223.1.

An abandoned masonry chimney may be used as a raceway for properly insulated and supported combustion-air (when applicable) and vent pipes. Each furnace must have its own set of combustion-air and vent pipes and be terminated individually for Direct Vent (2-Pipe) system, see Fig. 62, for single-pipe or ventilated combustion air option, see Fig. 63.

A furnace shall not be connected to a chimney flue serving a separate appliance designed to burn solid fuel.

Other gas appliances with their own venting system may also use the abandoned chimney as a raceway providing it is permitted by local code, the current edition of the National Fuel Gas Code, and the vent or liner manufacturer's installation instructions. Care must be taken to prevent the exhaust gases from one appliance from contaminating the combustion air of other gas appliances.

Do not take combustion air from inside the chimney when using ventilated combustion air or single-pipe vent option.

These furnaces can be vented as direct-vent (two-pipe), ventilated combustion air or non-direct (single-pipe) vent system. Each type of venting system is described below. Common venting between these furnaces or other appliances is prohibited.

## Materials

Combustion air and vent pipe, fittings, primers, and solvents must conform to American National Standards Institute (ANSI) standards and American Society for Testing and Materials (ASTM) standards. For approved materials for use in the U.S.A., see Table 16. This furnace is also CSA approved for venting with M&G DuraVent® PolyPro® polypropylene venting systems.

**NOTE:** When using polypropylene venting systems, all venting materials used, including the vent terminations must be from the same manufacturer.

## Venting Systems

### WARNING

#### CARBON MONOXIDE POISONING HAZARD

Failure to follow the instructions outlined below for each appliance being placed into operation could result in carbon monoxide poisoning or death.

For all venting configurations for this appliance and other gas appliances placed into operation for this structure, provisions for adequate combustion, ventilation, and dilution air must be provided in accordance with:

Current edition of Section 9.3 NFPA 54/ANSI Z223.1, Air for Combustion and Ventilation and applicable provisions of the local building codes.

### NOTICE

#### VENT TERMINATION

It is recommended that sidewall vent terminations of over 24 inches (0.6 M) in length or rooftop vent terminations of over 36 inches (1 M) in length be supported by EITHER the factory accessory vent termination kit or field-supplied brackets or supports attached to the structure. A factory accessory vent termination kit may be used for direct vent terminations. Termination kits are available for 2-in. or 3-in. pipe. For available options, see Table 14.

**Table 14 – Vent Termination Kit for Direct Vent (2-pipe) Systems**

| Vent and Combustion Air Pipe Diameters | Approved Two-Pipe Termination Fittings |               |                   |               |                | Allowable Concentric Vent Kit  |
|--|--|---------------|-------------------|---------------|----------------|--------------------------------|
|  | 1 1/2-in. (38 mm)                      | 2-in. (51 mm) | 2 1/2-in. (64 mm) | 3-in. (76 mm) | 4-in. (102 mm) |                                |
| 1 1/2-in. (38 mm)                      | No                                     | Yes           | No                | No            | No             | 2-in. (51 mm)                  |
| 2-in. (51 mm)                          | No                                     | Yes           | No                | No            | No             | 2-in. (51 mm)                  |
| 2 1/2-in. (64 mm)                      | No                                     | No            | No                | Yes           | No             | 2-in. (51 mm)<br>3-in. (76 mm) |
| 3-in. (76 mm)                          | No                                     | No            | No                | Yes           | No             | 3-in. (76 mm)                  |
| 4-in. (102 mm)                         | No                                     | No            | No                | Yes           | Yes            | 3-in. (76 mm)                  |

## Direct Vent / 2-Pipe System

In a direct-vent (2-pipe) system, all air for combustion is taken directly from outdoor atmosphere, and all flue products are discharged to outdoor atmosphere. Combustion-air and vent pipes must terminate together in the same atmospheric pressure zone, either through the roof (preferred) or a sidewall. For references to clearances required by National code authorities, see Fig. 60.

### NOTICE

#### AIR INLET PIPE

In applications where there is a risk of excessive moisture entering the combustion air inlet pipe, a moisture trap may be added to the inlet pipe to help prevent moisture from entering the furnace from the combustion air inlet pipe, see Fig. 49.

When sizing venting systems, the equivalent length of the optional inlet pipe moisture trap must be taken into account.

## Ventilated Combustion Air Systems

In a ventilated combustion air option, the vent terminates and discharges the flue products directly to the outdoors similar to a direct vent system. References to clearances required by National code authorities, see Fig. 61.

All air for combustion is piped directly to the furnace from a space that is well ventilated with outdoor air (such as an attic or crawl space) and the space is well isolated from the living space or garage. Combustion air requirements for this option are the same as the requirements for providing outside air for combustion for a single pipe vent system. Refer to the "Air For Combustion and Ventilation" Section.

## Non-Direct Vent (1-pipe) System

In a non direct-vent (1-pipe) system, all air for combustion is taken from the area adjacent to furnace, and all flue products are discharged to outdoor atmosphere. Air for combustion must be supplied as described in the Air For Combustion and Ventilation Section. Do not use an abandoned chimney to supply outside air to the furnace. References to vent clearances required by National code authorities, see Fig. 61.

## Locating the Vent Termination

### General

Combustion-air inlet pipe (direct vent/2-pipe system only) and vent pipe must terminate outside structure, either through sidewall or roof.

Special termination requirements may be required in other Canadian provinces. Refer to the authority having jurisdiction for clarification and/or additional clearance requirements.

## ! WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow the instructions outlined below for each appliance being placed into operation could result in carbon monoxide poisoning or death.

The instructions included with this furnace **DO NOT APPLY** to vent systems that are located below the furnace. **CAREFULLY FOLLOW THE INSTRUCTIONS PROVIDED WITH THE EXTERNAL VENT TRAP KIT FOR LAYING OUT THE VENTING SYSTEM AND THE DRAIN SYSTEM** when all or part of the venting system is placed below the furnace.

Proper configuration of the venting and drain system is critical when placing all or part of the venting system below the level of the furnace. **VENT GASSES COULD BE RELEASED FROM THE DRAINAGE SYSTEM** if the instructions provided with the External Vent Trap Kit are not followed.

For vent termination clearance, references to National codes for Direct Vent/2-Pipe system (see Fig. 60) and for Ventilated Combustion Air/Non-direct Vent/1-Pipe system, see Fig. 61. For exterior termination arrangements, for Direct Vent/2-Pipe system (see Fig. 62) and for Ventilated Combustion Air/Non-Direct/1-Pipe system, see Fig. 63. Contact Local code authorities for other requirements to and/or exemptions from the National codes shown in the figures.

Roof termination is often preferred since it is less susceptible to damage or contamination, is usually located away from adjacent structures, is less prone to icing conditions, and it often has less visible vent vapors. Sidewall terminations may require sealing or shielding of building surfaces with a corrosive resistance material due to the corrosive properties of combustion products from the vent system, as well as protection of adjacent structures.

Roof termination is the recommended termination location. Roof terminations provide better performance against sustained prevailing winds. The roof location is preferred since the vent and combustion air system is less susceptible to damage or contamination. The termination is usually located away from adjacent structures or other obstacles such as inside corners, windows, doors or other appliances. It is less prone to icing conditions, and it often has less visible vent vapors.

Sidewall terminations may require sealing or shielding of building surfaces with a corrosive resistance material due to the corrosive properties of combustion products from the vent system, as well as protection of adjacent structures.

## ! NOTICE

### VENT TERMINATIONS

It is recommended that sidewall vent terminations in excess of 24 inches (0.6 M) or rooftop terminations in excess of 36 inches (1 M) in vertical length be supported by **EITHER** the Direct Vent Termination Kit (Table 14) or by field-supplied brackets or supports fastened to the structure.

When determining appropriate location for termination, consider the following guidelines:

1. Comply with all clearance requirements stated (see Fig. 60 or Fig. 61) per application.
2. The vent termination must be located at least 3 feet from an inside corner and follow the clearance distances in the Inside Corner Termination drawing.

3. Termination or termination kit should be positioned where vent vapors will not damage plants/shrubs, air conditioning equipment or utility meters.
4. Do not locate termination directly into prevailing winds. Termination should be positioned so that it will not be affected by sustained prevailing winds over 30 mph, wind eddy, such as inside building corners, or by recirculation of flue gases, airborne leaves, or light snow.
5. Termination or termination kit should be positioned where it will not be damaged by or subjected to foreign objects such as stones, balls, etc.
6. Termination or termination kit should be positioned where vent vapors are not objectionable.

### Direct Vent / 2-Pipe System

Direct vent (2-pipe) vent and combustion air pipes must terminate outside the structure. For references to vent clearances required by National code authorities, see Fig. 60. Allowable vent and combustion air terminations, see Fig. 62.

## ! WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow the instructions outlined below for each appliance being placed into operation could result in carbon monoxide poisoning or death.

For all venting configurations for this appliance and other gas appliances placed into operation for the structure, provisions for adequate combustion, ventilation, and dilution air must be provided in accordance with:

Current edition of Section 9.3 NFPA 54/ANSI Z223.1 Air for Combustion and Ventilation and applicable provisions of the local building codes.

### Ventilated Combustion Air


The vent pipe for a Ventilated Combustion Air System must terminate outdoors. For references to vent clearances required by National code authorities, see Fig. 61. Allowable vent terminations, see Fig. 63. The combustion air pipe terminates in a well-ventilated attic or crawl space. Follow the clearances, see Fig. 64.

The combustion air pipe cannot terminate in attics or crawl spaces that use ventilation fans designed to operate in the heating season. If ventilation fans are present in these areas, the combustion air pipe must terminate outdoors as a Direct Vent System.

### Non-Direct Vent / 1-Pipe System

The vent pipe for a Non Direct Vent (1-pipe) system must terminate outdoors. References to vent clearances required by National Code authorities, see Fig. 61. Allowable vent terminations, see Fig. 63.

A combustion air inlet pipe to the outdoors is not required for a Non-Direct (single-pipe) Vent System. A 12-in. long section of pipe with a tight radius 2-in. (51 mm) 90 degree elbow is required to be attached to the furnace, see Fig. 48. This short inlet air pipe helps to ensure stable combustion, as well as allow for sound attenuation. To aid sound attenuation, point the inlet air pipe away from occupants. An extra elbow and/or five feet of pipe may be used to accomplish the sound attenuation function.

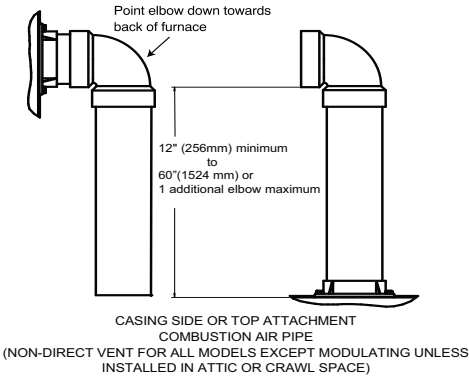

A13406

**Fig. 48 – Combustion Air Pipe Attachment**  
**Size the Vent and Combustion Air Pipes**  
**General**

Furnace combustion air and vent pipe connections are sized for 2-in. (50 mm ND) PVC/ABS DWV pipe. The combustion air and vent pipe connections also accommodate 60 mm polypropylene venting systems

with outside diameters of approximately 60 mm (2-3/8 inches). Any pipe diameter change should be made outside furnace casing in vertical pipe. Any change in diameter to the pipe must be made as close to the furnace as reasonably possible, see Fig. 51.


The Maximum Vent Length for the vent and combustion air pipe (when used) is determined from the Maximum Equivalent Vent Length (Table 18) minus the number of fittings multiplied by the deduction for each type of fitting used, see Table 19.

! NOTICE

OPTIONAL CONFIGURATION FOR COMBUSTION AIR INLET PIPE

In applications where there is a risk of excessive moisture entering the combustion air inlet pipe, a moisture trap may be added to the inlet pipe to help prevent moisture from entering the furnace from the combustion air inlet pipe, see Fig. 49.


When sizing venting systems, the equivalent length of the optional moisture trap (15 feet/5 M) must be taken into account.

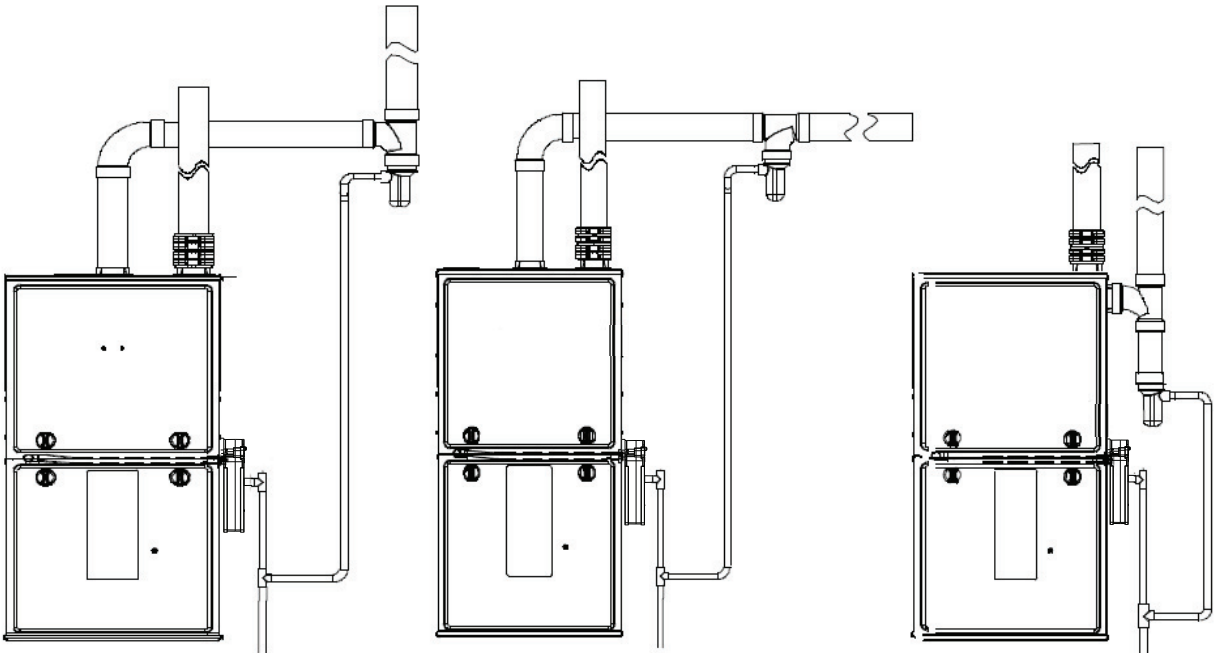

Representative drawing only, some models may vary in appearance.

**NOTE:** Only connect combustion air inlet moisture drain downstream of the furnace trap assembly as shown.


A200089

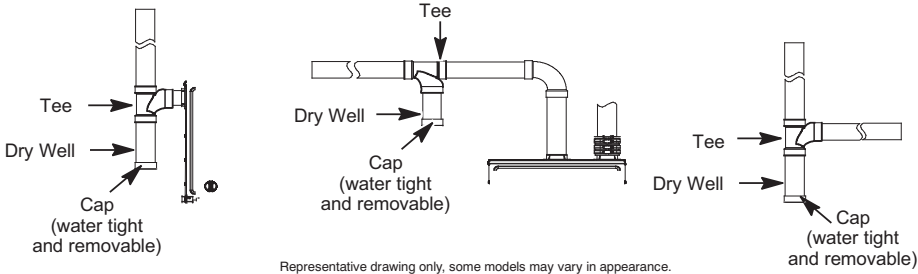

**Fig. 49 – Recommended Combustion Air Inlet Moisture Trap**


A200366

EXAMPLE FOR  
UPFLOW INSTALLATIONS.  
MAY BE APPLIED TO  
OTHER CONFIGURATIONS.

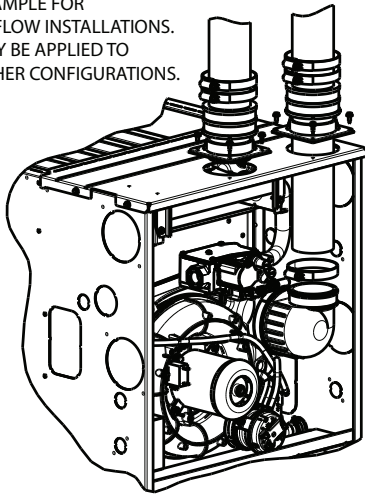

**Fig. 50 – Sample Inlet Air Pipe Connection for Polypropylene Venting Systems**

A12220

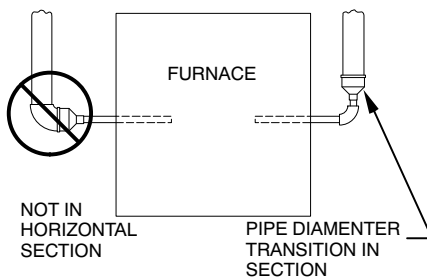

**Fig. 51 – Combustion Air and Vent Pipe Diameter Transition Location and Elbow Configuration**

A93034

### **Recommended Combustion Air Inlet Moisture Trap**

Recommended to prevent moisture from trickling into the furnace vestibule, a trap can be installed in the intake air pipe near the furnace. To prevent moisture, connecting a drain line to the trap is recommended as trace amounts of moisture will evaporate into the intake air stream. If the combustion air inlet is located near a moisture exhaust duct, or there are other concerns of excessive moisture being drawn into the combustion air inlet, it is encouraged to connect a drain line to the trap.

The trap can be constructed from a running tee of the same diameter of the intake air pipe with **EITHER** a removable cap attached to a 6-inch long pipe connected to the tee or the External Vent Trap Kit to help prevent contaminants from entering the furnace, see Fig. 49.

The External Vent Trap Kit accessory may be used as a trap for the combustion air inlet pipe if a large amount of moisture must be removed. The drain line may be connected to the same drain as the furnace condensate and the evaporator coil condensate line **ONLY** if the inlet air trap drain and the evaporator coil drain empty into an open segment of pipe above the drain. The drain line must be connected downstream of the condensate trap float switch, see Fig. 11. When using the External Vent Trap Kit, refer to those instructions for proper drain connections.

The tee may also be connected to the intake air pipe on the side of the casing, see Fig. 49.

In any configuration, it will be necessary to add the equivalent length of the tee (15 feet/5 M) to the Total Equivalent Vent Length of the venting system.

## **! NOTICE**

### **POLYPROPYLENE VENTING SYSTEMS**

Polypropylene venting systems include flexible vent pipe. These flexible vent pipes have a different equivalent vent length than straight sections of PVC/ABS DWV vent pipe. Be sure to make the appropriate deductions from the Maximum Equivalent Vent Length (MEVL), or additions to the Total Equivalent Vent Length (TEVL), when applying flexible vent pipes in polypropylene venting systems. See the polypropylene vent system manufacturer's installation instructions for details.

When using metric-sized venting systems, use these equivalencies for obtaining the proper MEVL from the Tables:

Use 2" Vent Tables for 60 mm (o.d.) vent systems

Use 3" Vent Tables for 80 mm (o.d.) vent systems

Use 4" Vent Tables for 100 mm (o.d.) vent systems

The measured length of pipe used in a single or 2-pipe termination is included in the total vent length. Include deductions from the Maximum Equivalent Vent Length (MEVL) contained in the Venting Tables for elbows and flexible vent pipe. Factory accessory concentric vent terminations or pipe lengths and elbows used for "standard" vent terminations do not require a deduction from the Maximum Equivalent Vent Length. See vent termination figures, see Table 18. Include a deduction for a Tee when used for Alberta and Saskatchewan terminations.

**NOTE:** Polypropylene venting systems **MAY** require additional deductions from the MEVL, or additions to the TEVL, for vent terminations and flexible pipe sections. See the polypropylene venting system manufacturer's instructions for details on equivalent lengths of vent terminations and flexible vent pipes, and for calculating total vent lengths.

To calculate the Total Equivalent Vent Length (TEVL) of the venting system:

1. Measure the individual distance from the furnace to the termination for each pipe.
2. Count the number of elbows for each pipe.
3. For each pipe, multiply the number of elbows by the equivalent length for the type of elbow used. Record the equivalent length of all the elbows for each pipe.
4. If a Tee is used on the termination (Alberta and Saskatchewan, when required) record the equivalent length of the Tee used.
5. Calculate Total Equivalent Vent Length by adding the equivalent lengths of the fittings to the lengths of the individual vent and combustion air pipes.
6. When using polypropylene venting systems with flexible vent pipes, perform adjustments for the equivalent length of the flexible vent pipe to the calculated total equivalent venting system length. See the polypropylene vent system manufacturer's instructions for details.
7. Select a diameter of vent pipe (Table 18) and note the Maximum Equivalent Vent Length (MEVL) shown for that application for that specific furnace input size. Compare the Total Equivalent Vent Length (TEVL) to the MEVL:
8. If the Total Equivalent Vent Length is **shorter** than the Maximum Equivalent Vent Length for the diameter of pipe chosen, then that diameter of pipe selected may be used.
9. If the Total Vent Length is **longer** than the Maximum Equivalent Vent Length for the diameter of pipe chosen, that diameter pipe

MAY NOT be used for venting the furnace. Try the next larger diameter pipe.

**NOTE:** If the calculated Total Equivalent Vent Lengths results in different diameter pipes for the vent and combustion air, select the larger diameter for both pipes.

**NOTE:** If the Maximum Vent Length for diameter of the pipe selected is longer than the measured length and the equivalent length of all the fittings and terminations (TEVL), recalculate Total Equivalent Vent Length using the next smaller diameter. If the Maximum Equivalent Vent Length is still longer than the longer TEVL of the vent pipe or combustion air pipe, then that diameter of pipe selected may be used.

When installing vent systems pipe lengths of 10 ft. (3 M) or less, use the smallest allowable pipe diameter. Using a pipe size greater than required for short venting systems may result in loss of efficiency, incomplete combustion, flame disturbance, or flame sense lockout.

For vent systems longer than 10 ft. (3 M), any larger diameter vent pipe (Table 18) FOR THAT SIZE FURNACE may be used.

### Combustion Air and Vent Piping Insulation Guidelines

**NOTE:** Use closed cell, neoprene insulation or equivalent.

The vent pipe may pass through unconditioned areas. The amount of exposed pipe allowed, see Table 17.

1. Using winter design temperature (used in load calculations), find appropriate temperature for your application and furnace model.
2. Determine the amount of total and exposed vent pipe.
3. Determine required insulation thickness for exposed pipe length(s).
4. When combustion air inlet piping is installed above a suspended ceiling, the pipe **MUST** be insulated with moisture resistant insulation such as Armaflex or other equivalent type of insulation.
5. Insulate combustion air inlet piping when run in warm, humid spaces.
6. Install the insulation per the insulation manufacturer's installation instructions.

**NOTE:** Pipe length (ft. / M) specified for maximum pipe lengths located in unconditioned spaces cannot exceed total allowable pipe length as calculated, see Table 18.

### Configure the Furnace

#### ! CAUTION


##### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

To route the vent pipe and combustion air pipe through the furnace, the manufacturer supplied kit must be used. Failure to properly seal the blower compartment from the furnace vestibule could result in the circulation of carbon monoxide throughout the structure. The vent pipe and combustion air pipe must be a continuous pipe while passing through the blower compartment. Seals supplied in this kit must be installed per the instructions provided. Follow all procedures outlined in these instructions.

### Near Furnace Vent Connections

Offsets in the vertical portion of the vent pipe should be made with 45 deg. elbows instead of 90 deg. elbows. Short horizontal runs of vent pipe are difficult to pitch correctly and may trap water in the vent pipe. Trapped water in the vent pipe may result in nuisance faults.

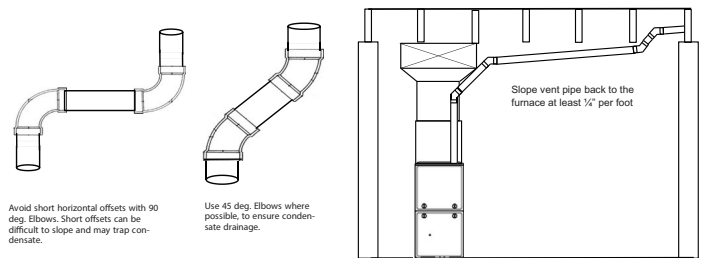

A14546

**Fig. 52 – Near Furnace Vent Connections**

### Install the Vent and Combustion Air Pipes

With the furnace installed in the required position, remove the desired knockouts from the casing. It will be necessary to remove one knockout for the vent pipe and the other knockout for the combustion air connection, see Fig. 12.

Use a flat blade screwdriver and tap on the knockout on opposite sides, where the knockout meets the casing. Fold the knockout down with duct pliers and work the knockout back and forth until it is removed. Trim any excess metal from the knockout with tin snips.

The vent elbow can be rotated to the required location on the casing if necessary, see Fig. 54. To rotate the vent elbow:

1. Loosen the clamp on the inlet of the vent elbow attached to the inducer.
2. Rotate the vent elbow to the required position. There are rounded notches on the vent elbow to align it with the inducer housing for each orientation.
3. Tighten the clamp around the vent elbow. Torque the clamp to 15 lb-in, see Fig. 56 through Fig. 58.

### Installing the Vent Pipe Adapter and Combustion Air Pipe Adapter

#### ! CAUTION

##### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

To route the vent pipe and combustion air pipe through the furnace, the manufacturer supplied kit must be used. Failure to properly seal the blower compartment from the furnace vestibule could result in the circulation of carbon monoxide throughout the structure. The vent pipe and combustion air pipe must be a continuous pipe while passing through the blower compartment. Seals supplied in this kit must be installed per the instructions provided. Follow all procedures outlined in these instructions.

#### ! WARNING

##### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

DO NOT use cement to join polypropylene venting systems. Follow the polypropylene venting system manufacturer's instructions for installing polypropylene venting systems.


**NOTE:** The rubber coupling that attaches to the vent pipe adapter must be used. The adapter seals the vent pipe to the casing and reduces the strain on the vent elbow attached to the inducer.

1. Apply the gaskets to the vent pipe and combustion air pipe adapters. If supplied, remove and discard round center "slug" from interior of gasket, see Fig. 53.


**NOTE:** The vent pipe adapter can be distinguished from the inlet pipe adapter by the absence of an internal pipe-stopping ring. The vent pipe

can pass through the vent pipe adapter; it cannot pass through the inlet pipe adapter.

2. Align the screw holes in the plastic vent pipe adapter with the dimples in the casing.
3. Pilot drill the screw holes for the adapter in the casing and attach the vent pipe adapter to the furnace with sheet metal screws
4. Slide the end of the rubber vent coupling with notches in it over the standoffs on the vent pipe adapter.
5. Insert a length of vent pipe through the coupling into the outlet of the vent elbow.
6. Tighten the clamp around the outlet of the vent elbow. Torque the clamp to 15 lb-in.

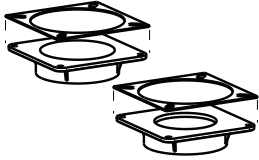


Attach gaskets to vent pipe and combustion air adapters.

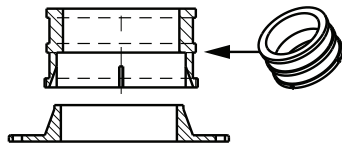

Vent Coupling and Adapter

A13074

**Fig. 53 – Vent Coupling and Adapter with Gaskets**

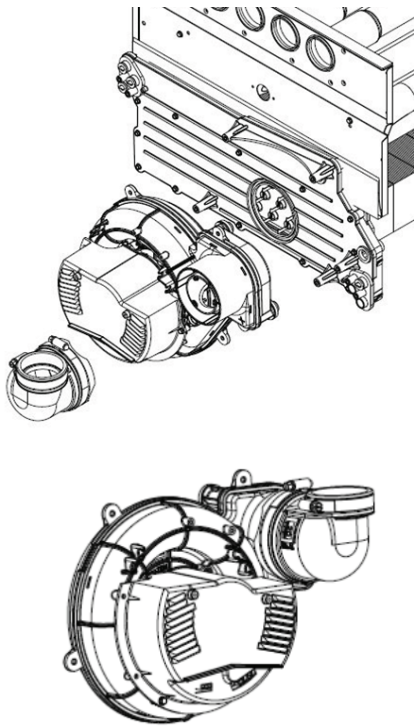

**Fig. 54 – Inducer Vent Elbow**

A200367

## ! NOTICE

DO NOT USE THESE TECHNIQUES FOR POLYPROPYLENE VENT PIPING SYSTEMS. See the polypropylene vent system manufacturer's instructions for installing polypropylene venting systems.

Install the remaining vent and combustion air pipes as shown below. It is recommended that all pipes be cut, prepared, and pre-assembled before permanently cementing any joint.

1. Working from furnace to outside, cut pipe to required length(s).
2. De-burr inside and outside of pipe.
3. Chamfer outside edge of pipe for better distribution of primer and cement.

4. Complete the vent and combustion air pipe installation by connecting the concentric vent or by installing the required termination elbows, see Fig. 62 and Fig. 63.  
For Ventilated Combustion Air Termination, see Fig. 64.
5. Clean and dry all surfaces to be joined.
6. Check dry fit of pipe and mark insertion depth on pipe.
7. Insert the vent pipe into the vent elbow.
8. Torque clamp on vent elbow 15 lb-in.
9. Torque clamp on vent coupling 15 lb-in.
10. Insert the combustion air pipe into the adapter.
11. Pilot drill a screw hole through the adapter into the combustion air pipe and secure the pipe to the adapter with sheet metal screws. **DO NOT DRILL INTO POLYPROPYLENE VENT PIPES.** Use an optional accessory vent coupling, if needed.
12. Seal around the combustion air pipe with silicone or foil tape. **SILICONE SEALERS MAY NOT BE APPROPRIATE FOR POLYPROPYLENE VENT SYSTEMS. SEE POLYPROPYLENE VENT SYSTEM MANUFACTURER'S INSTRUCTIONS.**
13. After pipes have been cut and pre-assembled, apply generous layer of cement primer to pipe fitting socket and end of pipe to insertion mark. Quickly apply approved cement to end of pipe and fitting socket (over primer). Apply cement in a light, uniform coat on inside of socket to prevent buildup of excess cement. Apply second coat. **DO NOT CEMENT POLYPROPYLENE FITTINGS.**
14. While cement is still wet, twist pipe into socket with 1/4-in. turn. Be sure pipe is fully inserted into fitting socket.
15. Wipe excess cement from joint. A continuous bead of cement will be visible around perimeter of a properly made joint.
16. Handle pipe joints carefully until cement sets.
17. Horizontal portions of the venting system shall be supported to prevent sagging. Space combustion air piping and vent piping hangers, see Table 15. Support pipes using perforated metal hanging strap or commercially available hangers or straps designed to support plastic pipe.
18. Slope the vent and combustion air piping downward towards furnace. A minimum slope of at least 1/4-in. (6 mm) per linear ft. (1-in (25 mm) per 4 ft. (1.2 M)) with no sags between hangers is required. See Caution Box below.

## ! CAUTION

### FURNACE RELIABILITY HAZARD

Failure to follow this caution may result in nuisance short cycling, frozen vent termination, and/or no heat.

Slope the vent and combustion air piping downward towards furnace a minimum of 1/4-in. (6 mm) per linear ft. of pipe.

19. Use appropriate methods to seal openings where combustion air pipe and vent pipe pass through roof or sidewall.

Table 15 – Hanger Spacing

| Diameter  | Material   |             |           |           |               |
|-----------|------------|-------------|-----------|-----------|---------------|
|           | PVC Sch 40 | SDR 21 & 26 | ABS       | CPVC      | Polypropylene |
| 1 1/2-in. | 3-ft.      | 2 1/2-ft.   | 3-ft.     | 3-ft.     | 3.25-ft.      |
| 38-mm     | 914-mm     | 762-mm      | 914-mm    | 914-mm    | 1000 mm       |
| 2-in.     | 3-ft.      | 3-ft.       | 3-ft.     | 3-ft.     | 3.25-ft.      |
| 51-mm     | 914-mm     | 914-mm      | 914-mm    | 914-mm    | 1000 mm       |
| 2 1/2-in. | 3 1/2-ft.  | 3-ft.       | 3 1/2-ft. | 3 1/2-ft. | 3.25-ft.      |
| 64-mm     | 1067-mm    | 914-mm      | 1067-mm   | 1067-mm   | 1000 mm       |
| 3-in.     | 3 1/2-ft.  | 3-ft.       | 3 1/2-ft. | 3 1/2-ft. | 3.25-ft.      |
| 76-mm     | 1067-mm    | 914-mm      | 1067-mm   | 1067-mm   | 1000 mm       |
| 4-in.     | 4-ft.      | 3 1/2-ft.   | 4-ft.     | 4-ft.     | 3.25-ft.      |

## ⚠ WARNING

### CARBON MONOXIDE POISONING HAZARD

Failure to follow this warning could result in personal injury or death.

**DO NOT** use cement to join polypropylene venting systems. Follow the polypropylene venting system manufacturer's instructions for installing polypropylene venting systems.

### Optional Installation of the Vent Pipe

**NOTE: DO NOT USE THIS TECHNIQUE FOR POLYPROPYLENE VENTING SYSTEMS.**


This option provides a disconnect point for the vent pipe. The vent pipe must be cemented to the plastic vent pipe adapter to maintain a sealed vestibule, see Fig. 55.

1. Insert a length of vent pipe through the casing into the outlet of the vent elbow.
2. Slide the plastic vent pipe adapter over the length of the vent pipe down to the furnace casing. Mark the pipe where it is flush with the outlet of the adapter.
3. Remove the pipe from the furnace and the adapter and cut off any excess pipe.
4. Clean and prime the end of the pipe that is flush with the vent adapter with a primer that is appropriate for the type of pipe being used.
5. Re-insert the pipe through the casing into the vent elbow.
6. Tighten the clamp around the outlet of the vent elbow. Torque the clamp to 15 lb-in.
7. Apply cement to the end of the pipe and to the inside of the plastic vent adapter.
8. Slide the adapter over the vent pipe and align the screw holes in the adapter with the dimples in the furnace casing.
9. Pilot drill 1/8-in. screw holes for the adapter in the casing and secure the adapter to the furnace with sheet metal screws.
10. Loosen the clamps on the rubber vent coupling.
11. Slide the end of the coupling with notches in it over the standoffs in the vent pipe adapter.
12. Tighten the clamp of the coupling over the vent pipe adapter. Torque the lower clamp around the vent pipe adapter to 15 lb-in.
13. Pilot drill a 1/8-in. hole in the combustion air pipe adapter.
14. Complete the vent and combustion air pipe as shown in "Install the Vent and Combustion Air Pipe."

### Concentric Vent

Single or multiple concentric vent must be installed, see Fig. 62. Maintain the required separation distance between vents or pairs of vents (see Fig. 62) and all clearance, see Fig. 60.


VENT PIPE ADAPTER WITH GASKET  
INSTALLED ON FURNACE VENT  
PIPE IS CUT FLUSH WITH TOP OF  
ADAPTER. PRIME AND CEMENT VENT  
PIPE TO ADAPTER. ALLOW TO DRY  
BEFORE INSTALLING VENT COUPLING.

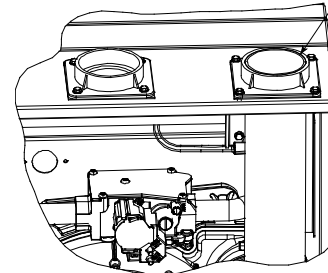

VENT PIPE FLUSH WITH ADAPTER

A13076A

ALIGN NOTCHES IN VENT PIPE  
COUPLING OVER STAND-OFF  
ON ADAPTER. TORQUE LOWER  
CLAMP 15 LB-IN. WHEN REMAINING  
VENT PIPE IS INSTALLED, TORQUE  
UPPER CLAMP TO 15 LB-IN.

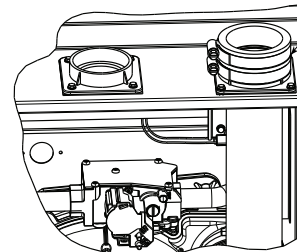

VENT PIPE FLUSH SHOWING COUPLING

A13076B

Fig. 55 – Optional Vent Pipe Flush with Adaptor

## ⚠ NOTICE

### FOR POLYPROPYLENE VENTING SYSTEMS

When using polypropylene venting systems, all venting materials used, including the vent terminations, must be from the same manufacturer.

### Installing the Vent Termination

#### Roof Terminations

A roof termination of any type will require a 4-in. (102 mm) flashing for a 2 in. (50 mm ND) concentric vent or a 5-in. diameter (127 mm) flashing for a 3-in. (80 mm ND) concentric vent kit. For two-pipe or single pipe vent systems, a flashing for each pipe of the required diameter will be necessary.

It is recommended that the flashing be installed by a roofer or competent professional prior to installing the concentric vent. The terminations can be installed on a flat or pitched roof.

**NOTE:** Follow the instructions of the vent terminal manufacturer. These instructions are provided as a reference, only.

Cut one 4-in. (102 mm) diameter hole for 2-in. (50 mm ND) kit, or one 5-in. (127 mm) diameter hole for 3-in. (80 mm ND) kit in the desired location.

Loosely assemble concentric vent/combustion air termination components together using instructions in kit.

Slide assembled kit with rain shield **REMOVED** through hole in wall or roof flashing.

**NOTE:** Do not allow insulation or other materials to accumulate inside of pipe assembly when installing it through hole.

Disassemble loose pipe fittings. Clean and cement using same procedures as used for system piping. **DO NOT CEMENT POLYPROPYLENE FITTINGS.**

### **Two-Pipe and Single-Pipe Terminations**

Single and two pipe vent must be installed, see Fig. 62 and Fig. 63. Maintain the required separation distance between vents or pairs of vents (see Fig. 62 and Fig. 63) and all clearances, see Fig. 60 and Fig. 61.

## **! NOTICE**

### **RECOMMENDED SUPPORT FOR VENT TERMINATIONS**

It is recommended that rooftop vent terminations in excess of 36 inches (1 M) in vertical length be supported by **EITHER** the Direct Vent Termination Kit (Table 14) or by field-supplied brackets or supports fastened to the structure.

Cut the required number of holes in the roof or sidewall for vent and (when used) combustion air pipes. Sidewall holes for two-pipe vent terminations should be side-by-side, allowing space between the pipes for the elbows to fit on the pipes.

Holes in the roof for direct-vent two-pipe terminations should be spaced no more than 18 in. (457 mm) apart to help avoid vent gas recirculation into combustion air intake.

Termination elbows will be installed after the vent and (if used) combustion air pipe is installed.

### **Sidewall Terminations**

#### **Concentric Vent**

**NOTE:** Follow the instructions of the vent terminal manufacturer. These instructions are provided as a reference only.

Determine an appropriate location for termination kit using the guidelines provided in section “Locating The Vent Termination” in this instruction.

1. Cut one 4-in. diameter hole for 2-in. kit, or one 5-in. diameter hole for 3-in. kit.
2. Loosely assemble concentric vent/combustion air termination components together using instructions in kit.
3. Slide assembled kit with rain shield **REMOVED** through hole.

**NOTE:** Do not allow insulation or other materials to accumulate inside of pipe assembly when installing it through hole.

4. Locate assembly through sidewall with rain shield positioned no more than 1-in. (25 mm) from wall, see Fig. 62.
5. Disassemble loose pipe fittings. Clean and cement using same procedures as used for system piping. **DO NOT CEMENT POLYPROPYLENE FITTINGS.**

### **2-Pipe and 1-Pipe Vent Termination**

**NOTE:** Follow the instructions of the vent terminal manufacturer. These instructions are provided as a reference, only.

## **! NOTICE**

### **RECOMMENDED SUPPORT FOR VENT TERMINATIONS**

It is recommended that sidewall vent terminations in excess of 24 inches (0.6 M) in vertical length be supported by **EITHER** the Direct Vent Termination Kit (Table 14) or by field-supplied brackets or supports fastened to the structure.

Determine an appropriate location for termination kit using the guidelines provided in section “Locating The Vent Termination” in this instruction.


1. Cut two holes, one for each pipe, of appropriate size for pipe size being used.
2. Loosely install elbow in bracket (if used) and place assembly on combustion-air pipe.
3. Install bracket, see Fig. 62.

**NOTE:** For applications using vent pipe option indicated by dashed lines (see Fig. 62 and Fig. 63), rotate vent elbow 90° from position.

4. Disassemble loose pipe fittings. Clean and cement using same procedures as used for system piping. **DO NOT CEMENT POLYPROPYLENE FITTINGS.**


### **(Direct Vent / 2-Pipe System ONLY)**

When two or more furnaces are vented near each other, two vent terminations may be installed (see Fig. 62), but next vent termination, or pair of vent terminations, must be at least 36 in. (914 mm) away from the first two terminations. It is important that vent terminations be made, see Fig. 62, to avoid recirculation of vent gases.

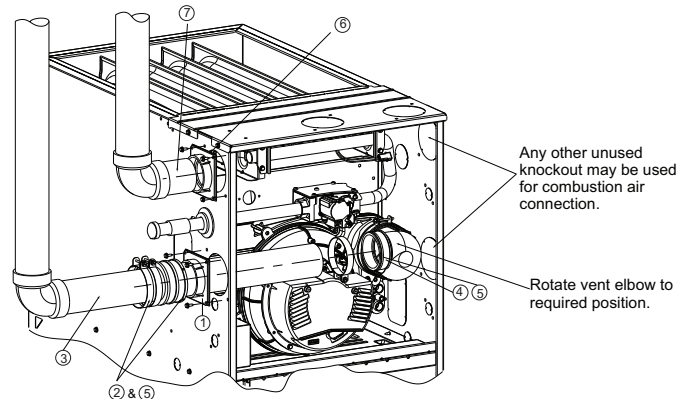


UPFLOW LEFT CONFIGURATION

A11309A

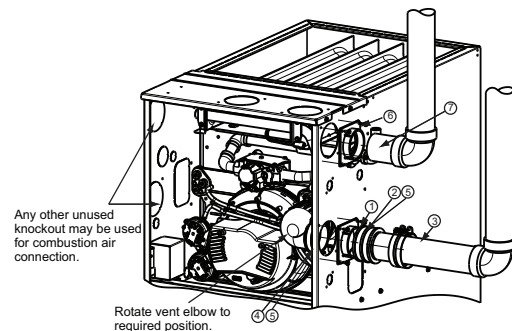


UPFLOW RIGHT CONFIGURATION

A11308A

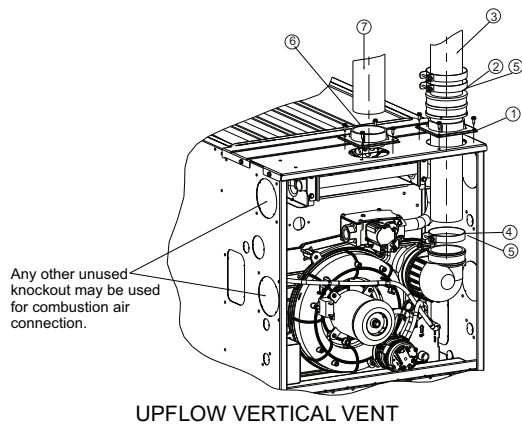


**Fig. 56 – Upflow Configurations (Appearance may vary)**  
See “Notes for Venting Options”

A11310A

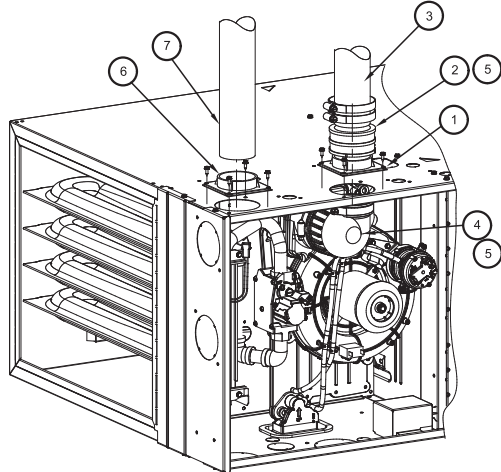


HORIZONTAL LEFT-VERTICAL VENT CONFIGURATION

A11327A

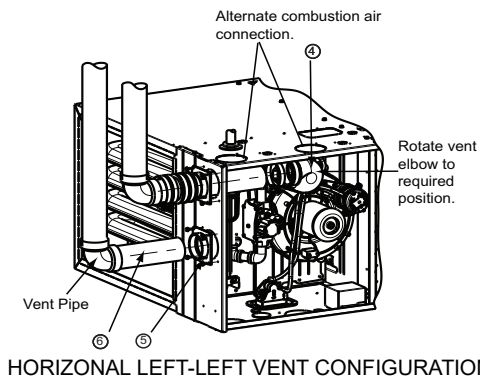


A11328A

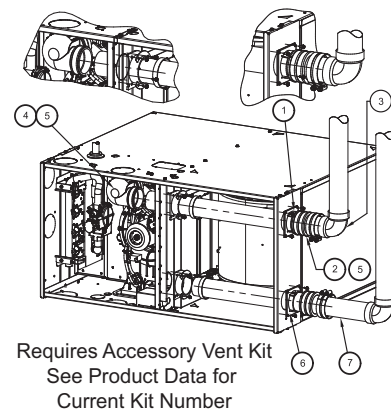


**Fig. 57 – Horizontal Left (Appearance may vary)**  
See “Notes for Venting Options”

A11329A

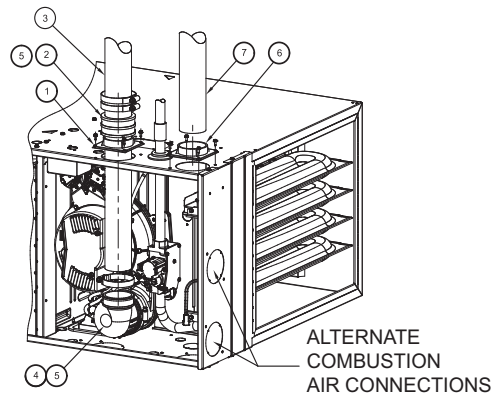

HORIZONTAL RIGHT-VERTICAL VENT CONFIGURATION

A11337

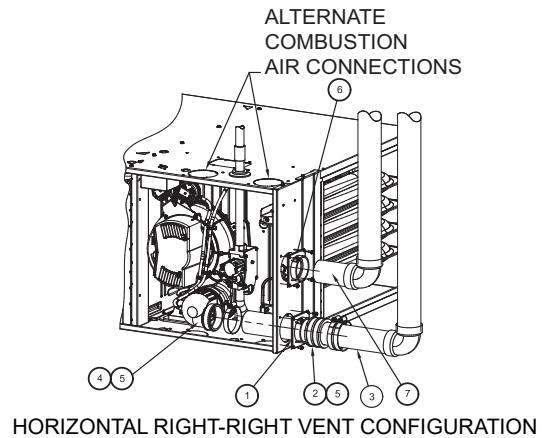

**Fig. 58 – Horizontal Right (Appearance may vary)**  
See “Notes for Venting Options”

A11335

### Notes for Venting Options

1. Attach vent pipe adapter with gasket to furnace casing.
2. Align notches in rubber coupling over standoffs on adapter. Slide clamps over the coupling.
3. Slide vent pipe through adapter and coupling into vent elbow.
4. Insert vent pipe into vent elbow.
5. Torque all clamps 15 lb.-in.
6. Attach combustion air pipe adapter with gasket to furnace.
7. Attach combustion air pipe to adapter with silicone. Pilot drill a 1/8-in. hole in adapter and secure with a #7 x 1/2-in. sheet metal screw.

**Table 16 – Approved Combustion-Air and Vent Pipe, Fitting and Cement Materials (U.S.A. Installations)**

| MATERIALS   |   |             |                           |                      |                           |               |
|---|---|-------------|---------------------------|----------------------|---------------------------|---------------|
| USA   | 1. All pipe, fittings, primers*, and solvents* must conform to American National Standards Institute (ANSI) standards and American Society for Testing and Materials (ASTM) standards or ULC S636 where required by code.<br>2. See Table below for approved materials for use in the U.S.A.<br>3. ULC S636 vent systems must be composed of pipe, fittings, cements, and primers from the same supplier.<br>4. Factory accessory concentric vent kits are ULC S636 listed. |             |                           |                      |                           |               |
| Material  | Description   | Type        | ASTM or ULC Specification |                      |                           |               |
|   |   |             | Pipe                      |                      | Solvents/Primers**        | Cements       |
| PVC   | Pressure Pipe   | Schedule 40 | D1785                     | D2466<br>or<br>D2665 | F656                      | D2564         |
|   | DWV   | Schedule 40 | D1785/D2665               |                      |                           |               |
|   | Cellular Core   | Schedule 40 | F891                      |                      |                           |               |
|   | SDR 26  | N/A         | D2241                     |                      |                           |               |
|   | SDR 21  | N/A         | D2241                     |                      |                           |               |
|   | IPEX  | Schedule 40 | ULC S636                  | ULC S636             | ULC S636                  | ULC S636      |
|   | Royal Pipe  | Schedule 40 | ULC S636                  | ULC S636             | ULC S636                  | ULC S636      |
| ABS   | ABS   | Schedule 40 | D1527                     | D2468                | Clear Cleaner For<br>ABS† | D2235         |
|   | DWV-IPS Sizes   | Schedule 40 | D2661                     | D2661                |                           |               |
|   | Cellular Core   | Schedule 40 | F628                      |                      |                           |               |
|   | DWV-IPS Sizes   |             |                           |                      |                           |               |
| CPVC  | Pressure Pipe   | Schedule 40 | F441                      | F438                 | F656                      | F493          |
|   | SDR   | N/A         | F442                      | N/A                  |                           |               |
|   | IPEX  | Schedule 40 | ULC S636                  | ULC S636             | ULC S636                  | ULC S636      |
|   | Royal Pipe  | Schedule 40 | ULC S636                  | ULC S636             | ULC S636                  | ULC S636      |
| * PVC and ABS pipe may use either DWV or pressure rated fittings.   |   |             |                           |                      |                           |               |
| ** Colored or tinted solvents or primers must be used where required by code in the USA   |   |             |                           |                      |                           |               |
| † ABS plastic does not require a primer before solvent cementing. A cleaner for ABS is recommended to remove any surface residue. ABS cleaners are not subject to ASTM standards. |   |             |                           |                      |                           |               |
|   |   |             |                           |                      |                           |               |
| Polypropylene   | Approved Manufacturer   |             |                           |                      | Solvents Primers          | Cements       |
| Poly Pro®   | M & G Dura Vent   |             |                           |                      | Not Permitted             | Not Permitted |
| NOTE: Polypropylene vent systems are UL – 1738 and ULC S636 listed and assembled using mechanical fastening systems supplied by the vent manufacturer.                            |   |             |                           |                      |                           |               |

**Table 17 – Maximum Allowable Exposed Vent Length in Unconditioned Space - Ft.**

| Unit Size             |               | 60,000 BTUH |    |     |    |                    |    |     |    |                    |    |     |    |
|-----------------------|---------------|-------------|----|-----|----|--------------------|----|-----|----|--------------------|----|-----|----|
| Winter Design Temp °F | Pipe Dia. in. | Uninsulated |    |     |    | 3/8-in. Insulation |    |     |    | 1/2-in. Insulation |    |     |    |
|                       |               | 1 ½         | 2  | 2 ½ | 3  | 1 ½                | 2  | 2 ½ | 3  | 1 ½                | 2  | 2 ½ | 3  |
|                       | 20            | 20          | 30 | 30  | 25 | 20                 | 75 | 65  | 60 | 20                 | 85 | 75  | 65 |
|                       | 0             | 15          | 15 | 10  | 10 | 20                 | 40 | 30  | 25 | 20                 | 45 | 40  | 30 |
|                       | -20           | 10          | 5  |     |    | 20                 | 25 | 20  | 15 | 20                 | 30 | 25  | 20 |
| -40                   | 5             |             |    |     | 20 | 15                 | 15 | 10  | 20 | 20                 | 15 | 10  |    |


| Unit Size             |               | 80,000 BTUH |    |     |    |    |                    |    |     |    |    |                    |    |     |    |    |
|-----------------------|---------------|-------------|----|-----|----|----|--------------------|----|-----|----|----|--------------------|----|-----|----|----|
| Winter Design Temp °F | Pipe Dia. in. | Uninsulated |    |     |    |    | 3/8-in. Insulation |    |     |    |    | 1/2-in. Insulation |    |     |    |    |
|                       |               | 1 ½         | 2  | 2 ½ | 3  | 4  | 1 ½                | 2  | 2 ½ | 3  | 4  | 1 ½                | 2  | 2 ½ | 3  | 4  |
|                       | 20            | 15          | 40 | 40  | 35 | 30 | 15                 | 50 | 90  | 75 | 65 | 15                 | 50 | 70  | 70 | 70 |
|                       | 0             | 15          | 20 | 15  | 10 | 5  | 15                 | 50 | 45  | 35 | 30 | 15                 | 50 | 50  | 40 | 35 |
|                       | -20           | 15          | 10 | 5   |    |    | 15                 | 35 | 30  | 20 | 15 | 15                 | 40 | 30  | 25 | 15 |
| -40                   | 10            | 5           |    |     |    | 15 | 25                 | 20 | 15  | 5  | 15 | 30                 | 25 | 20  | 10 |    |

| Unit Size             |               | 100,000 BTUH |     |    |    |                    |     |    |    |                    |     |     |    |
|-----------------------|---------------|--------------|-----|----|----|--------------------|-----|----|----|--------------------|-----|-----|----|
| Winter Design Temp °F | Pipe Dia. in. | Uninsulated  |     |    |    | 3/8-in. Insulation |     |    |    | 1/2-in. Insulation |     |     |    |
|                       |               | 2            | 2 ½ | 3  | 4  | 2                  | 2 ½ | 3  | 4  | 2                  | 2 ½ | 3   | 4  |
|                       | 20            | 20           | 50  | 40 | 35 | 20                 | 80  | 95 | 80 | 20                 | 80  | 105 | 90 |
|                       | 0             | 20           | 20  | 15 | 10 | 20                 | 55  | 45 | 35 | 20                 | 65  | 55  | 45 |
|                       | -20           | 15           | 10  | 5  |    | 20                 | 35  | 30 | 20 | 20                 | 45  | 35  | 25 |
| -40                   | 10            | 5            |     |    | 20 | 25                 | 20  | 10 | 20 | 30                 | 25  | 15  |    |


**Table 18 – Maximum Equivalent Vent Length - Ft.**

**NOTE:** Maximum Equivalent Vent Length (MEVL) includes standard and concentric vent termination and does NOT include elbows. Use [Table 19 - Deductions from Maximum Equivalent Vent Length](#) to determine allowable vent length for each application.


| Unit Size          |                   | 60,000 |     |     |     | 80,000 |    |     |     |     | 100,000 |     |     |     |
|--------------------|-------------------|--------|-----|-----|-----|--------|----|-----|-----|-----|---------|-----|-----|-----|
| Altitude<br>(feet) | Pipe Dia.<br>(in) | 1 ½    | 2   | 2 ½ | 3   | 1 ½    | 2  | 2 ½ | 3   | 4   | 2       | 2 ½ | 3   | 4   |
|                    | 0-2000            | 20     | 100 | 175 | 200 | 15     | 55 | 130 | 175 | 200 | 20      | 80  | 175 | 200 |
|                    | 2001-3000         |        | 95  | 165 | 185 | 10     | 49 | 125 | 165 | 185 | 15      | 75  | 165 | 185 |
|                    | 3001-4000         | 16     | 90  | 155 | 175 |        |    | 115 | 155 | 175 |         |     | 155 | 175 |
|                    | 4001-4500         | 15     | 85  | 150 | 170 |        | 44 | 110 | 150 | 165 | 10      | 70  |     | 170 |
|                    | 4501-5000         |        | 80  | 145 | 165 |        | 44 | 110 | 145 | 160 |         | 65  | 150 | 165 |
|                    | 5001-5400         |        | 75  | 140 | 155 |        | 41 | 100 | 135 | 150 |         |     | 140 | 155 |

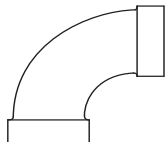**ELBOW CONFIGURATIONS**


Long

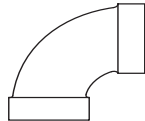


Medium



Mitered

**VENT TERMINAL CONFIGURATIONS**

Concentric

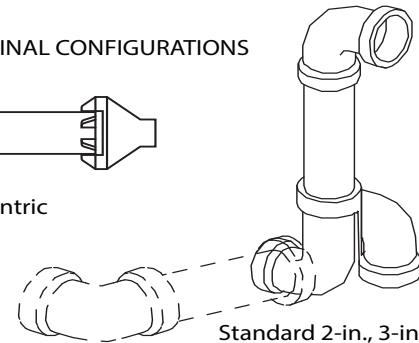

Standard 2-in., 3-in., or optional 4-in. termination.

**Table 19 – Deductions from Maximum Equivalent Vent Length - Ft. (M)**

| Pipe Diameter (in):         | 1-1/2 |       | 2   |       | 2-1/2 |       | 3   |       | 4   |       |
|-----------------------------|-------|-------|-----|-------|-------|-------|-----|-------|-----|-------|
| Mitered 90° Elbow           | 8     | (2.4) | 8   | (2.4) | 8     | (2.4) | 8   | (2.4) | 8   | (2.4) |
| Medium Radius 90° Elbow     | 5     | (1.5) | 5   | (1.5) | 5     | (1.5) | 5   | (1.5) | 5   | (1.5) |
| Long Radius 90° Elbow       | 3     | (0.9) | 3   | (0.9) | 3     | (0.9) | 3   | (0.9) | 3   | (0.9) |
| Mitered 45° Elbow           | 4     | (1.2) | 4   | (1.2) | 4     | (1.2) | 4   | (1.2) | 4   | (1.2) |
| Medium Radius 45° Elbow     | 2.5   | (0.8) | 2.5 | (0.8) | 2.5   | (0.8) | 2.5 | (0.8) | 2.5 | (0.8) |
| Long Radius 45° Elbow       | 1.5   | (0.5) | 1.5 | (0.5) | 1.5   | (0.5) | 1.5 | (0.5) | 1.5 | (0.5) |
| Tee                         | 16    | (4.9) | 16  | (4.9) | 16    | (4.9) | 16  | (4.9) | 16  | (4.9) |
| Concentric Vent Termination | NA    |       | 0   | (0.0) | NA    |       | 0   | (0.0) | NA  |       |
| Standard Vent Termination   | 0     | (0.0) | 0   | (0.0) | 0     | (0.0) | 0   | (0.0) | 0   | (0.0) |

**NOTE:**

1. Use only the smallest diameter pipe possible for venting. Over-sizing may cause flame disturbance or excessive vent terminal icing or freeze-up.
2. NA - Not allowed. Pressure transducer will not close, or flame disturbance may result.
3. Vent sizing for Canadian installations over 4500 ft. (1370 M) above sea level are subject to acceptance by the local authorities having jurisdiction.
4. Size both the combustion air and vent pipe independently, then use the larger size for both pipes.
5. Assume the two 45° elbows equal one 90° elbow. Wide radius elbows are desirable and may be required in some cases.
6. Elbow and pipe sections within the furnace casing and at the vent termination should not be included in vent length or elbow count.
7. The minimum pipe length is 5 ft. (2 M) linear feet (meters) for all applications.
8. Use 3-in. (76 mm) diameter vent termination kit for installations requiring 4-in. (102 mm) diameter pipe.

## Venting System Length Calculations

The Total Equivalent Vent Length (TEVL) for **EACH** combustion air or vent pipe equals the length of the venting system, plus the equivalent length of elbows used in the venting system, see [Table 19](#).

Standard vent terminations or factory accessory concentric vent terminations count for zero deduction.

See vent system manufacturer's data for equivalent lengths of flexible vent pipe or other termination systems. **DO NOT ASSUME** that one foot of flexible vent pipe equals one foot of straight PVC/ABS DWV vent pipe.

Compare the Total Equivalent Vent Length to the Maximum Equivalent Vent Lengths, see [Table 18](#).

### Example 1

A direct-vent 60,000 BTUH furnace installed at 2100 ft. (640M). Venting system includes **FOR EACH PIPE:**

70 feet (22 M) of vent pipe, 65 feet (20 M) of combustion air inlet pipe, (3) 90° long-radius elbows, (2) 45° long-radius elbows, and a factory accessory concentric vent kit.

Can this application use 2" (50 mm ND) PVC/ABS DWV vent piping?

|   |   |   |                    |   |                  |   |
|---|---|---|--------------------|---|------------------|---|
| Measure the required linear length of air inlet and vent pipe; insert the longest of the two here                   |   |   |                    |   | 70 ft.<br>(22 M) | Use length of the longer of the vent or air inlet piping system |
| Add equiv length of (3) 90° long-radius elbows (use the highest number of elbows for either the vent or inlet pipe) | 3 | x | 3 ft.<br>(0.9 M)   | = | 9 ft.<br>(2.7 M) | From <a href="#">Table 19</a>                                   |
| Add equiv length of (2) 45° long-radius elbows (use the highest number of elbows for either the vent or inlet pipe) | 2 | x | 1.5 ft.<br>(0.5 M) | = | 3 ft.<br>(0.9 M) | From <a href="#">Table 19</a>                                   |
| Add equiv length of factory concentric vent term  |   |   |                    |   | 0 ft.            | From <a href="#">Table 19</a>                                   |
| Add correction for flexible vent pipe, if any   |   |   |                    |   | 0 ft.            | From Vent Manufacturer's instructions; zero for PVC/ABS DWV     |
| Total Equivalent Vent Length (TEVL)   |   |   |                    |   | 82 ft.<br>(25 M) | Add all of the above lines                                      |
| Maximum Equivalent Vent Length (MEVL)   |   |   |                    |   | 95 ft.<br>(29 M) | For 2" pipe from <a href="#">Table 18</a>                       |
| Is TEVL less than MEVL?   |   |   |                    |   | YES              | Therefore, 2" pipe MAY be used                                  |

### Example 2

A direct-vent 60,000 BTUH furnace installed at 2100 ft. (640M). Venting system includes **FOR EACH PIPE:**

100 feet (30 M) of vent pipe, 95 feet (29 M) of combustion air inlet pipe, (3) 90° long-radius elbows, and a polypropylene concentric vent kit. Also includes 20 feet (6.1 M) of flexible polypropylene vent pipe, included within the 100 feet (30 M) of vent pipe.

VERIFY FROM POLYPROPYLENE VENT MANUFACTURER'S INSTRUCTIONS for the multiplier correction for flexible vent pipe.

Can this application use 60mm o.d. (2") polypropylene vent piping? If not, what size piping can be used?

|   |    |   |                   |   |                    |  |
|---|----|---|-------------------|---|--------------------|--|
| Measure the required linear length of <b>RIGID</b> air inlet and vent pipe; insert the longest of the two here: 100 ft. Of rigid pipe - 20 ft. Of flexible pipe                     |    |   |                   | = | 80 ft.<br>(24 M)   | Use length of the longer of the vent or air inlet piping system  |
| Add equiv length of (3) 90° long-radius elbows (use the highest number of elbows for either the vent or inlet pipe)   | 3  | x | 5 ft.<br>(1.5 M)  | = | 15 ft.<br>(4.6 M)  | Example from polypropylene vent manufacturer's instructions, Verify from vent manufacturer's instructions. |
| Add equiv length of 45° long-radius elbows (use the highest number of elbows for either the vent or inlet pipe)   | 0  | x |                   | = | 0 ft.<br>(0 M)     |  |
| Add equiv length of factory concentric vent term  | 9  | x | 3.3 ft<br>(0.9 M) | = | 30 ft.<br>(9 M)    |  |
| Add correction for flexible vent pipe, if any   | 2* | x | 20 ft.<br>(6.1 M) | = | 40 ft.<br>(12.2 M) |  |
| * VERIFY FROM VENT MANUFACTURER'S INSTRUCTIONS; For example only, assume 1 meter of flexible 60mm (2") or 80mm (3") polypropylene pipe equals 2.0 meters (6.5 ft.) of PVC/ABS pipe. |    |   |                   |   |                    |  |
| Total Equivalent Vent Length (TEVL)   |    |   |                   |   | 165 ft.<br>(50 M)  | Add all of the above lines   |
|   |    |   |                   |   |                    |  |
| Maximum Equivalent Vent Length (MEVL)   |    |   |                   |   | 95 ft.<br>(29 M)   | For 2" pipe from <a href="#">Table 18</a>  |
| Is TEVL less than MEVL?   |    |   |                   |   | NO                 | Therefore, 60mm (2") pipe may NOT be used; try 80mm (3")   |
|   |    |   |                   |   |                    |  |
| Maximum Equivalent Vent Length (MEVL)   |    |   |                   |   | 185 ft.<br>(57 M)  | For 3" pipe from <a href="#">Table 18</a>  |
| Is TEVL less than MEVL?   |    |   |                   |   | YES                | Therefore, 80mm (3") pipe MAY be used  |

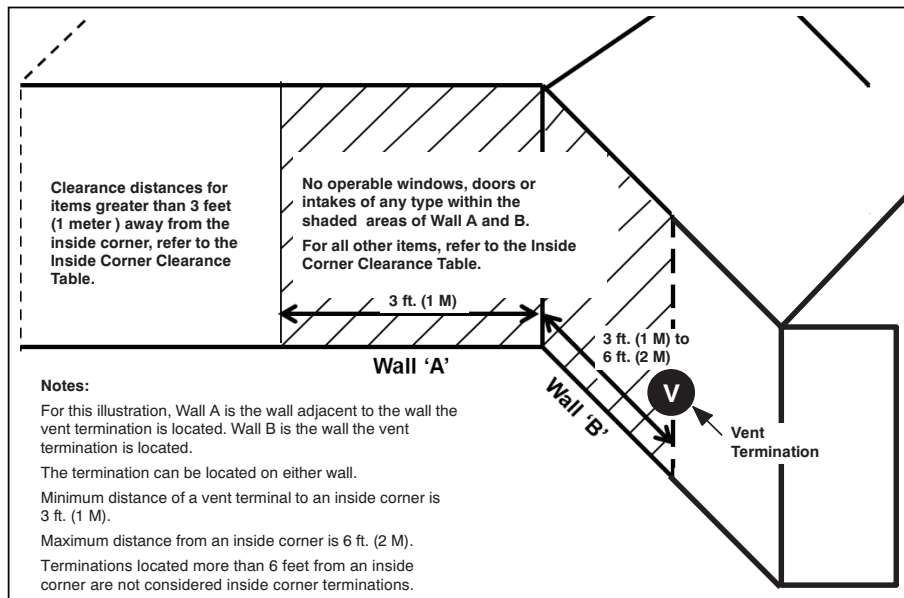


Fig. 59 – Inside Corner Termination


A190032

### Inside Corner Terminations

Inside corner vent terminations are permitted provided that:

- Only two exterior walls come together to form an angle of 90 degrees to 135 degrees. There are no other exterior walls attached to either wall to form an alcove.
- The clearance distances apply when the vent is at least 3 feet (1 meter) from, but not more than 6 feet (2 meters) away from an inside corner.
- For vent terminations located more than 6 feet (2 meters) from an inside corner, refer to the appropriate Direct Vent Clearance Table for all two pipe terminations or Non-Direct Vent Clearance Table for all single pipe terminations.
- The clearance distances to items between the vent termination and the outside corner, refer to the appropriate Direct Vent Clearance Table for all two pipe terminations or Non-Direct Vent Clearance Table for all single pipe terminations.

|  |                 |
|--|-----------------|
| For clearance distances when vent termination is located more than 6 ft. (2 M) away from an inside corner, refer to the appropriate Direct Vent or Non-Direct Vent Clearance Table.  |                 |
| Clearance description when termination is at least 3 ft. (1 M) away and not more than 6 ft. (2 M) away from an inside corner.  |                 |
| Clearance above grade, veranda, porch, deck, balcony or anticipated snow level   | 12-in. (305 mm) |
| Clearance to a permanently closed window on either Wall A or Wall B  | 12-in. (305 mm) |
| Vertical clearance to a soffit located above the vent termination within a horizontal distance of 2 ft. (61 cm) from the centerline of the vent termination  | 6 ft. (2 M)     |
| Clearance to a ventilation exhaust (including HRV/ERV) on either Wall A or Wall B  | 12-in. (305 mm) |
| Clearance above paved sidewalk or paved driveway located on public property  | 7 ft. (2.1 M)   |
| Clearance under a veranda, porch, deck, or balcony   | N.P.*           |
| No operable windows, doors or intakes of any type are permitted on Wall B between the vent termination and the inside corner when the vent termination is at least 3 ft. (1 M) away and not more than 6 ft. (2 M) away from an inside corner.              |                 |
| The following items on Wall A must be located at least 3 ft. (1 M) away from the inside corner when a vent termination is located on Wall B and the vent termination is at least 3 ft. (1 M) away or not more than 6 ft. (2 M) away from an inside corner. |                 |
| A window or door that may be opened  |                 |
| The centerline extended above electrical meter or gas service regulator assembly   |                 |
| A service regulator vent outlet  |                 |
| The centerline of a dryer or water heater vent, or other appliance's vent intake   |                 |
| A non-mechanical air supply inlet  |                 |
| Clearance distances shown for Wall A are measured horizontally from the exit of the termination on Wall B to the closest edge of the item shown below.   |                 |
| Clearance to a mechanical air supply (including HRV/ERV) inlet unless termination is 3 ft. (1 M) above the horizontal line of the intake   | 10 ft. (3 M)    |
| For clearance distances from a vent termination to the outside corner of the wall, refer to the appropriate Direct Vent or Non-Direct Vent Clearance Table   |                 |
| * N.P. = Not Permitted   |                 |
| * N/A = Not Applicable   |                 |

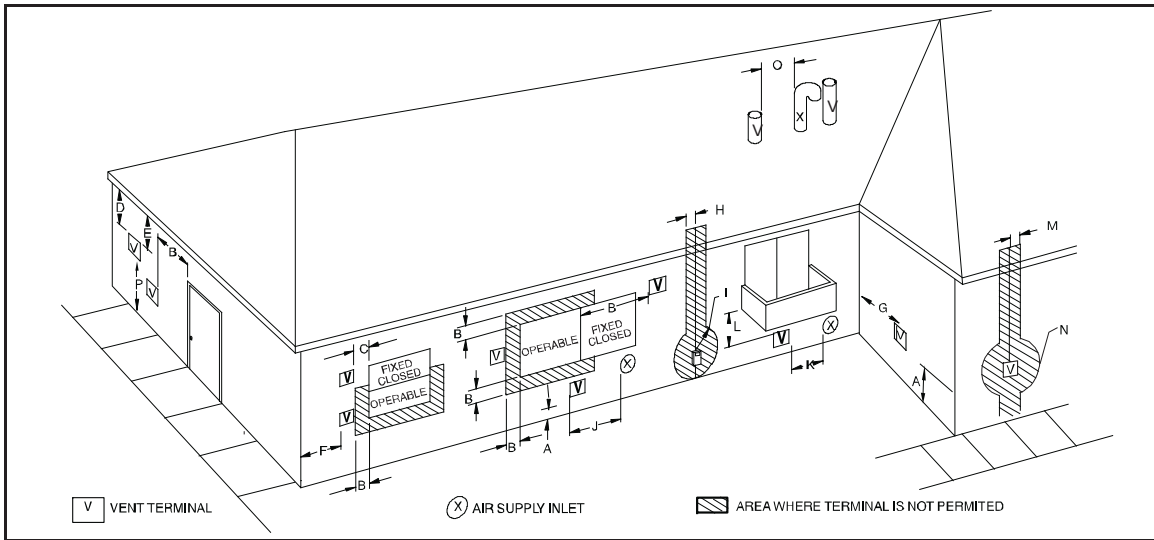**Fig. 60 – Direct Vent Termination Clearance**

A12326

**NOTE:** The following is based upon National codes for gas appliances and is provided as a reference. Refer to local codes which may supersede these standards and/or recommendations.

| Item | Clearance Description   | Canadian Installations <sup>(1)</sup><br>(per CAN/CSA B149.1)  | U.S. Installations <sup>(2)</sup><br>(per ANSI Z223.1/NFPA 54)  |
|------|---|--|---|
| A    | Clearance above grade, veranda, porch, deck, balcony or anticipated snow level  | 12 in. (305 mm)<br>18 in. (457 mm) above roof surface.   | 12 in. (305 mm)   |
| B    | Clearance to a window or door that may be opened  | 12 in. (305 mm) for appliances >10,000 Btuh (3 kW) and ≤100,000 Btuh (30 kW),<br>36 in. (914 mm) for appliances >100,000 Btuh (30 kW)  | 9 in. (229 mm) for appliances >10,000 Btuh (3 kW) and ≤50,000 Btuh (15 kW),<br>12 in. (305 mm) for appliances >50,000 Btuh (15kW) |
| C    | Clearance to a permanently closed window  | For clearances not specified in ANSI Z223.1/NFPA 54 or CAN/CSA B149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.<br><br>Manufacturer's Recommendation: See Notes 3-8. |   |
| D    | Vertical clearance to a ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the centerline of the terminal                           |  |   |
| E    | Clearance to an unventilated soffit   |  |   |
| F    | Clearance to an outside corner  |  |   |
| G    | Clearance to an inside corner   |  |   |
| H    | Clearance to each side of the centerline extended above electrical meter or gas service regulator assembly  | 3 ft. (.9 M) within 15 ft. (4.6 M) above the meter/regulator assembly.   | 3 ft. (.9 M) within 15 ft. (4.6 M) above the meter/regulator assembly.  |
| I    | Clearance to service regulator vent outlet  | 3ft. (.9 M)  | See Note 4.   |
| J    | Clearance to non—mechanical air supply inlet to building or the combustion air inlet to any other appliance   | 12 in. (305 mm) for appliances >10,000 Btuh(3 kW) and ≤100,000 Btuh (30 kW),<br>36 in. (914 mm) for appliances >100,000 Btuh (30 kW)   | 9 in. (9 mm) for appliances >10,000 Btuh (3 kW) and ≤50,000 Btuh (15 kW),<br>12 in.(305 mm) for appliances >50,000 Btuh (15kW)    |
| K    | Clearance to a mechanical air supply inlet  | 6 ft. (1.8 M)  | 3ft. (.9 M) above if within 10 ft. (3 M) horizontally   |
| L    | Clearance under a veranda, porch, deck, or balcony  | 12 in. (305 mm).<br>Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.  | See Note 4.<br>Manufacturer's Recommendation: See Notes 3-8.  |
| M    | Clearance to each side of the centerline extended above or below vent terminal of the furnace to a dryer or water heater vent, or other appliance's direct vent intake or exhaust | 12 in. (305 mm)  | 12 in. (305 mm)   |
| N    | Furnace combustion air intake clearance to a water heater vent, dryer vent or other types of appliance exhausts.  | 3 ft. (.9 M)   | 3 ft. (.9 M)  |
| O    | Clearance from a plumbing vent stack  | 3 ft. (.9 M)<br>7 ft. (2.1 M)  | 3 ft. (.9 M)  |
| P    | Clearance above paved sidewalk or paved driveway located on public property   | Vent shall not terminate above a sidewalk or paved driveway that is located between two single family dwellings and serves both dwellings.   | See Note 4.<br>Manufacturer's Recommendation: See Notes 3-8.  |

> greater than, ≥ greater than or equal to, < less than, ≤ less than or equal to


**Notes:**

1. In accordance with the current CAN/CSA B149.1, Natural Gas and Propane Installation Code.
2. In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code
3. NOTE: This table is based upon National codes for gas appliances, and are provided as a reference.

Refer to Local codes which may supersede these standards and/or recommendations.

4. For clearances not specified in ANSI Z223.1/NFPA 54 or CAN/CSA B 149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.
5. When locating vent terminations, consideration must be given to prevailing winds, location, and other conditions which may cause recirculation of the combustion products of adjacent vents. Recirculation can cause poor combustion, inlet condensate problems, vent termination icing and/or accelerated corrosion of the heat exchangers.
6. Design and position vent outlets to avoid ice build-up on and moisture damage to surrounding surfaces.
7. The vent for this appliance shall not terminate:
  - a. Near soffit vents of crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or property damage; or
  - b. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.
8. Avoid venting under a deck or large overhang. Recirculation could occur and cause performance or system problems. Ice build-up may occur.

**Manufacturer reserves the right to change, at any time, specifications and designs without notice and without obligations.**

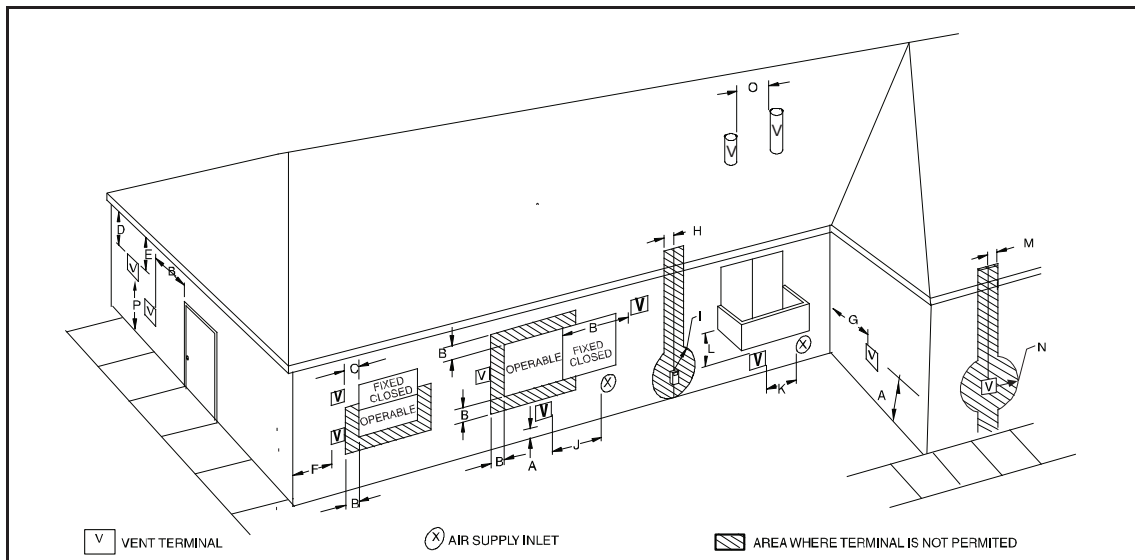

**Fig. 61 – Ventilated Combustion Air and Non-Direct Vent Termination Clearance**

A12325

**NOTE:** The following is based upon National codes for gas appliances and is provided as a reference. Refer to local codes which may supersede these standards and/or recommendations.

| Item | Clearance Description   | Canadian Installations <sup>(1)</sup><br>(per CAN/CSA B149.1)  | U.S. Installations <sup>(2)</sup><br>(per ANSI Z223.1/NFPA 54)  |
|------|---|--|---|
| A    | Clearance above grade, veranda, porch, deck, balcony or anticipated snow level  | 12 in. (305 mm)<br>18 in. (457 mm) above roof surface.   | 12 in. (305 mm)   |
| B    | Clearance to a window or door that may be opened  | 12 in. (305 mm) for appliances >10,000 Btuh (3 kW) and ≤100,000 Btuh (30 kW),<br>36 in. (914 mm) for appliances >100,000 Btuh (30 kW)  | 4ft. (1.2M) below or to the side of the opening,<br>1 ft (.3M) above the opening.<br>Manufacturer's Recommendation: See Note 8. |
| C    | Clearance to a permanently closed window  | For clearances not specified in ANSI Z223.1/NFPA 54 or CAN/CSA B149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.<br><br>Manufacturer's Recommendation: See Notes 3-8. |   |
| D    | Vertical clearance to a ventilated soffit located above the terminal within a horizontal distance of 2 feet (61 cm) from the centerline of the terminal                           |  |   |
| E    | Clearance to an unventilated soffit   |  |   |
| F    | Clearance to an outside corner  |  |   |
| G    | Clearance to an inside corner   | 3 ft. (.9 M) within 15 ft. (4.6 M) above the meter/regulator assembly.   | 3 ft. (.9 M) within 15 ft. (4.6 M) above the meter/regulator assembly.  |
| H    | Clearance to each side of the centerline extended above electrical meter or gas service regulator assembly  |  |   |
| I    | Clearance to service regulator vent outlet  | 3ft. (.9 M)  | See Note 4.   |
| J    | Clearance to non—mechanical air supply inlet to building or the combustion air inlet to any other appliance   | 12 in. (305 mm) for appliances >10,000 Btuh(3 kW) and ≤ 100,000 Btuh ( 30 kW),<br>36 in. (914 mm) for appliances >100,000 Btuh (30 kW)   | 4ft. (1.2M) below or to the side of the opening,<br>1 ft (.3M) above the opening.<br>Manufacturer's Recommendation: See Note 8  |
| K    | Clearance to a mechanical air supply inlet  | 6 ft. (1.8 M)  | 3ft. (.9 M) above if within 10 ft. (3 M) horizontally   |
| L    | Clearance under a veranda, porch, deck, or balcony  | 12 in. (305 mm).<br>Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.  | See Note 4.<br>Manufacturer's Recommendation: See Notes 3-8.  |
| M    | Clearance to each side of the centerline extended above or below vent terminal of the furnace to a dryer or water heater vent, or other appliance's direct vent intake or exhaust | 12 in. (305 mm)  | 12 in. (305 mm)   |
| N    | Clearance to a moisture exhaust duct (dryer vent, spa exhaust, etc.)  | 12 in. (305 mm) See Note 4   | 12 in. (305 mm) See Note 4  |
| O    | Clearance from a plumbing vent stack  | 3 ft. (.9 M)   | 3 ft. (.9 M)  |
| P    | Clearance above paved sidewalk or paved driveway located on public property   | 7 ft. (2.1 M).<br>Vent shall not terminate above a sidewalk or paved driveway that is located between two single-family dwellings and serves both dwellings.   | 7ft. (2.1M)   |


> greater than, ≥ greater than or equal to, < less than, ≤ less than or equal to

Notes:


1. In accordance with the current CAN/CSA B149.1, Natural Gas and Propane Installation Code.
2. In accordance with the current ANSI Z223.1/NFPA 54, National Fuel Gas Code
3. NOTE: This table is based upon National codes for gas appliances, and are provided as a reference.

Refer to Local codes which may supersede these standards and/or recommendations.

4. For clearances not specified in ANSI Z223.1/NFPA 54 or CAN/CSA B 149.1, clearances shall be in accordance with local installation codes and the requirements of the gas supplier and the manufacturer's installation instructions.
5. When locating vent terminations, consideration must be given to prevailing winds, location, and other conditions which may cause recirculation of the combustion products of adjacent vents. Recirculation can cause poor combustion, inlet condensation problems, vent termination icing and/or accelerated corrosion of the heat exchangers.
6. Design and position vent outlets to avoid ice build-up on and moisture damage to surrounding surfaces.
7. The vent for this appliance shall not terminate:
  - a. Near soffit vents of crawl space vents or other areas where condensate or vapor could create a nuisance or hazard or property damage; or
  - b. Where condensate vapor could cause damage or could be detrimental to the operation of regulators, relief valves, or other equipment.
8. These National standards apply to all non-direct-vent gas appliances. Contact Local code officials for additional requirements and/or exclusions.

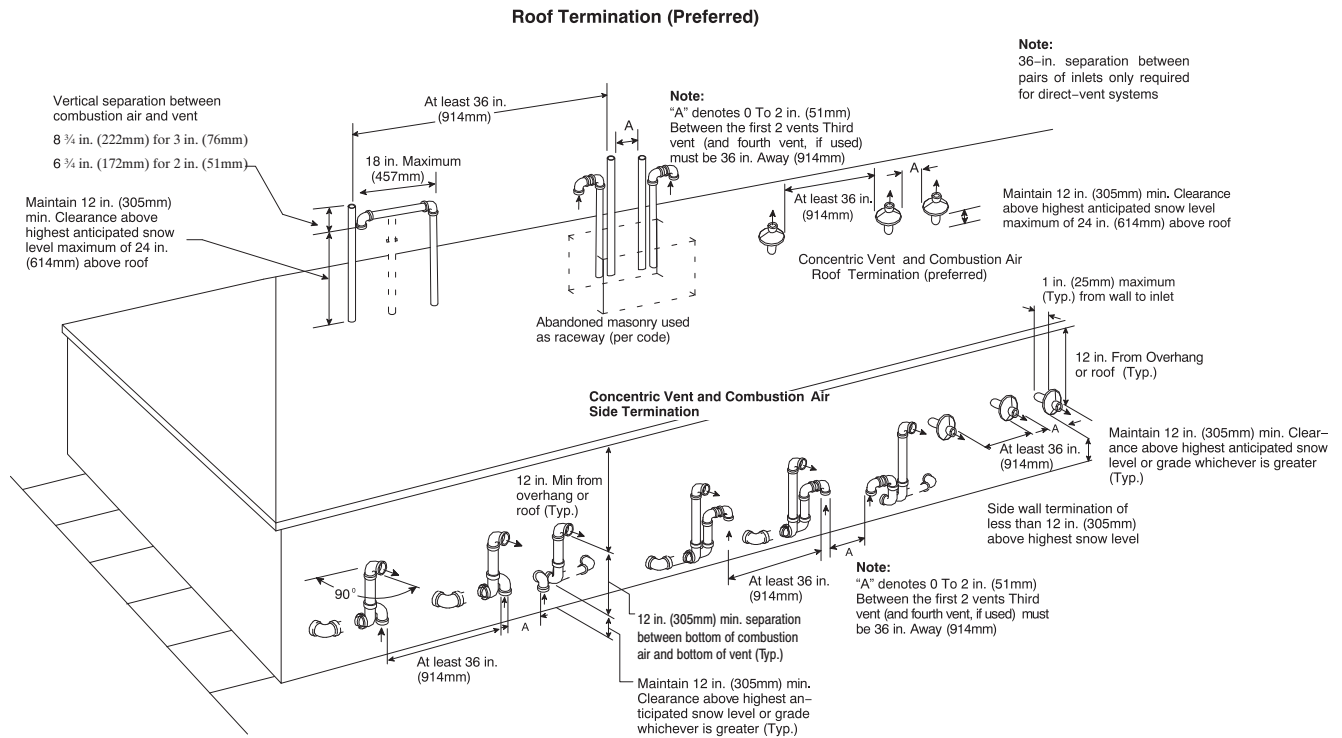**Fig. 62 – Combustion Air and Vent Pipe Termination for Direct Vent (2-Pipe) System**

A13305

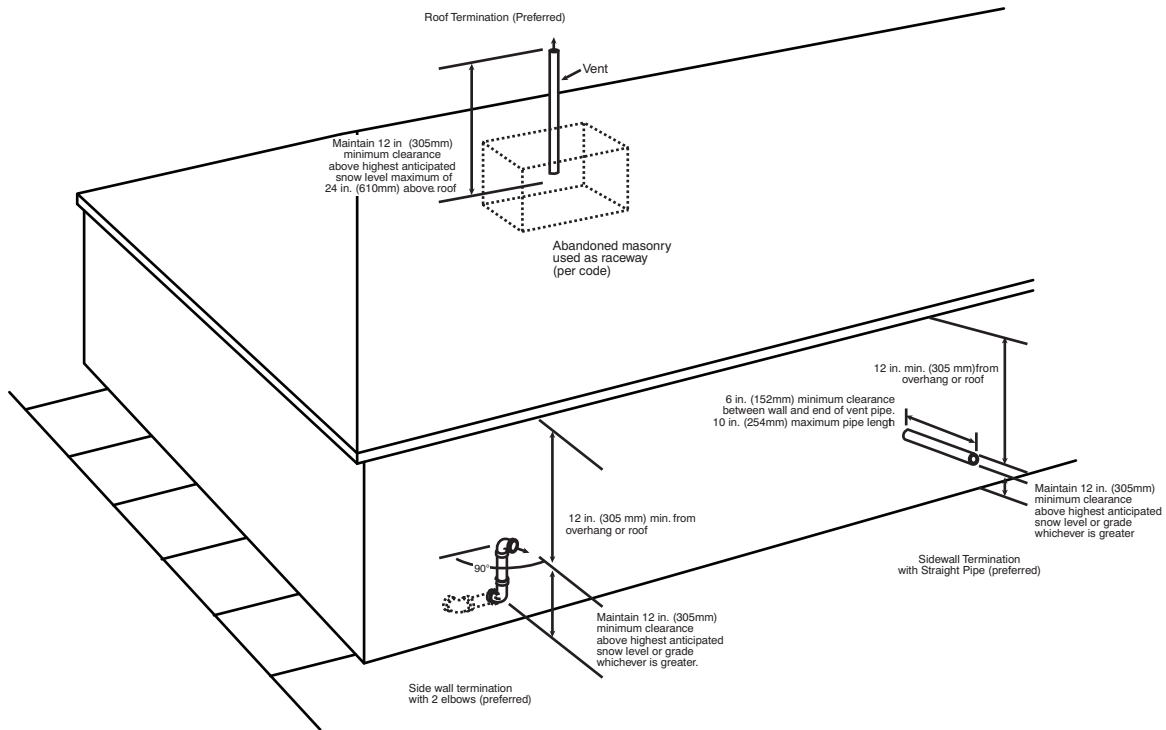**Fig. 63 – Vent Pipe Termination for Non-Direct Vent and Ventilated Combustion Air System**

A05091

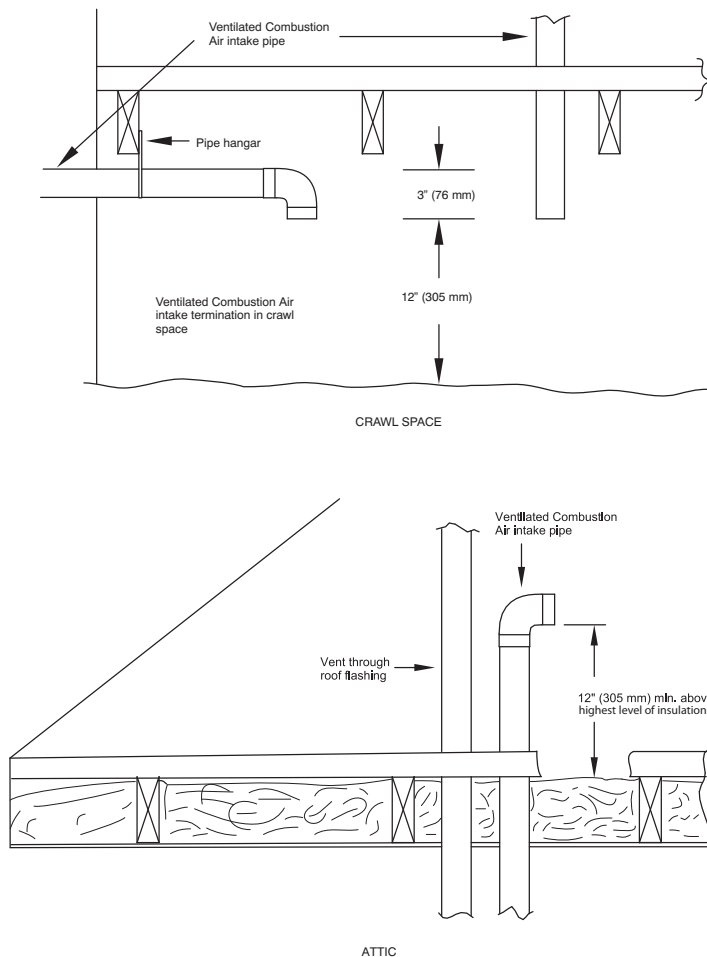


Fig. 64 – Vent Terminations for Ventilated Combustion Air

A10497

## START-UP, ADJUSTMENT, AND SAFETY CHECK

### ! NOTICE

#### Important Installation and Start-up Procedures

Failure to follow this procedure may result in a nuisance smoke or odor complaint.

The manifold pressure, gas rate by meter clocking, temperature rise and operation must be checked after installation. Minor smoke and odor may be present temporarily after start-up from the manufacturing process. Some occupants are more sensitive to this minor smoke and odor. It is recommended that doors and windows be open during the first heat cycle.

#### General

1. Furnace must have a 115-v power supply properly connected and grounded.

**NOTE:** Proper polarity must be maintained for 115-v wiring. Control status indicator light flashes rapidly and furnace does not operate if polarity is incorrect or if the furnace is not grounded..

2. Thermostat wire connections at terminals R, W/W1, G, and Y/Y2 must be made at 24-v terminal block on furnace control.
3. Natural gas service pressure must not exceed 0.5 psig (14-in. w.c., 350 Pa), but must be no less than 0.16 psig (4.5-in. w.c., 1125 Pa).
4. Blower door must be in place to complete 115-v electrical circuit and supply power to the furnace components.

Before operating furnace, check flame rollout manual reset switch for continuity. If necessary, press button to reset switch.

EAC-1 terminal is energized whenever blower operates. HUM terminal is only energized when the blower is energized in heating.

### ! CAUTION

#### UNIT OPERATION HAZARD

Failure to follow this caution may result in intermittent unit operation or performance dissatisfaction.

These furnaces are equipped with a manual reset limit switch in the burner assembly. This switch opens and shuts off power to the gas valve if an overheat condition (flame rollout) occurs in the burner assembly/enclosure. Correct inadequate combustion-air supply, improper gas pressure setting, improper burner or gas orifice positioning, or improper venting condition before resetting switch. **DO NOT** jumper this switch.

#### Setup Switches

There are four sets of setup switches on the furnace control board. These switches configure the furnace for correct application requirement. They also select the airflow settings for Air Conditioning and Continuous Fan airflows.

The Setup Switch locations are shown and described on Fig. 65. The setup switches are also shown on the unit wiring label.

#### Setup Switches (SW1)

The furnace control has 8 setup switches that may be set to meet the application requirements. Refer to the Adjustments section for setup

switch configurations. To set these setup switches for the appropriate requirement:

1. Remove blower door.
2. Locate setup switches on furnace control.
3. Configure the setup switches as necessary for the application.
4. Replace blower door.

**NOTE:** If a bypass humidifier is used, setup switch SW1-4 (Comfort/Efficiency) should be in OFF=Efficiency position. This compensates for the increased temperature in return air resulting from bypass.

**NOTE:** If modulating dampers are used, blower motor automatically compensates for modulating dampers.

### **Air Conditioning (A/C) Setup Switches (SW2)**

The air conditioning setup switches are used to match furnace airflow to required cooling airflow or high stage cooling airflow when a two-stage outdoor unit is used. Refer to the Adjustments section for setup switch configurations.

To set the desired cooling airflow:

1. Remove blower door.
2. Locate A/C setup switches on furnace control.
3. Determine air conditioning tonnage used.
4. Configure the switches for the required cooling airflow.
5. Replace blower door.

**NOTE:** Incorrect airflow caused by improper A/C switch setup may cause condensate blow-off or a frozen indoor coil in cooling mode.

### **Continuous Fan (CF) Setup Switches (SW3)**

The CF setup switches are used to select desired airflow when thermostat is in continuous fan mode or to select low-cooling airflow for two-speed cooling units. Refer to the Adjustments section for setup switch configurations. To set desired cooling airflow:


1. Remove blower door.
2. Locate CF setup switches on furnace control.
3. Determine air conditioning tonnage used for low cooling (when used) or desired continuous fan airflow.
4. Configure the switches for the required airflow.
5. Replace blower door.

### **Additional Setup Switches (SW4)**

The furnace control has three additional setup switches labeled SW4.

Setup switches SW4 are used for applications using a communicating User Interface and to adjust airflow. SW4-3 is used to adjust airflow. Refer to the Adjustments section for setup switch configurations. Refer to User Interface instructions for other SW4 switch configurations.

1. Remove blower door.
2. Locate setup switch SW-4 on furnace control.
3. Configure the switches as necessary for the application.
4. Replace blower door.

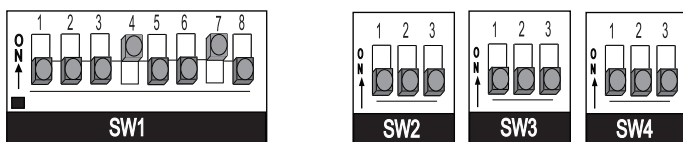

**Fig. 65 – Dip Switch Configuration**

A200340

## **Prime Condensate Trap with Water**




### **UNIT OPERATION HAZARD**

Failure to follow this caution may result in intermittent unit operation or performance satisfaction.

Condensate trap must be PRIMED or proper draining may not occur. The condensate trap has two internal chambers which can ONLY be primed by pouring water into the inducer drain side of condensate trap.

1. Remove upper and middle collector box drain plugs opposite of the condensate trap.
2. Connect field-supplied 5/8-in. (16 mm) ID tube with attached funnel to upper collector box drain connection.
3. Pour one quart (liter) of water into funnel/tube. Water should run through collector box, overflow condensate trap, and flow into open field drain.
4. Remove funnel; replace collector box drain plug.
5. Connect field-supplied 5/8-in. (16 mm) ID tube to middle collector box drain port.
6. Pour one quart (liter) of water into funnel/tube. Water should run through collector box, overflow condensate trap, and flow into open field drain.
7. Remove funnel and tube from collector box and replace collector box drain plug.

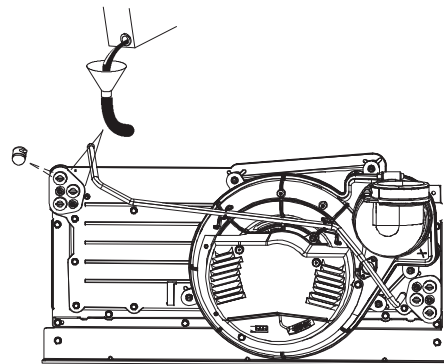

**Fig. 66 – Prime Condensate Trap**

A190304

## **Adjustments**



### **FIRE HAZARD**

Failure to follow this warning could result in injury, death and/or property damage.

DO NOT bottom out gas valve regulator adjusting screw. This can result in unregulated gas valve outlet pressure and result in excess overfire and heat exchanger failures.



### **FURNACE DAMAGE HAZARD**

Failure to follow this caution may result in reduced furnace life.

DO NOT redrill orifices. Improper drilling (burrs, out-of-round holes, etc.) can cause excessive burner noise and misdirection of inlet gas, see [Fig. 67\)](#)

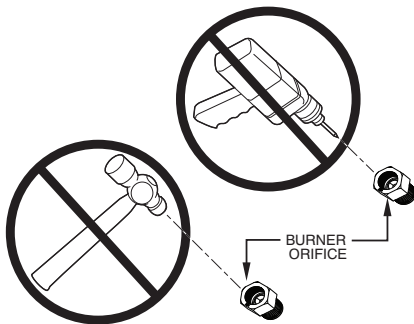


Fig. 67 – Orifice Hole

A180238

Furnace gas input rate on rating plate is for installation at altitudes up to 2,000 ft. (610 M). Furnace input rate must be within  $\pm 2$  percent of furnace rating plate input.

The input rating for altitudes above 2,000 ft. (610 M) must be reduced by 2 percent for each 1,000 ft. (305 M) above sea level. For installations below 2,000 ft. (610 M), refer to the unit rating plate. For installation above 2,000 ft. (610 M), multiply the input on the rating plate by the derate multiplier for the correct input rate, see Table 20.

Table 20 – Altitude Derate Multiplier for USA

| ALTITUDE<br>(FT. / M) | PERCENT<br>OF<br>DERATE | DERATE<br>MULTIPLIER<br>FACTOR* |
|-----------------------|-------------------------|---------------------------------|
| 0–2000 (0-610)        | 0                       | 1.00                            |
| 2001–3000 (610-914)   | 4–6                     | 0.95                            |
| 3001–4000 (914-1219)  | 6–8                     | 0.93                            |
| 4001–5000 (1219-1524) | 8–10                    | 0.91                            |
| 5001–5400 (1525-1646) | 10–11                   | 0.90                            |

\*. Derate multiplier factors are based on midpoint altitude for altitude range

1. Determine the correct gas input rate. Refer to the unit rating plate.
2. Determine the correct outlet gas pressure adjustment.
  - a. Obtain average yearly gas heat value (at installed altitude) from local gas supplier.
  - b. Obtain average yearly gas specific gravity from local gas supplier.
  - c. Find closest natural gas heat value and specific gravity, see Table 23 through Table 25.
  - d. Follow heat value and specific gravity lines to point of intersection to find outlet pressure setting for proper operation.
3. Check Inlet Gas Pressure

The inlet gas pressure must be checked with the furnace operating. This is necessary to make sure the inlet gas pressure does not fall below the minimum pressure of 4.5 in. w.c.

- a. Make sure the gas supply is turned off to the furnace and at the electric switch on the gas valve.
- b. Loosen set screw on inlet tower pressure tap no more than one full turn with a 3/32 – in. hex wrench or remove the 1/8 – in. NPT plug from the inlet pressure tap on the gas valve.
- c. Connect a manometer to the inlet pressure tap on gas valve.
- d. Turn on furnace power supply.
- e. Turn gas supply manual shutoff valve to ON position.
- f. Turn furnace gas valve switch to ON position.
- g. Jumper R and W/W1 thermostat connections at the furnace control board.
- h. When main burners ignite, confirm inlet gas pressure is between 4.5 in. w.c. (1125 Pa) and 13.6 in. w.c. (3388 Pa).
- i. Remove jumper across thermostat connections to terminate call for heat. Wait until the blower off delay is completed.
- j. Turn furnace gas valve electric switch to OFF position.
- k. Turn gas supply manual shutoff valve to OFF position.
- l. Turn off furnace power supply.

- m. Remove manometer from the inlet pressure tap of the gas valve.
- n. Tighten set screw on inlet tower pressure tap with 3/32 – in. hex wrench, or if 1/8 – in. NPT plug was removed, apply pipe dope sparingly to end of plug and re – install in the gas valve

**WARNING****FIRE HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Inlet pressure tap set screw must be tightened and 1/8-in. NPT pipe plug must be installed to prevent gas leaks.

4. Adjust gas valve outlet pressure determined in Step 2. to obtain correct input rate.
  - a. Turn gas valve ON/OFF switch to OFF.
  - b. Loosen set screw on outlet tower pressure tap no more than one full turn with a 3/32 in. hex wrench, see Fig. 68.
  - c. Connect a water column manometer or similar device to pressure tap on the gas valve.
  - d. Turn gas valve ON/OFF switch to ON.
  - e. Manually close blower door switch.
  - f. Set thermostat to call for heat.
  - g. Remove regulator seal cap and turn regulator adjusting screw counterclockwise (out) to decrease input rate of clockwise (in) to increase input rate.
  - h. Install regulator seal cap.
  - i. Leave manometer or similar device connected and proceed to next step.

**NOTE:** If damaged or it is suspected to have been redrilled, check orifice hole with a numbered drill bit of correct size. Never redrill an orifice. A burr-free and properly sized orifice hole is essential for proper flame characteristics.

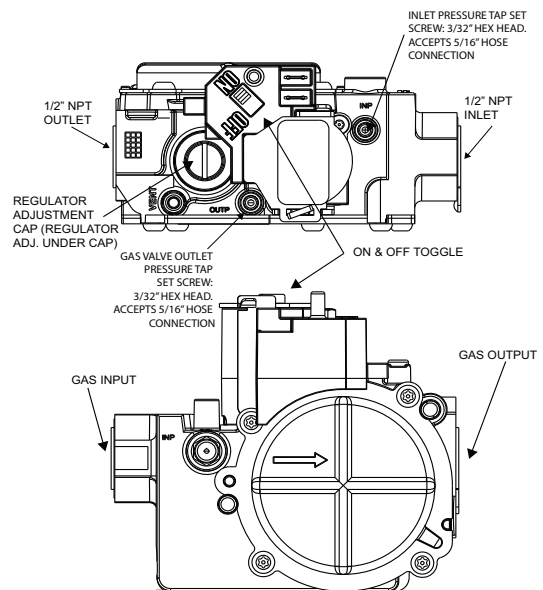


Fig. 68 – Gas Control Valve

A180231

5. Verify natural gas input rate by clocking meter.

**NOTE:** Gas valve regulator adjustment cap must be in place for proper input to be clocked.

- a. Turn off all other gas appliances and pilots served by the meter.
  - a. Jumper R and W/W1 thermostat connections at the furnace control board.
  - b. Run furnace for 15 minutes in heating operation.

- c. Measure time (in seconds) for gas meter to complete 1 revolution and note reading. The 2 or 5 cubic feet dial provides a more accurate measurement of gas flow.
- d. For cubic ft. of gas per hr, see [Table 22](#).
- e. Multiply gas rate (cu ft./hr) by heating value (Btuh/cu ft.) to obtain input.

If clocked rate does not match required input from Step 1, increase gas valve outlet pressure to increase input or decrease gas valve outlet pressure to decrease input. Repeat steps b through e until correct input is achieved. Reinstall regulator seal cap on gas valve.

6. Restore furnace to normal operating condition.
  - a. When correct input rate and temperature rise is achieved, remove jumper across thermostat connections to terminate call for heat. Wait until the blower off-delay is completed, turn gas valve ON/OFF switch to OFF.
  - b. Remove manometer or similar device from gas valve.
  - c. Tighten set screw on outlet tower pressure tap with 3/32 in. hex wrench.
  - d. Turn gas valve ON/OFF switch to ON.
  - e. Check for gas leaks and verify furnace operation.
7. Set temperature rise. The furnace must operate within the temperature rise ranges specified on the furnace rating plate. Determine the temperature rise as follows:

**NOTE:** Blower access door must be installed when taking temperature rise reading. Leaving blower access door off will result in incorrect temperature measurements.

## ⚠ CAUTION

### FURNACE DAMAGE HAZARD

Failure to follow this caution may result in:

Overheating the heat exchangers or condensing flue gases in heat exchanger areas not designed for condensate.

Shortened furnace life

Component damage

Temperature rise must be within limits specified on furnace rating plate.

Recommended operation is at midpoint of rise range or slightly above.

## ⚠ WARNING

### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury or death.

Disconnect 115-v electrical power and install lockout tag before changing speed tap.

When setup switch SW1-4 is ON, operation will be near the high end of the rise range for improved comfort. Furnace must operate within ranges of temperature rise specified on the furnace rating plate. Determine air temperature rise as follows:

- a. Place thermometers in return and supply ducts as close to furnace as possible. Be sure thermometers do not see radiant heat from heat exchangers. Radiant heat affects temperature rise readings. This practice is particularly important with straight-run ducts.
- b. When thermometer readings stabilize, subtract return-air temperature from supply-air temperature to determine air temperature rise.

**NOTE:** If the temperature rise is outside this range, first check:

- (1.) Gas input for heating operation.
- (2.) Check derate for altitude, if applicable.
- (3.) Return and supply ducts for excessive restrictions causing static pressures greater than the maximum heating static listed on the rating plate.

- (4.) Ensure setup switch SW1-4. See [Fig. 42](#) for switch location.
- (5.) Make sure proper model plug is installed.

If the temperature rise is too high or too low:

- c. Remove jumpers from thermostat connections.
- d. Wait until the blower off-delay is completed.
- e. Turn 115 VAC power off.
- f. Check the position of setup switch SW1-4. When set to OFF, airflow is raised 10% for heating. Factory default position is ON.
- g. Turn 115 VAC power on.
- h. Recheck heating temperature rise. After the temperature rise has been verified:
  - (1.) Remove jumpers from thermostat terminals.
  - (2.) Allow the blower off-delay to complete.
  - (3.) Proceed to “Adjust Blower off-delay” or install blower door if complete.

Adjust Blower Off-Delay (Heat Mode)

- a. Remove blower door if installed.
- b. Turn Dip switch SW1-7 or SW1-8 ON or OFF for desired blower off delay. See [Table 21](#) and [Fig. 65](#).

**Table 21 – Blower Off Delay Setup Switch**

| DESIRED HEATING MODE<br>BLOWER OFF DELAY (SEC.) | SETUP SWITCH<br>(SW1-7 AND -8)<br>POSITION |       |
|---|--|-------|
|   | SW1-7                                      | SW1-8 |
| 90  | OFF  | OFF   |
| 120   | ON   | OFF   |
| 150   | OFF  | ON    |
| 180   | ON   | ON    |

## Adjust Cooling Airflow – High-Speed and Low-Speed Cooling

The ECM blower can be adjusted for a range of airflows for low-speed or high-speed cooling. See [Table 11](#) – Air Delivery – CFM (With Filter). Depending on the model size, the cooling airflow can be adjusted from 1.5 to 6 tons based on 350 per CFM ton.

**NOTE:** 6 ton airflow will truncate at 2200 CFM on applicable models.

The high-speed or single-speed cooling airflow is adjusted by turning Setup switches SW2-1, SW2-2 and SW2-3 either ON or OFF. Select the required airflow from [Table 11](#). [Table 11](#) is based upon 350 CFM per ton. For other CFM per ton Setup switch selections, see [Fig. 42](#) and [Fig. 65](#).

The Continuous Fan airflow selection via Setup switches SW3 is also the switch setting for low-speed cooling when the furnace is used with a 2-speed cooling or heat pump unit. Adjust the Continuous Fan CFM Setup switches SW3 to match the airflow required for low-speed cooling. Select the required airflow from [Table 11](#) and [Fig. 65](#).

**NOTE:** The airflow selected via SW3 (Low-Speed Cooling Airflow) cannot exceed the airflow selected via SW2 (High-Speed Cooling Airflow). For other CFM per ton Setup switch selections, see [Fig. 42](#) and [Fig. 65](#).

**NOTE:** The cooling airflow settings for SW2 and SW3 selections are the same, EXCEPT for the default values. See [Table 11](#).

For a complete explanation of cooling airflow, refer to the section titled “Sequence of Operation.”

## Adjust Continuous Fan Airflow (and Low-Speed Cooling Airflow)

Adjust continuous fan and low-stage cooling airflow using SW3 and refer to [Fig. 42](#) and [Table 11](#). The continuous fan speed can be further adjusted at a conventional thermostat using the continuous fan speed select function. Changing the continuous fan speed at a conventional thermostat DOES NOT change the low-speed cooling airflow selected via SW3 at the control board. Refer to the section titled “continuous Blower Speed selection for Thermostat.”

## Set Thermostat Heat Anticipator

1. Mechanical thermostat - Set thermostat heat anticipator to match the amp. draw of the electrical components in the R-W/W1 circuit. Accurate amp. draw readings can be obtained at the wires normally connected to thermostat subbase terminals, R and W. The thermostat anticipator should NOT be in the circuit while measuring current.

### ! WARNING

#### FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.  
Gas valve outlet pressure tap must be tightened to prevent gas leak.

### ! CAUTION

#### FURNACE OVERHEATING HAZARD

Failure to follow this caution may result in reduced furnace life.  
Recheck temperature rise. It must be within limits specified on the rating plate. Recommended operation is at the mid-point of rise range or slightly above.

- (1.) Remove thermostat from subbase or from wall.
- (2.) Connect an amp. meter (see Fig. 69) across the R and W/W1 subbase terminals or R and W/W1 wires at wall.
- (3.) Record amp. draw across terminals when furnace is in heating and after blower starts.
- (4.) Set heat anticipator on thermostat per thermostat instructions and install on subbase or wall.

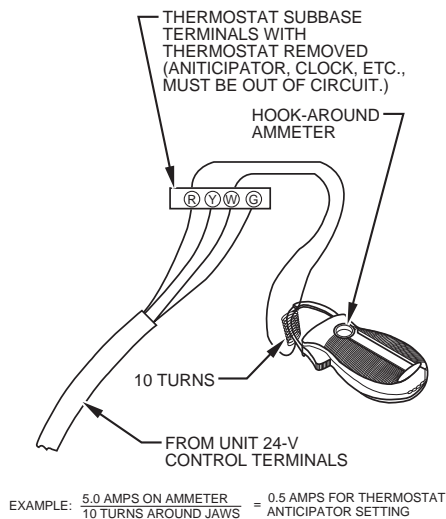


Fig. 69 – Amp. Draw Check With Ammeter

A96316

- a. Electronic thermostat: Set cycle rate for 4 cycles per hr.
2. Cooling On Delay is fixed at 2 seconds for either jumper selection.

## Check Safety Controls

1. Check Main Limit Switch(es)  
This control shuts off combustion control system and energizes air-circulating blower motor, if furnace overheats. By using this method to check limit control, it can be established that limit is functioning properly and will operate if there is a restricted duct system or motor failure. If limit control does not function during this test, cause must be determined and corrected.
  - a. Run furnace for at least 5 minutes.

- b. Gradually block off return air with a piece of cardboard or sheet metal until the limit trips.
- c. Unblock return air to permit normal circulation for 5 minutes.
- d. Main limit circuit open causes 3 hour lock out.
- e. Reset unit power to clear limit fault lockout.

## Checklist

1. Put away tools and instruments. Clean up debris.
2. Verify that switches SW1-1 and SW1-6 are **OFF** and other setup switches are set as desired. Verify that switches SW1-7 and SW1-8 for the blower **OFF DELAY** are set as desired per Table 21.
3. Verify that blower and control doors are properly installed.
4. Verify that there are no unsealed openings in the blower shelf or casing.
5. Cycle test furnace with room thermostat.
6. Check operation of accessories per manufacturer's instructions.
7. Review Owner's Manual with owner.
8. Attach literature packet to furnace.
9. Attach entire literature packet to furnace.

Table 22 – Gas Rate (CU ft./hr)

| SECONDS<br>FOR 1<br>REV | SIZE OF TEST DIAL |             |             | SECONDS<br>FOR 1<br>REV | SIZE OF TEST DIAL |             |             |
|-------------------------|-------------------|-------------|-------------|-------------------------|-------------------|-------------|-------------|
|                         | 1 Cu<br>Ft.       | 2 Cu<br>Ft. | 5 Cu<br>Ft. |                         | 1 Cu<br>Ft.       | 2 Cu<br>Ft. | 5 Cu<br>Ft. |
| 10                      | 360               | 720         | 1800        | 55                      | 65                | 131         | 327         |
| 11                      | 327               | 655         | 1636        | 56                      | 64                | 129         | 321         |
| 12                      | 300               | 600         | 1500        | 57                      | 63                | 126         | 316         |
| 13                      | 277               | 555         | 1385        | 58                      | 62                | 124         | 310         |
| 14                      | 257               | 514         | 1286        | 59                      | 61                | 122         | 305         |
| 15                      | 240               | 480         | 1200        | 60                      | 60                | 120         | 300         |
| 16                      | 225               | 450         | 1125        | 62                      | 58                | 116         | 290         |
| 17                      | 212               | 424         | 1059        | 64                      | 56                | 112         | 281         |
| 18                      | 200               | 400         | 1000        | 66                      | 54                | 109         | 273         |
| 19                      | 189               | 379         | 947         | 68                      | 53                | 106         | 265         |
| 20                      | 180               | 360         | 900         | 70                      | 51                | 103         | 257         |
| 21                      | 171               | 343         | 857         | 72                      | 50                | 100         | 250         |
| 22                      | 164               | 327         | 818         | 74                      | 48                | 97          | 243         |
| 23                      | 157               | 313         | 783         | 76                      | 47                | 95          | 237         |
| 24                      | 150               | 300         | 750         | 78                      | 46                | 92          | 231         |
| 25                      | 144               | 288         | 720         | 80                      | 45                | 90          | 225         |
| 26                      | 138               | 277         | 692         | 82                      | 44                | 88          | 220         |
| 27                      | 133               | 267         | 667         | 84                      | 43                | 86          | 214         |
| 28                      | 129               | 257         | 643         | 86                      | 42                | 84          | 209         |
| 29                      | 124               | 248         | 621         | 88                      | 41                | 82          | 205         |
| 30                      | 120               | 240         | 600         | 90                      | 40                | 80          | 200         |
| 31                      | 116               | 232         | 581         | 92                      | 39                | 78          | 196         |
| 32                      | 113               | 225         | 563         | 94                      | 38                | 76          | 192         |
| 33                      | 109               | 218         | 545         | 96                      | 38                | 75          | 188         |
| 34                      | 106               | 212         | 529         | 98                      | 37                | 74          | 184         |
| 35                      | 103               | 206         | 514         | 100                     | 36                | 72          | 180         |
| 36                      | 100               | 200         | 500         | 102                     | 35                | 71          | 178         |
| 37                      | 97                | 195         | 486         | 104                     | 35                | 69          | 173         |
| 38                      | 95                | 189         | 474         | 106                     | 34                | 68          | 170         |
| 39                      | 92                | 185         | 462         | 108                     | 33                | 67          | 167         |
| 40                      | 90                | 180         | 450         | 110                     | 33                | 65          | 164         |
| 41                      | 88                | 176         | 439         | 112                     | 32                | 64          | 161         |
| 42                      | 86                | 172         | 429         | 116                     | 31                | 62          | 155         |
| 43                      | 84                | 167         | 419         | 120                     | 30                | 60          | 150         |
| 44                      | 82                | 164         | 409         | 124                     | 29                | 58          | 145         |
| 45                      | 80                | 160         | 400         | 129                     | 28                | 56          | 140         |
| 46                      | 78                | 157         | 391         | 133                     | 27                | 54          | 135         |
| 47                      | 76                | 153         | 383         | 138                     | 26                | 52          | 130         |
| 48                      | 75                | 150         | 375         | 144                     | 25                | 50          | 125         |
| 49                      | 73                | 147         | 367         | 150                     | 24                | 48          | 120         |
| 50                      | 72                | 144         | 360         | 157                     | 23                | 46          | 115         |
| 51                      | 71                | 141         | 355         | 164                     | 22                | 44          | 110         |
| 52                      | 69                | 138         | 346         | 171                     | 21                | 42          | 105         |
| 53                      | 68                | 136         | 340         | 180                     | 20                | 40          | 100         |
| 54                      | 67                | 133         | 333         |                         |                   |             |             |

**Table 23 – Gas Valve Outlet Pressure for Gas Heat Values at Altitude - 60,000**

| (Tabulated Data Based on 60,000 BTUH Input for 0-ft (0m) to 5400-ft (1646 M) above sea level) |   |                                 |      |      |      |      |      |
|---|---|---------------------------------|------|------|------|------|------|
| ALTITUDE RANGE<br>ft (m)  | AVG. GAS HEAT<br>VALUE AT ALTITUDE<br>(Btu/cu ft) | SPECIFIC GRAVITY OF NATURAL GAS |      |      |      |      |      |
|   |   | 0.58                            | 0.60 | 0.62 | 0.64 | 0.66 | 0.68 |
|   |   | Manifold Pressure               |      |      |      |      |      |
| 0<br>(0)<br><br>to<br><br>2000<br>(610)   | 900   | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
|   | 925   | 2.6                             | 2.7  | 2.8  | 2.9  | 3.0  | 3.1  |
|   | 950   | 2.5                             | 2.6  | 2.7  | 2.8  | 2.9  | 2.9  |
|   | 975   | 2.4                             | 2.5  | 2.5  | 2.6  | 2.7  | 2.8  |
|   | 1000  | 2.3                             | 2.3  | 2.4  | 2.5  | 2.6  | 2.7  |
|   | 1025  | 2.2                             | 2.2  | 2.3  | 2.4  | 2.5  | 2.5  |
|   | 1050  | 2.1                             | 2.1  | 2.2  | 2.3  | 2.3  | 2.4  |
|   | 1075  | 2.0                             | 2.0  | 2.1  | 2.2  | 2.2  | 2.3  |
| 2001<br>(611)<br><br>to<br><br>3000<br>(914)  | 1100  | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|   | 800   | 3.0                             | 3.1  | 3.1  | 3.1  | 3.1  | 3.1  |
|   | 825   | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
|   | 850   | 2.7                             | 2.8  | 2.9  | 3.0  | 3.0  | 3.1  |
|   | 875   | 2.5                             | 2.6  | 2.7  | 2.8  | 2.9  | 3.0  |
|   | 900   | 2.4                             | 2.5  | 2.6  | 2.6  | 2.7  | 2.8  |
|   | 925   | 2.3                             | 2.3  | 2.4  | 2.5  | 2.6  | 2.7  |
|   | 950   | 2.1                             | 2.2  | 2.3  | 2.4  | 2.4  | 2.5  |
| 3001<br>(915)<br><br>to<br><br>4000<br>(1219)   | 975   | 2.0                             | 2.1  | 2.2  | 2.2  | 2.3  | 2.4  |
|   | 1000  | 1.9                             | 2.0  | 2.1  | 2.1  | 2.2  | 2.3  |
|   | 775   | 3.0                             | 3.1  | 3.1  | 3.1  | 3.1  | 3.1  |
|   | 800   | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
|   | 825   | 2.6                             | 2.7  | 2.8  | 2.9  | 3.0  | 3.1  |
|   | 850   | 2.5                             | 2.6  | 2.6  | 2.7  | 2.8  | 2.9  |
|   | 875   | 2.3                             | 2.4  | 2.5  | 2.6  | 2.7  | 2.7  |
|   | 900   | 2.2                             | 2.3  | 2.4  | 2.4  | 2.5  | 2.6  |
| 4001<br>(1220)<br><br>to<br><br>5000<br>(1524)  | 925   | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.4  |
|   | 950   | 2.0                             | 2.0  | 2.1  | 2.2  | 2.3  | 2.3  |
|   | 975   | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|   | 1000  | 1.8                             | 1.8  | 1.9  | 2.0  | 2.0  | 2.1  |
|   | 750   | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |
|   | 775   | 2.7                             | 2.8  | 2.9  | 3.0  | 3.1  | 3.1  |
|   | 800   | 2.6                             | 2.7  | 2.8  | 2.8  | 2.9  | 3.0  |
|   | 825   | 2.4                             | 2.5  | 2.6  | 2.7  | 2.8  | 2.8  |
| 5001<br>(1525)<br><br>to<br><br>5400<br>(1646)  | 850   | 2.3                             | 2.4  | 2.4  | 2.5  | 2.6  | 2.7  |
|   | 875   | 2.2                             | 2.2  | 2.3  | 2.4  | 2.5  | 2.5  |
|   | 900   | 2.0                             | 2.1  | 2.2  | 2.2  | 2.3  | 2.4  |
|   | 925   | 1.9                             | 2.0  | 2.1  | 2.1  | 2.2  | 2.3  |
|   | 950   | 1.8                             | 1.9  | 2.0  | 2.0  | 2.1  | 2.1  |
|   | 975   | 1.8                             | 1.8  | 1.9  | 1.9  | 2.0  | 2.0  |
|   | 1000  | 1.8                             | 1.8  | 1.8  | 1.8  | 1.9  | 1.9  |
|   | 725   | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |

**Table 24 – Gas Valve Outlet Pressure for Gas Heat Values at Altitude - 80,000**

| (Tabulated Data Based on 80,000 BTUH Input for 0-ft (0m) to 5400-ft (1646 M) above sea level) |  |                                 |      |      |      |      |      |
|---|--|---------------------------------|------|------|------|------|------|
| ALTITUDE RANGE<br>ft (m)  | AVG. GAS HEAT<br>VALUE AT<br>ALTITUDE<br>(Btu/cu ft) | SPECIFIC GRAVITY OF NATURAL GAS |      |      |      |      |      |
|   |  | 0.58                            | 0.60 | 0.62 | 0.64 | 0.66 | 0.68 |
|   |  | Manifold Pressure               |      |      |      |      |      |
| 0<br>(0)<br><br>to<br><br>2000<br>(610)   | 900  | 2.7                             | 2.8  | 2.9  | 3.0  | 3.1  | 3.1  |
|   | 925  | 2.6                             | 2.7  | 2.8  | 2.8  | 2.9  | 3.0  |
|   | 950  | 2.4                             | 2.5  | 2.6  | 2.7  | 2.8  | 2.9  |
|   | 975  | 2.3                             | 2.4  | 2.5  | 2.6  | 2.6  | 2.7  |
|   | 1000   | 2.2                             | 2.3  | 2.4  | 2.4  | 2.5  | 2.6  |
|   | 1025   | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.5  |
|   | 1050   | 2.0                             | 2.1  | 2.1  | 2.2  | 2.3  | 2.3  |
|   | 1075   | 1.9                             | 2.0  | 2.0  | 2.1  | 2.2  | 2.2  |
| 2001<br>(611)<br><br>to<br><br>3000<br>(914)  | 1100   | 1.8                             | 1.9  | 1.9  | 2.0  | 2.1  | 2.1  |
|   | 800  | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |
|   | 825  | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
|   | 850  | 2.6                             | 2.7  | 2.8  | 2.9  | 3.0  | 3.1  |
|   | 875  | 2.5                             | 2.5  | 2.6  | 2.7  | 2.8  | 2.9  |
|   | 900  | 2.3                             | 2.4  | 2.5  | 2.6  | 2.6  | 2.7  |
|   | 925  | 2.2                             | 2.3  | 2.4  | 2.4  | 2.5  | 2.6  |
|   | 950  | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.4  |
| 3001<br>(915)<br><br>to<br><br>4000<br>(1219)   | 975  | 2.0                             | 2.0  | 2.1  | 2.2  | 2.3  | 2.3  |
|   | 1000   | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|   | 775  | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |
|   | 800  | 2.7                             | 2.8  | 2.9  | 3.0  | 3.1  | 3.1  |
|   | 825  | 2.6                             | 2.6  | 2.7  | 2.8  | 2.9  | 3.0  |
|   | 850  | 2.4                             | 2.5  | 2.6  | 2.7  | 2.7  | 2.8  |
|   | 875  | 2.3                             | 2.4  | 2.4  | 2.5  | 2.6  | 2.7  |
|   | 900  | 2.1                             | 2.2  | 2.3  | 2.4  | 2.4  | 2.5  |
| 4001<br>(1220)<br><br>to<br><br>5000<br>(1524)  | 925  | 2.0                             | 2.1  | 2.2  | 2.2  | 2.3  | 2.4  |
|   | 950  | 1.9                             | 2.0  | 2.1  | 2.1  | 2.2  | 2.3  |
|   | 975  | 1.8                             | 1.9  | 2.0  | 2.0  | 2.1  | 2.1  |
|   | 1000   | 1.8                             | 1.8  | 1.9  | 1.9  | 2.0  | 2.0  |
|   | 750  | 2.9                             | 3.0  | 3.0  | 3.1  | 3.1  | 3.1  |
|   | 775  | 2.7                             | 2.8  | 2.9  | 2.9  | 3.0  | 3.1  |
|   | 800  | 2.5                             | 2.6  | 2.7  | 2.8  | 2.9  | 2.9  |
|   | 825  | 2.4                             | 2.4  | 2.5  | 2.6  | 2.7  | 2.8  |
| 5001<br>(1525)<br><br>to<br><br>5400<br>(1646)  | 850  | 2.2                             | 2.3  | 2.4  | 2.5  | 2.5  | 2.6  |
|   | 875  | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.5  |
|   | 900  | 2.0                             | 2.0  | 2.1  | 2.2  | 2.3  | 2.3  |
|   | 925  | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|   | 950  | 1.8                             | 1.8  | 1.9  | 2.0  | 2.0  | 2.1  |
|   | 975  | 1.8                             | 1.8  | 1.8  | 1.9  | 1.9  | 2.0  |
|   | 1000   | 1.8                             | 1.8  | 1.8  | 1.8  | 1.8  | 1.9  |
|   | 725  | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |

**Table 25 – Gas Valve Outlet Pressure for Gas Heat Values at  
Altitude - 100,000**

| (Tabulated Data Based on 100,000 BTUH Input for 0-ft (0m) to 5400-ft (1646 M) above sea level) |   |                                 |      |      |      |      |      |
|--|---|---------------------------------|------|------|------|------|------|
| ALTITUDE RANGE<br>ft (m)   | AVG. GAS HEAT VALUE AT ALTITUDE (Btu/cu ft) | SPECIFIC GRAVITY OF NATURAL GAS |      |      |      |      |      |
|  |   | 0.58                            | 0.60 | 0.62 | 0.64 | 0.66 | 0.68 |
|  |   | Manifold Pressure               |      |      |      |      |      |
| 0 (0)<br><br>to<br><br>2000 (610)  | 900   | 2.7                             | 2.8  | 2.9  | 3.0  | 3.1  | 3.1  |
|  | 925   | 2.6                             | 2.7  | 2.7  | 2.8  | 2.9  | 3.0  |
|  | 950   | 2.4                             | 2.5  | 2.6  | 2.7  | 2.8  | 2.9  |
|  | 975   | 2.3                             | 2.4  | 2.5  | 2.6  | 2.6  | 2.7  |
|  | 1000  | 2.2                             | 2.3  | 2.4  | 2.4  | 2.5  | 2.6  |
|  | 1025  | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.5  |
|  | 1050  | 2.0                             | 2.1  | 2.1  | 2.2  | 2.3  | 2.3  |
|  | 1075  | 1.9                             | 2.0  | 2.0  | 2.1  | 2.2  | 2.2  |
| 2001 (611)<br><br>to<br><br>3000 (914)   | 1100  | 1.8                             | 1.9  | 1.9  | 2.0  | 2.1  | 2.1  |
|  | 800   | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |
|  | 825   | 2.8                             | 2.9  | 3.0  | 3.0  | 3.1  | 3.1  |
|  | 850   | 2.6                             | 2.7  | 2.8  | 2.9  | 3.0  | 3.1  |
|  | 875   | 2.5                             | 2.5  | 2.6  | 2.7  | 2.8  | 2.9  |
|  | 900   | 2.3                             | 2.4  | 2.5  | 2.6  | 2.6  | 2.7  |
|  | 925   | 2.2                             | 2.3  | 2.3  | 2.4  | 2.5  | 2.6  |
|  | 950   | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.4  |
| 3001 (915)<br><br>to<br><br>4000 (1219)  | 975   | 2.0                             | 2.0  | 2.1  | 2.2  | 2.3  | 2.3  |
|  | 1000  | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|  | 775   | 2.9                             | 3.0  | 3.1  | 3.1  | 3.1  | 3.1  |
|  | 800   | 2.7                             | 2.8  | 2.9  | 3.0  | 3.1  | 3.1  |
|  | 825   | 2.6                             | 2.6  | 2.7  | 2.8  | 2.9  | 3.0  |
|  | 850   | 2.4                             | 2.5  | 2.6  | 2.7  | 2.7  | 2.8  |
|  | 875   | 2.3                             | 2.3  | 2.4  | 2.5  | 2.6  | 2.7  |
|  | 900   | 2.1                             | 2.2  | 2.3  | 2.4  | 2.4  | 2.5  |
| 4001 (1220)<br><br>to<br><br>5000 (1524)   | 925   | 2.0                             | 2.1  | 2.2  | 2.2  | 2.3  | 2.4  |
|  | 950   | 1.9                             | 2.0  | 2.1  | 2.1  | 2.2  | 2.3  |
|  | 975   | 1.8                             | 1.9  | 2.0  | 2.0  | 2.1  | 2.1  |
|  | 1000  | 1.8                             | 1.8  | 1.9  | 1.9  | 2.0  | 2.0  |
|  | 750   | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
|  | 775   | 2.7                             | 2.8  | 2.9  | 2.9  | 3.0  | 3.1  |
|  | 800   | 2.5                             | 2.6  | 2.7  | 2.8  | 2.8  | 2.9  |
|  | 825   | 2.4                             | 2.4  | 2.5  | 2.6  | 2.7  | 2.8  |
| 5001 (1525)<br><br>to<br><br>5400 (1646)   | 850   | 2.2                             | 2.3  | 2.4  | 2.4  | 2.5  | 2.6  |
|  | 875   | 2.1                             | 2.2  | 2.2  | 2.3  | 2.4  | 2.5  |
|  | 900   | 2.0                             | 2.0  | 2.1  | 2.2  | 2.3  | 2.3  |
|  | 925   | 1.9                             | 1.9  | 2.0  | 2.1  | 2.1  | 2.2  |
|  | 950   | 1.8                             | 1.8  | 1.9  | 2.0  | 2.0  | 2.1  |
|  | 975   | 1.8                             | 1.8  | 1.8  | 1.9  | 1.9  | 2.0  |
|  | 1000  | 1.8                             | 1.8  | 1.8  | 1.8  | 1.8  | 1.9  |
|  | 725   | 2.8                             | 2.9  | 3.0  | 3.1  | 3.1  | 3.1  |
| 5401 (1646)<br><br>to<br><br>5800 (1768)   | 750   | 2.7                             | 2.8  | 2.8  | 2.9  | 3.0  | 3.1  |
|  | 775   | 2.5                             | 2.6  | 2.7  | 2.7  | 2.8  | 2.9  |
|  | 800   | 2.3                             | 2.4  | 2.5  | 2.6  | 2.7  | 2.7  |
|  | 825   | 2.2                             | 2.3  | 2.3  | 2.4  | 2.5  | 2.6  |
|  | 850   | 2.1                             | 2.1  | 2.2  | 2.3  | 2.4  | 2.4  |
|  | 875   | 2.0                             | 2.0  | 2.1  | 2.2  | 2.2  | 2.3  |
|  | 900   | 1.8                             | 1.9  | 2.0  | 2.0  | 2.1  | 2.2  |
|  | 925   | 1.8                             | 1.8  | 1.9  | 1.9  | 2.0  | 2.0  |
| 5801 (1769)<br><br>to<br><br>6200 (1889)   | 950   | 1.8                             | 1.8  | 1.8  | 1.8  | 1.9  | 1.9  |
|  | 975   | 1.8                             | 1.8  | 1.8  | 1.8  | 1.8  | 1.8  |
| 6201 (1890)<br><br>to<br><br>6600 (2011)   | 1000  | 1.8                             | 1.8  | 1.8  | 1.8  | 1.8  | 1.8  |
|  | 1025  | 1.8                             | 1.8  | 1.8  | 1.8  | 1.8  | 1.8  |

## SERVICE AND MAINTENANCE PROCEDURES

Untrained personnel can perform basic maintenance functions such as cleaning and replacing air filters. All other operations must be performed by trained service personnel. A qualified service person should inspect the furnace once a year.

## General

These instructions are written as if the furnace is installed in an upflow application. An upflow furnace application is where the blower is located below the combustion and controls section of the furnace, and conditioned air is discharged upward. Since this furnace can be installed in any of the 3 positions (see Fig. 4), you must revise your orientation to component location accordingly.

### WARNING

#### FIRE, INJURY OR DEATH HAZARD

Failure to follow this warning could result in personal injury, death and/or property damage.

The ability to properly perform maintenance on this equipment requires certain knowledge, mechanical skills, tools, and equipment. If you do not possess these, do not attempt to perform any service and maintenance on this equipment other than those procedures recommended in the Owner's Manual.

### CAUTION

#### ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental pollution.

Remove and recycle all components or materials (i.e. oil, refrigerant, control board, etc.) before unit final disposal.

### WARNING

#### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing. Always reinstall access doors after completing service and maintenance.

### CAUTION

#### ELECTRICAL OPERATION HAZARD

Failure to follow this caution may result in improper furnace operation or failure of furnace.

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

### CAUTION

#### ENVIRONMENTAL HAZARD

Failure to follow this caution may result in environmental pollution.

Remove and recycle all components or materials (i.e. oil, refrigerant, control board, etc.) before unit final disposal.

## Electrical Controls and Wiring



### WARNING

#### ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death. There may be more than one electrical supply to the furnace. Check accessories and cooling unit for additional electrical supplies that must be shut off during furnace servicing. Lock out and tag switch with a suitable warning label.

The electrical ground and polarity for 115-v wiring must be properly maintained. See field wiring information, see Fig. 40, and for furnace wiring information, see Fig. 76.

**NOTE:** If the polarity is not correct, the STATUS LED on the control will flash rapidly and prevent the furnace from heating. The control system also requires an earth ground for proper operation of the control and flame-sensing electrode.

The 24-v circuit contains an automotive-type, 3-amp. fuse located on the control, see Fig. 76. Any shorts of the 24-v wiring during installation, service, or maintenance will cause this fuse to blow. If fuse replacement is required, use ONLY a 3-amp. fuse. The control LED will display a 24 flash code when fuse needs to be replaced.

Proper instrumentation is required to service electrical controls. The control in this furnace is equipped with a Status Code LED (Light-Emitting Diode) to aid in installation, servicing, and troubleshooting. The furnace control LED is either ON continuously, rapid flashing or displaying a code composed of 2 digits. The first digit

is the number of short flashes, the second digit is the number of long flashes.

For an explanation of status codes, refer to service booklet located on blower access door (see Fig. 70), or the Service guide at the end of this manual.

The stored status code will not be erased from the control memory, if 115- or 24-v power is interrupted. The control will store up to the last 7 Status Codes in order of occurrence.

- To retrieve status code, proceed with the following:

**NOTE:** NO thermostat signal may be present at control, and all blower-OFF delays must be completed.

- Leave 115-v power to furnace turned on.
- Look into blower access door sight glass for current LED status.
- Remove blower door.

**NOTE:** The Status Codes cannot be retrieved by disconnecting the limit switch. To retrieve Status Codes, follow the procedure below:

- Turn Setup Switch, SW1-1 "ON."
- Manually close blower door switch.
- Control will flash up to 7 Status Codes.
- The last Status Code, or 8<sup>th</sup> Code, will be status code 11.
- Turn SW1-1 "OFF."
- Amber LED will be ON continuous which indicated proper operation.
- Release blower door switch, install blower door and refer to the SERVICE label on the blower door for more information.

| SERVICE   |  |
|---|--|
| <p><b>LED CODES - STATUS</b></p> <p><b>CONTINUOUS OFF</b> - Check for 115VAC at L1 and N, and 24VAC at SEC-1 and SEC-2.</p> <p><b>CONTINUOUS ON</b> - Control has 24VAC power.</p> <p><b>RAPID FLASHING</b> - Line voltage (115VAC) polarity reversed.</p> <p>EACH OF THE FOLLOWING STATUS CODES IS A TWO DIGIT NUMBER WITH THE FIRST DIGIT DETERMINED BY THE NUMBER OF SHORT FLASHES AND THE SECOND DIGIT BY THE NUMBER OF LONG FLASHES.</p>   |  |
| LED ACTIVITY  |  |
| <p>11 NO PREVIOUS CODE - Stored status codes are erased automatically after 72 hours or as specified above.</p> <p>12 BLOWER ON AFTER POWER UP (115VAC or 24VAC) - Blower runs for 90 seconds, if unit is powered up during a call for heat (R-W closed) or (R-W opens) during a blower on-delay period. If BTS is also open, after power up with call for heat, the inducer will operate as well during the 90's.</p> <p>13 LIMIT CIRCUIT LOCKOUT - Lockout occurs if a limit is open. Control will auto-reset after three hours. Check for:<br/>- Loose blower wheel - Restricted vent - Proper vent sizing<br/>- Dirty filter or restricted duct system - Defective switch or connections</p> <p>14 IGNITION LOCKOUT - Control will auto-reset after three hours. Refer to status code #34.</p> <p>15 BLOWER MOTOR LOCKOUT - Indicates Blower failed to reach 250 RPM or the blower failed to communicate within 30 seconds after being turned ON in two successive heating cycles. Control will auto reset after 3 hours. Refer to status code #41.</p> <p>21 GAS HEATING LOCKOUT - Control will NOT auto-reset. Check for:<br/>- Mis-wired gas valve<br/>- Defective control (valve relay).<br/>- 24VAC sensed at gas valve when should not be present.</p> <p>22 ABNORMAL FLAME - PROVING SIGNAL - Flame is provided while gas valve is de-energized. Inducer will run until fault is cleared. Check for: - Leaky gas valve - Stuck-open gas valve.</p> <p>23 PRESSURE &gt; 0.15" w.c. AT START-UP. Check for:<br/>- Obstruction in pressure tubing or Transducer vent holes.<br/>- Defective Transducer<br/>- Transducer wiring.</p> <p>24 SECONDARY VOLTAGE FUSE IS OPEN Check for: -Short circuit in secondary voltage (24VAC) wiring.</p> <p>25 INVALID MODEL SELECTION OR SETUP ERROR - Indicated either the model plug is missing or incorrect. If code flashes 4 times on power-up control is defaulting to model selection stored in memory.</p> <p>26 BURNER THERMAL SWITCH (BTS) open - If switch is open</p> | <p>If status code recall is needed disconnect the "R" thermostat lead, reset power, and put setup switch "SW1-1" in the ON position. To clear the status code history put setup switch "SW1-1" in the ON position and jumper thermostat terminals "R", "W/W1", and "Y/Y2" simultaneously until #11 is flashed.<br/>NOTE: W2 has no function on this model, connect W from thermostat to W/W1 on control for Heating Operation</p> <p>during call for heat (W), then a permanent lockout will occur. Cycle power to reset lockout.<br/>Check for: -Blocked burner inlet -Blocked burner mesh- Poor inducer flow<br/>-Excess wind -Power loss during heating causes BTS to open.</p> <p>31 PRESSURE TRANSDUCER INPUT DOES NOT SENSE TARGET PRESSURE OR PRESSURE IS OUT OF RANGE -Check for:<br/>- Excessive wind - Proper vent sizing<br/>- Restricted vent - Defective inducer motor<br/>- Inadequate combustion air supply - Defective pressure transducer<br/>- Low inlet gas pressure (if LGPS used) - Low inducer voltage (115 VAC)<br/>- Disconnected or obstructed pressure tubing</p> <p>34 IGNITION PROVING FAILURE- Control will try ignition four times before lockout #14 occurs. If flame signal lost during blower on-delay period, blower will come on for the selected blower off-delay. Check for:<br/>- Oxide buildup on flame sensor (clean with fine steel wool)<br/>- Proper flame sense microamps (.5 microamps D.C., min., 4.0 - 6.0 nominal)<br/>- Manual valve shut-off - Low inlet gas pressure - Control ground continuity<br/>- Gas valve defective or turned off - Flame sensor must not be grounded or touching casing.<br/>- Inadequate flame carryover or rough ignition<br/>- Green/Yellow wire MUST be connected to furnace sheet metal</p> <p>41 BLOWER MOTOR FAULT - Indicates the blower fails to reach 250 RPM or fails to communicate within 30 seconds after being turned ON, or the blower RPM falls below 250 RPM for more than 10 seconds or fails to communicate for more than 20 seconds during steady-state operation.</p> <p>42 INDUCER MOTOR FAULT the RPM pulses are not detected from the inducer motor within 20 seconds after a heat request, the inducer is outside of its valid range of operation, or the inducer RPM signal was lost for 5 seconds during operation. Inducer exceeds model specific RPM limit.<br/>Check for: - Proper vent sizing - Restricted combustion air supply<br/>- Failed inducer motor - Improper or loose motor wiring or bad connection.</p> <p>45 CONTROL CIRCUITRY LOCKOUT Auto-reset after one hour lockout due to: - Gas valve relay stuck open - Flame sense circuit failure<br/>- Software check error<br/>Reset power to clear lockout. Replace control if status code repeats.</p> |
| LED CODES - STATUS  |  |
| CODE  | DESCRIPTION  |
| 11  | Indicates the blower motor tested OK. Visual check of inducer motor and hot surface igniter required.  |
| 25  | SETUP ERROR - Reference code 25 above.   |
| 41  | BLOWER MOTOR FAULT - Indicates blower motor failed test. Check blower, wiring, and furnace control.  |
| 42  | INDUCER MOTOR FAULT - Indicates inducer motor failed test. Check inducer, wiring, furnace control and tubing for poor connections.   |
| To repeat component test turn setup switch "SW1-6" OFF and then back ON. After component test is completed put setup switch "SW1-6" in the OFF position and reconnect the "R" thermostat lead.  |  |
| COMPONENT TEST  |  |
| To initiate the component test sequence, shut OFF the room thermostat or disconnect the "R" thermostat lead. Reset power and then put setup switch "SW1-6" in the ON position to start the component test sequence. Once initiated the furnace control will turn the inducer ON at 25% duty cycle for 15 seconds then leave ON. The inducer motor will run for the entire test. The hot surface igniter and blower motor will be turned ON for 15 seconds each. When the component test is completed one or more of the above codes will flash.   |  |

Fig. 70 – Service Label Information

A200311

**Component Self-Test**

To initiate the component test sequence, shut OFF the room thermostat or disconnect the “R” thermostat lead. Reset power and then put setup switch “SW1-6” in the ON position to start the component test sequence. Once initiated the furnace control will turn the inducer ON at 25% duty cycle for 15 seconds then leave ON. The inducer motor will run for the entire test. The hot surface igniter and blower motor will be turned ON for 15 seconds each.

**NOTE:** The EAC terminals are energized when the blower is operating. When the component test is completed one or more of the above codes will flash. Turn setup switch SW1-6 OFF.

**Troubleshooting**

Refer to the service booklet, see [Fig. 70](#)

**Care and Maintenance** **WARNING****FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury, death and/or property damage.

Never store flammable or combustible materials on, near, or in contact with the furnace, such as:

1. Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners, or other cleaning tools.
2. Soap powders, bleaches, waxes or other cleaning compounds, plastic or plastic containers, gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids, or other volatile fluids.
3. Paint thinners and other painting compounds, paper bags, or other paper products. Exposure to these materials could lead to corrosion of the heat exchangers.

For continuing high performance and to minimize possible furnace failure, periodic maintenance must be performed on this furnace. Consult your local dealer and Owner's Manual about proper frequency of maintenance and the availability of a maintenance contract.

 **WARNING****ELECTRICAL SHOCK AND FIRE HAZARD**

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

 **WARNING****CARBON MONOXIDE POISONING AND FIRE HAZARD**

Failure to follow this warning could result in personal injury, death and/or property damage.

Never operate furnace without a filter or filtration device installed. Never operate a furnace with filter or filtration device access doors removed.

 **CAUTION****CUT HAZARD**

Failure to follow this caution may result in personal injury.

Sheet metal parts may have sharp edges or burrs. Use care and wear appropriate protective clothing, safety glasses and gloves when handling parts, and servicing furnaces.

The minimum maintenance on this furnace is as follows:

1. Check and clean air filter each month or more frequently if required. Replace if torn.
2. Check blower motor and wheel for cleanliness each heating and cooling season. Clean as necessary.
3. Check electrical connections for tightness and controls for proper operation each heating season. Service as necessary.
4. Inspect the vent pipe/vent system before each heating season for water leakage, sagging pipes or broken fittings. Have vent pipes/vent system serviced by a qualified service agency.
5. Inspect any accessories attached to the furnace such as a humidifier or electronic air cleaner. Perform any service or maintenance to the accessories as recommended in the accessory instructions.

**Cleaning and/or Replacing Air Filter**

The air filter type may vary depending on the application or orientation. The filter is external to the furnace casing. There are no provisions for an internal filter with this furnace. See “Filter Arrangement” under the “Installation” section of this manual.

**NOTE:** If the filter has an airflow direction arrow, the arrow must point toward the blower.

To clean or replace filters, proceed as follows:

 **WARNING****ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD**

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing. Always reinstall access doors after completing service and maintenance.

1. Turn off electrical supply to furnace.
2. Remove filter cabinet door.
3. Slide filter out of cabinet.
4. If equipped with permanent, washable filter, clean filter by spraying cold tap water through filter in opposite direction of airflow. Rinse filter and let dry. Oiling or coating of the filter is not recommended.
5. If equipped with factory specified disposable media filter, replace only with a factory specified media filter of the same size.
6. Slide filter into cabinet.
7. Replace filter cabinet door.
8. Turn on electrical supply to furnace.

**Blower Motor and Wheel Maintenance** **WARNING****ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could result in personal injury or death. Blower access door switch opens 115-v power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

**NOTE:** The blower wheel should not be dropped or bent as balance will be affected. The following steps should be performed by a qualified service agency.

To ensure long life and high efficiency, clean accumulated dirt and grease from blower wheel and motor annually.

The inducer and blower motors are pre-lubricated and require no additional lubrication.

Clean blower motor and wheel as follows:

1. Turn off electrical supply to furnace.
2. Remove blower door.
3. All factory wires can be left connected, but field thermostat connections may need to be disconnected depending on their length and routing.
4. Remove two screws holding blower assembly to blower deck and slide blower assembly out of furnace.

**NOTE:** On 100C21--22 size, the top screw securing blower to shelf must be removed in order to remove the blower, see [Fig. 72](#).

5. Clean blower wheel and motor using a vacuum with soft brush attachment. Blower wheel blades may be cleaned with a small paint or flux brush. Do not remove or disturb balance weights (clips) on blower wheel blades.
6. Vacuum any loose dust from blower housing, wheel and motor.
7. If a greasy residue is present on blower wheel, remove wheel from the blower housing and wash it with an appropriate degreaser. To remove wheel:

**NOTE:** Before disassembly, mark blower motor, and blower housing so motor and each arm is positioned at the same location during reassembly.

- a. Disconnect ground wire attached to blower housing.
- b. Remove screws securing cutoff plate and remove cutoff plate from housing.
- c. Loosen set screw holding blower wheel on motor shaft (160+/-20 in.-lb. when reassembling).
- d. Remove bolts holding motor to blower housing and slide motor out of wheel (40+/-10 in.-lb. when reassembling).
- e. Remove blower wheel from housing.
- f. Clean wheel and housing.
8. Reassemble motor and blower by reversing steps 7d finishing with 7a. Be sure to reattach ground wire to the blower housing.

**NOTE:** On 100C21--22, ensure that the the blower wrapper sits on top of the two tabs on blower sidewalls, see [Fig 72](#).

9. Verify that blower wheel is centered in blower housing and set screw contacts the flat portion of the motor shaft. Loosen set screw on blower wheel and reposition if necessary.
10. Spin the blower wheel by hand to verify that the wheel does not rub on the housing.
11. Reinstall blower assembly in furnace.
12. Reinstall two screws securing blower assembly to blower deck.

 **CAUTION****UNIT DAMAGE HAZARD**

Failure to follow this caution may result in shortened heat exchanger life.

Heating fan speed(s) **MUST** be adjusted to provide proper air temperature rise as specified on the rating plate. Recommended operation is at the midpoint of the rise range or slightly above. Refer to "SET TEMPERATURE RISE" under START-UP, ADJUSTMENT, and SAFETY CHECK.

**NOTE:** Refer to motor speed lead relocation if leads were not identified before disconnection, see [Table 11](#).

13. Refer to furnace wiring diagram, and connect thermostat leads if previously disconnected.
14. To check blower for proper rotation:
  - a. Turn on electrical supply.

 **WARNING****ELECTRICAL SHOCK HAZARD**

Failure to follow this warning could result in personal injury, or death. Blower access door switch opens 115-v power to furnace control. No component operation can occur unless switch is closed. Exercise caution to avoid electrical shock from exposed electrical components when manually closing this switch for service purposes.

- b. Manually close blower access door switch.
- c. Verify blower is rotating in the correct direction.
15. If furnace is operating properly, **RELEASE BLOWER ACCESS DOOR SWITCH**. Remove any jumpers or reconnect any disconnected thermostat leads.
16. Replace blower access door.
17. Cycle furnace through one complete heating and cooling cycle. Verify the furnace temperature rise as shown in "Adjustments" Section. Adjust temperature rise as shown in "Adjustments" Section. If outdoor temperature is below 70°F, (21°C) turn off circuit breaker to outdoor unit before running furnace in the cooling cycle. Turn outdoor circuit breaker on after completing cooling cycle.

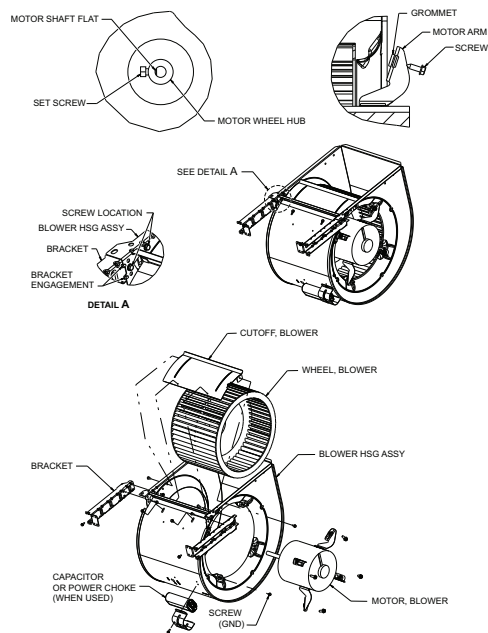


Fig. 71 – Blower Assembly

A11584

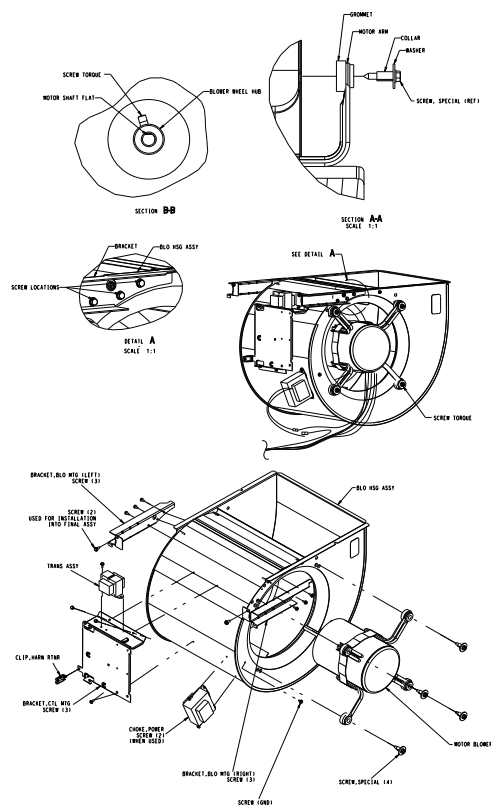


Fig. 72 – Blower Assembly on 100C21--22

A200419

## ! WARNING

### ELECTRICAL OPERATION HAZARD

Failure to follow this warning could result in personal injury or death. Blower door switch opens 115-v power to control. No component operation can occur unless switch is closed. Caution must be taken when manually closing this switch for service purposes.

## Cleaning Flame Sensor

The following items must be performed by a qualified service technician. If the Flame Sensor develops an accumulation of light dirt or dust, it may be cleaned by using the following procedure:

## ! WARNING

### ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

## ! WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

When servicing the flame sensor, only use the factory-provided 1/4-in. length screws. Use of alternate screws will damage unit components.

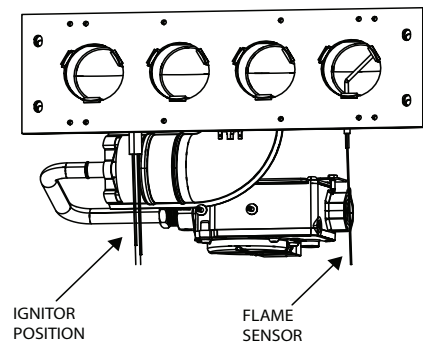


Fig. 73 – Igniter Position - Back View

A190266

1. Disconnect power at external disconnect, fuse or circuit breaker.
2. Turn off gas at external shut-off or gas meter.
3. Remove control door and set aside.
4. Turn electric switch on gas valve to OFF.
5. Disconnect Flame Sensor wire from Flame Sensor.
6. Remove the flame sensor burner assembly.
  - a. Using a 1/4-in. driver, remove the screw securing the flame sensor to the burner assembly, see Fig. 73. Retain factory-provided 1/4-in. screws.
  - b. Carefully withdraw the flame sensor from the burner assembly without striking the sensor on surrounding parts.
  - c. Inspect flame sensor for signs of damage or failure.
  - d. Clean the flame sensor with fine steel wool (0000 grade). Do not use sand paper or emery cloth.
  - e. If replacement is required, remove the screw that secures the flame sensor on the bracket and remove the flame sensor.
7. To replace flame sensor and bracket assembly, reverse items 6a through 6d.
8. Reconnect flame sensor wire to the wire harness, dressing the sensor wires to ensure there is no tension on the flame sensor itself, see Fig. 73.

## ! WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

9. Turn gas on at electric switch on gas valve and at external shut-off or meter
10. Turn power on at external disconnect, fuse or circuit breaker.
11. Run the furnace through two complete heating cycles to check for proper operation
12. Install control door when complete.

### Servicing Hot Surface Igniter

## ! WARNING

### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

When servicing the flame sensor, only use the factory-provided 1/4-in. length screws. Use of alternate screws will damage unit components.

The igniter does **NOT** require annual inspection. Check igniter resistance before removal, see [Fig. 73](#).

1. Turn off gas and electrical supplies to furnace.
2. Remove control door.
3. Disconnect igniter wire connection.
4. Check igniter resistance. Igniter resistance is affected by temperature. Only check resistance when the igniter is at room temperature.
  - a. Using an ohm meter, check resistance across both igniter leads in connector.
  - b. Cold reading should be between 40 ohms and 70 ohms.
5. Remove igniter assembly.
  - a. Using a 1/4-in. driver, remove the two screws securing the igniter mounting bracket to the burner assembly, see [Fig. 73](#). Retain 1/4-in. length screws.
  - b. Carefully withdraw the igniter and bracket assembly through the burner assembly without striking the igniter on surrounding parts.
  - c. Inspect igniter for signs of damage or failure.
  - d. Inspect the igniter gasket. If damaged or missing, replace gasket before reinstalling.
6. To replace igniter and bracket assembly, reverse items 5a through 5d.
7. Reconnect igniter harness to the igniter, dressing the igniter wires to ensure there is no tension on the igniter itself, see [Fig. 73](#).
8. Turn on gas and electrical supplies to furnace.
9. Verify igniter operation by initiating control board self-test feature. Run the furnace through two complete heating cycles to check for proper operation.
10. Replace control door.

### Flushing Collector Box and Drainage System

## ! WARNING

### ELECTRICAL SHOCK AND FIRE HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

1. Turn off gas and electrical supplies to furnace.
2. Remove control door.
3. Disconnect pressure transducer tube from pressure transducer port.

**NOTE:** Ensure the pressure transducer tube disconnected from the pressure transducer is higher than the collector box opening or water will flow out of tube.

4. Remove the collector box plug from the top port on the upper corner of the collector box, see [Fig. 66](#).
5. Attach a funnel with a flexible tube to port on the collector box.
6. Flush inside of collector box with water until discharge water from condensate trap is clean and runs freely.
7. Repeat steps 4 thru 6 with middle plug on upper corner of collector box.
8. Remove the pressure transducer tube from the collector box.

**NOTE:** Do **NOT** blow into tube with tube connected to the pressure transducer.

9. Clean pressure transducer port on collect box with a small wire. Shake any water out of pressure transducer tube.
10. Reconnect tube to pressure transducer and pressure transducer port.
11. Remove the relief tube from the port on the collector box and the trap.
12. Clean the relief port on collector box and the trap with a small wire. Shake any water out of the tube.
13. Reconnect relief tube to trap and collector box ports.

### Cleaning Condensate Drain and Trap

**NOTE:** If the condensate trap is removed, a new gasket between the trap and collector box is required. Verify a condensate trap gasket is included in the service kit or obtain one from your local distributor.

1. Reverse installation instructions found in Condensate Trap Section to disassemble the condensate trap.
2. Use water or a slight brush to clean components. Do **NOT** cut into glued PVC sections to service the trap.
3. Ensure all instructions, cautions, and warning from Condensate Trap Section are followed when reassembling condensate trap.

### Checking Heat Tape Operation (If Applicable)

In applications where the ambient temperature around the furnace is 32°F or lower, freeze protection measures are required. If this application is one where heat tape has been applied, check to ensure it will operate when low temperatures are present.

**NOTE:** The Heat Tape, when used, should be wrapped around the condensate drain trap. There is no need to use heat tape within the furnace casing. Most heat tapes are temperature activated, and it is not practical to verify the actual heating of the tape. Check the following:

1. Check for signs of physical damage to heat tape such as nicks, cuts, abrasions, gnawing by animals, etc.
2. Check for discolored heat tape insulation. If any damage or discolored insulation is evident, replace heat tape.
3. Check that heat tape power supply circuit is on.

## Cleaning Heat Exchangers

The following items must be performed by a qualified service technician.

### Primary Heat Exchangers

**IMPORTANT:** It is not recommended to clean the heat exchanger as part of annual maintenance.

If there is reason to believe that primary heat exchanger is obstructed and cleaning is needed, remove burner assembly to access heat exchanger and follow steps below.

Once burner assembly is removed, gasket of the burner box **MUST** be replaced with a new gasket.

**NOTE:** If the heat exchangers get a heavy accumulation of soot and carbon, both the primary and secondary heat exchangers should be replaced rather than trying to clean them thoroughly due to their intricate design. A build-up of soot and carbon indicates that a problem exists which needs to be corrected, such as improper adjustment of manifold pressure, insufficient or poor quality combustion air, improper vent termination, incorrect size or damaged manifold orifice(s), improper gas, or a restricted heat exchanger (primary or secondary). Action must be taken to correct the problem.

**NOTE:** Proper use of Personal Protective Equipment (PPE) must be followed, including safety glasses, gloves, and dust mask when removing and reinstalling the heat exchanger insulation assembly.

1. Turn off gas and electrical supplies to furnace.

### WARNING

#### ELECTRICAL SHOCK, FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury or death, or property damage.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position and install a lockout tag. There may be more than one disconnect switch. Lock out and tag switch with a suitable warning label. Verify proper operation after servicing. Always reinstall access doors after completing service and maintenance.

### WARNING

#### ELECTRICAL SHOCK AND FIRE HAZARD


Failure to follow this warning could result in personal injury, death, and/or property damage.

Turn off the gas and electrical supplies to the furnace and install lockout tag before performing any maintenance or service. Follow the operating instructions on the label attached to the furnace.

2. Remove control door.
3. Disconnect wires or connectors to burner thermal switch, gas valve, igniter, and flame sensor.
4. Using backup wrench, disconnect gas supply pipe from furnace gas control valve.
5. Remove screws attaching burner assembly to cell panel.

**NOTE:** Burner, manifold, gas valve, and orifice should be removed as one assembly.

6. Carefully remove burner insulation assembly, Insulation **MUST** be replaced before reassembly.
7. Clean heat exchanger openings with a vacuum and a soft brush, see [Fig. 74](#).

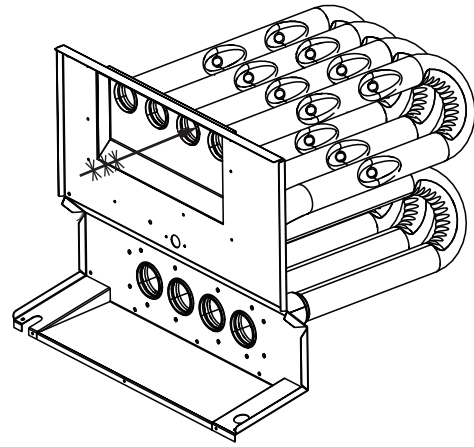

**Fig. 74 – Cleaning Heat Exchanger Cell**

A190291

**NOTE:** After cleaning, inspect the heat exchangers to ensure they are free of all foreign objects that may restrict flow of combustion products.

8. Reverse items 6 through 1. for reassembly. Torque burner screws to 45 inch-pound to ensure a tight burner seal.
9. Refer to furnace wiring diagram and reconnect wires to burner thermal switch, gas valve, igniter, and flame sensor.
10. Turn on gas and electrical supplies to furnace.
11. Check furnace operation through two complete heat operating cycles.
12. Check for gas leaks.

### WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

### WARNING

#### FIRE OR EXPLOSION HAZARD

Failure to follow this warning could result in personal injury, death, and/or property damage.

Never purge a gas line into a combustion chamber. Never test for gas leaks with an open flame. Use a commercially available soap solution made specifically for the detection of leaks to check all connections. A fire or explosion may result causing property damage, personal injury or loss of life.

13. Replace main furnace door.

### Secondary Heat Exchangers

The condensing side (inside) of the secondary heat exchanger **CANNOT** be serviced or inspected without complete removal of the heat exchanger assembly. Detailed information on heat exchanger removal can be obtained from your Distributor.

## WINTERIZATION

### CAUTION

#### UNIT AND PROPERTY DAMAGE HAZARD

Failure to follow this caution may result in unit component or property damage.

If the furnace is installed in an unconditioned space where the ambient temperatures may be 32° F (0° C) or lower, freeze protection measures must be taken to prevent minor property or product damage.

Since the furnace uses a condensing heat exchanger, some water will accumulate in the unit as a result of the heat transfer process. Therefore, once it has been operated, it cannot be turned off and left off for an extended period of time when temperatures will reach 32°F (0°C) or lower unless winterized. Follow these procedures to winterize your furnace:

### CAUTION

#### UNIT COMPONENT DAMAGE HAZARD

Failure to follow this caution may result in damage to the furnace and other property damage.

Do not use ethylene glycol (automotive antifreeze coolant or equivalent). Failure of plastic components may occur.

1. Obtain propylene glycol (RV/swimming pool antifreeze or equivalent).
2. Turn off gas and electrical supplies to your furnace.
3. Remove furnace control door.
4. Remove the top unused rubber plug from the port on the collector box opposite the condensate trap.
5. Connect a field supplied 3/8-in. (9.5-mm) ID tube to the open port on the collector box.
6. Insert a field supplied funnel into the tube.
7. Pour one quart (liter) of anti-freeze solution into the funnel/tube. Antifreeze should run through the inducer housing, overflow condensate trap and flow to an open drain.
8. Replace the rubber plug in the port on the collector box.
9. Remove the middle unused rubber plug from the port on the collector box opposite the condensate trap.
10. Repeat Steps 5 through 8.
11. If a condensate pump is used, check with pump manufacturer to verify pump is safe for use with antifreeze used. Allow pump to start and pump anti-freeze to open drain.
12. Replace main door.
13. When furnace is re-started, flush condensate pump with clear water to check for proper operation before re-starting furnace.
14. Propylene glycol need not be removed before re-starting furnace.

## SEQUENCE OF OPERATION

**NOTE:** Furnace control must be grounded for proper operation of furnace control and flame sensing electrode. Control is grounded through green/yellow wire routed to gas valve and burner box screw. Using the schematic diagram in [Fig. 76](#), follow the sequence of operation through the different modes. Read and follow the wiring diagram very carefully.

**NOTE:** If a power interruption occurs during a call for heat W/W1, the control will start a 90-second blower-only ON period two seconds after power is restored, if the thermostat is still calling for gas heating. The LED light will flash 12 during the 90-second period, after which the LED will be ON continuous, as long as no faults are detected. After the

90-second blower-on period, the furnace will respond to the thermostat normally.

**NOTE:** If BTS happens to be open as well, the inducer will operate during the 90s. If the BTS does not reset during this time, a permanent lockout will result and power must be cycled to reset. Check BTS and fault code 26 for more information.

The blower door must be installed for power to be conducted through the blower door interlock switch ILK to the furnace control CPU, transformer TRAN, inducer motor IDM, blower motor BLWM, hot-surface igniter HSI, and gas valve GV.

## Sequence of Operation - Heating

### 1. Call for Heat:

The wall thermostat “calls for heat”, closing the R-W/W1 circuit. The furnace control performs a self-check, verifies the transducer reads no pressure present, and starts the inducer motor IDM ramp to prepurge.

a. **Inducer Prepurge Period:** The furnace control CPU ramps up the inducer motor IDM to prepurge pressure then the furnace control CPU begins a 15-second prepurge period. If the transducer fails to reach target pressure the inducer motor IDM will remain running until target pressure is maintained.

b. **Ignitor Warm-Up:** At the end of the prepurge period, the Hot-Surface Ignitor HSI is energized for a 17-second igniter warm-up period. Inducer maintains pressure during igniter warm-up or 5 minutes has elapsed. Retry after 15 minutes.

c. **Trial for Ignition:** When the igniter warm-up period is completed the main gas valve relay contact GVR closes to energize the gas valve solenoid GV. The gas valve solenoid GV permits gas flow to the burners where it is ignited by the HSI. Five seconds after the GVR closes, a 2-second flame proving period begins. The HSI igniter will remain energized until the flame is sensed or until the 2-second flame proving period begins.

d. **Flame Proving:** When the burner flame is proved at the flame sensor electrode FSE, the inducer motor IDM will increase speed (after a short delay of 14 seconds on some modes) to a higher RUN pressure. The control will maintain this pressure once reached, and the furnace control CPU will begin the blower-ON delay period while continuing to hold the gas valve GV open. If the burner flame is not proved within the 2-second flame proving period, the control CPU will open the gas valve relay GVR, de-energizing the gas valve solenoid GV. The control CPU will repeat the ignition sequence for up to three more Trials-For-Ignition before going to an Ignition-Lockout. Lockout will be reset automatically after three hours, or by momentarily interrupting 115 vac power to the furnace, or by interrupting 24 vac power at SEC1 or SEC2 to the furnace control CPU (not at W, G, R, etc.). If flame is proved when flame should not be present, the furnace control CPU will lock out of Heating mode and operate the inducer motor IDM until flame is no longer proved.

e. **Blower-On-Delay:** If the burner flame is proven a 25-second blower-ON delay begins from when the gas valve GV is opened. The blower motor BLWM is turned ON at heat airflow. Simultaneously, the humidifier terminal HUM and electronic air cleaner terminal EAC-1 are energized and remain energized throughout the heating cycle.

f. **Blower-Off-Delay:** When the thermostat is satisfied, the R to W/W1 circuit is opened, de-energizing the gas valve GV, stopping gas flow to the burners, and de-energizing the humidifier terminal HUM. The inducer motor IDM will remain energized for a 15-second post-purge period. The blower motor BLWM and air cleaner terminal EAC-1 will remain energized at heat airflow for 90, 120, 150, or 180 seconds (depending on

selection at blower-OFF delay switches). The furnace control CPU is factory-set for a 120-second blower-OFF delay.

## 2. Cooling mode

The thermostat “calls for cooling”.

### a. Single-Speed Cooling-

See Fig. 42 and thermostat wiring for connections

The thermostat closes the R-to-G-and-Y circuits. The R-to-Y circuit starts the outdoor unit, and the R-to-G-and-Y/Y2 circuits start the furnace blower motor BLWM on cooling airflow.

Cooling airflow is based on the A/C selection shown in Fig. 65. The electronic air cleaner terminal EAC-1 is energized with 115 vac when the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y circuits are opened. The outdoor unit will stop, and the furnace blower motor BLWM will continue operating at cooling airflow for an additional 90 sec. Jumper Y/Y2 to DHUM to reduce the cooling off-delay to 5 sec. See Fig. 42.

### b. Single-Stage Thermostat and Two-Speed Cooling (Adaptive Mode) -

See Fig. 42 and thermostat wiring for connections

This furnace can operate a two-speed cooling unit with a single-stage thermostat because the furnace control CPU includes a programmed adaptive sequence of controlled operation, which selects low-cooling or high-cooling operation. This selection is based upon the stored history of the length of previous cooling period of the single-stage thermostat.

**NOTE:** The air conditioning relay disable jumper ACRDJ must be connected to enable the adaptive cooling mode in response to a call for cooling. See Fig. 42. When ACRDJ is in place the furnace control CPU can turn on the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling.

The furnace control CPU can start up the cooling unit in either low- or high-cooling. If starting up in low-cooling, the furnace control CPU determines the low-cooling on-time (from 0 to 20 minutes) which is permitted before switching to high-cooling. If the power is interrupted, the stored history is erased and the furnace control CPU will select low-cooling for up to 20 minutes and then energize the air conditioning relay ACR to energize the Y/Y2 terminal and switch the outdoor unit to high-cooling, as long as the thermostat continues to call for cooling. Subsequent selection is based on stored history of the thermostat cycle times.

The wall thermostat “calls for cooling”, closing the R-to-G-and-Y circuits. The R-to-Y1 circuit starts the outdoor unit on low-cooling speed, and the R-to-G-and-Y1 circuit starts the furnace blower motor BLWM at low-cooling airflow which is the true on-board CF selection as shown in Fig. 42.

If the furnace control CPU switches from low-cooling to high-cooling, the furnace control CPU will energize the air conditioning relay ACR. When the air conditioning relay ACR is energized the R-to-Y1-and-Y2 circuits switch the outdoor unit to high-cooling speed, and the R-to-G-and-Y1-and-Y/Y2 circuits transition the furnace blower motor BLWM to high-cooling airflow. High-cooling airflow is based on the A/C selection shown in Fig. 42.

**NOTE:** When transitioning from low-cooling to high-cooling the outdoor unit compressor will shut down for 1 minute while the furnace blower motor BLWM transitions to run at high-cooling airflow.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y circuit are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 sec. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 sec. See Fig. 42.

## c. Two-Stage Thermostat and Two-Speed Cooling

See Fig. 42 and thermostat wiring for connections

**NOTE:** The air conditioning relay disable jumper ACRDJ must be disconnected to allow thermostat control of the outdoor unit staging. See Fig. 42.

The thermostat closes the R-to-G-and-Y1 circuits for low-cooling or closes the R-to-G-and-Y1-and-Y2 circuits for high-cooling. The R-to-Y1 circuit starts the outdoor unit on low-cooling speed, and the R-to-G-and-Y1 circuit starts the furnace blower motor BLWM at low-cooling airflow which is the true on-board CF (continuous fan) selection as shown in Fig. 65. The R-to-Y1-and-Y2 circuits start the outdoor unit on high-cooling speed, and the R-to-G-and-Y/Y2 circuits start the furnace blower motor BLWM at high-cooling airflow. High-cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 65.

The electronic air cleaner terminal EAC-1 is energized with 115 vac whenever the blower motor BLWM is operating.

When the thermostat is satisfied, the R-to-G-and-Y1 or R-to-G-and-Y1-and-Y2 circuits are opened. The outdoor unit stops, and the furnace blower BLWM and electronic air cleaner terminal EAC-1 will remain energized for an additional 90 sec. Jumper Y1 to DHUM to reduce the cooling off-delay to 5 sec. See Fig. 42.

## 3. Dehumidification Mode

See Fig. 42 and thermostat wiring for connections.

The dehumidification output, D or DHUM on the Thermostat should be connected to the furnace control thermostat terminal DHUM. When there is a dehumidify demand, the DHUM input is activated, which means 24 vac signal is removed from the DHUM input terminal. In other words, the DHUM input logic is reversed. The DHUM input is turned ON when no dehumidify demand exists. Once 24 vac is detected by the furnace control on the DHUM input, the furnace control dehumidification capability is activated. If the DHUM input is removed for more than 48 hours, the furnace control reverts back to non-dehumidification mode.

The cooling operation described in item 3. above also applies to operation with a dehumidification thermostat. The exceptions are listed below:

- Low cooling**-When the R-to-G-and-Y1 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 86 percent of low-cooling airflow which is the true on-board CF (continuous fan) selection as shown in Fig. 65.
- High cooling**-When the R-to-G-and-Y/Y2 circuit is closed and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 86 percent of high-cooling airflow. High-cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 65.
- Cooling off-delay**-When the “call for cooling” is satisfied and there is a demand for dehumidification, the cooling blower-off delay is decreased from 90 sec to 5 sec.

## 4. Super-Dehumidify Mode

Super-Dehumidify mode can only be entered if the furnace control is in the Thermostat mode and there is a demand for dehumidification. The cooling operation described in item 3 above also applies to operation with a dehumidification thermostat. The exceptions are listed below:

- When the R-to-Y1 circuit is closed, R-to-G circuit is open, and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 65 percent of low-cooling airflow for a maximum of 10 minutes each cooling cycle or until the R-to-G circuit closes or the demand for dehumidification is satisfied. Low-cooling airflow is the true on-board CF (continuous fan) selection as shown in Fig. 65.

- b. When the R-to-Y/Y2 circuit is closed, R-to-G circuit is open, and there is a demand for dehumidification, the furnace blower motor BLWM will drop the blower airflow to 65 percent of high-cooling airflow for a maximum of 10 minutes each cooling cycle or until the R-to-G circuit closes or the demand for dehumidification is satisfied. High-cooling airflow is based on the A/C (air conditioning) selection shown in Fig. 65.
- c. When the “call for cooling” is satisfied and there is a demand for dehumidification, the cooling blower-off delay is decreased from 90 sec to 5 sec.

#### 5. Continuous Blower Mode

When the R-to-G circuit is closed by the thermostat, the blower motor BLWM will operate at continuous blower airflow. Continuous blower airflow selection is initially based on the CF (continuous fan) selection shown in Fig. 65. Factory default is shown in Fig. 65. Terminal EAC-1 is energized as long as the blower motor BLWM is energized.

During a call for heat, the furnace control CPU will transition the blower motor BLWM to continuous blower airflow or the mid-range airflow, whichever is lowest. The blower motor BLWM will remain ON until the main burners ignite then shut OFF and remain OFF for the blower-ON delay (25 sec in heat), allowing the furnace heat exchangers to heat up more quickly, then restarts at the end of the blower-ON delay period at heat airflow..

The blower motor BLWM will revert to continuous-blower airflow after the heating cycle is completed. In heat the furnace control CPU will drop the blower motor BLWM to heat airflow during the selected blower-OFF delay period before transitioning to continuous-blower airflow.

When the thermostat “calls for low-cooling”, the blower motor BLWM will switch to operate at low-cooling airflow. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 sec at low-cooling airflow before transitioning back to continuous-blower airflow.

When the thermostat “calls for high-cooling”, the blower motor BLWM will operate at high cooling airflow. When the thermostat is satisfied, the blower motor BLWM will operate an additional 90 sec at high-cooling airflow before transitioning back to continuous-blower airflow. When the R-to-G circuit is opened, the blower motor BLWM will continue operating for an additional 5 sec, if no other function requires blower motor BLWM operation.

**Continuous Blower Speed Selection from Thermostat** To select different continuous-blower airflow from the room thermostat, momentarily turn off the FAN switch or push button on the room thermostat for 1-3 sec after the blower motor BLWM is operating. The furnace control CPU will shift the continuous-blower airflow

from the factory setting to the next highest CF selection airflow as shown in Fig. 65. Momentarily turning off the FAN switch again at the thermostat will shift the continuous-blower airflow up one more increment. If you repeat this procedure enough you will eventually shift the continuous-blower airflow to the lowest CF selection as shown in Fig. 65. The selection can be changed as many times as desired and is stored in the memory to be automatically used following a power interruption.

**NOTE:** If the blower-off delay is set to the maximum, the adjustable continuous-fan feature is locked (i.e., fan speed cannot be changed from its current setting).

#### 6. Heat pump

See Fig. 42 and thermostat wiring for connections.

When installed with a heat pump, the furnace control automatically changes the timing sequence to avoid long blower off times during demand defrost cycles. Whenever W/W1 is energized along with Y1 or Y/Y2, the furnace control CPU will transition to or bring on the blower motor BLWM at cooling airflow or the mid-range airflow, whichever is lowest. The blower motor BLWM will remain on until the main burners ignite then shut OFF and remain OFF for 25 sec before coming back on at heating airflow. When the W/W1 input signal disappears, the furnace control begins a normal inducer post-purge period while changing the blower airflow. If Y/Y2 input is still energized the furnace control CPU will transition the blower motor BLWM airflow to cooling airflow. If Y/Y2 input signal disappears and the Y1 input is still energized the furnace control CPU will transition the blower motor BLWM to low-cooling airflow. If both the Y1 and Y/Y2 signals disappear at the same time, the blower motor BLWM will remain on at heat airflow for the selected blower-OFF delay period. At the end of the blower- OFF delay, the blower motor BLWM will shut OFF unless G is still energized, in which case the blower motor BLWM will operate at continuous blower airflow.

#### Component Self-Test

Refer to “Component Self Test” in the Service and Maintenance section for details.

#### Wiring Diagrams

Refer to Fig. 76 for wiring diagram.

#### Troubleshooting

Refer to the service label, see Fig. 70, wiring diagram, see Fig. 76, and the Service Guide (Page 52) can be a useful tool in isolating furnace operation problems. The Guide will help to identify the problem or failed component. After replacing any component, verify correct operation sequence.



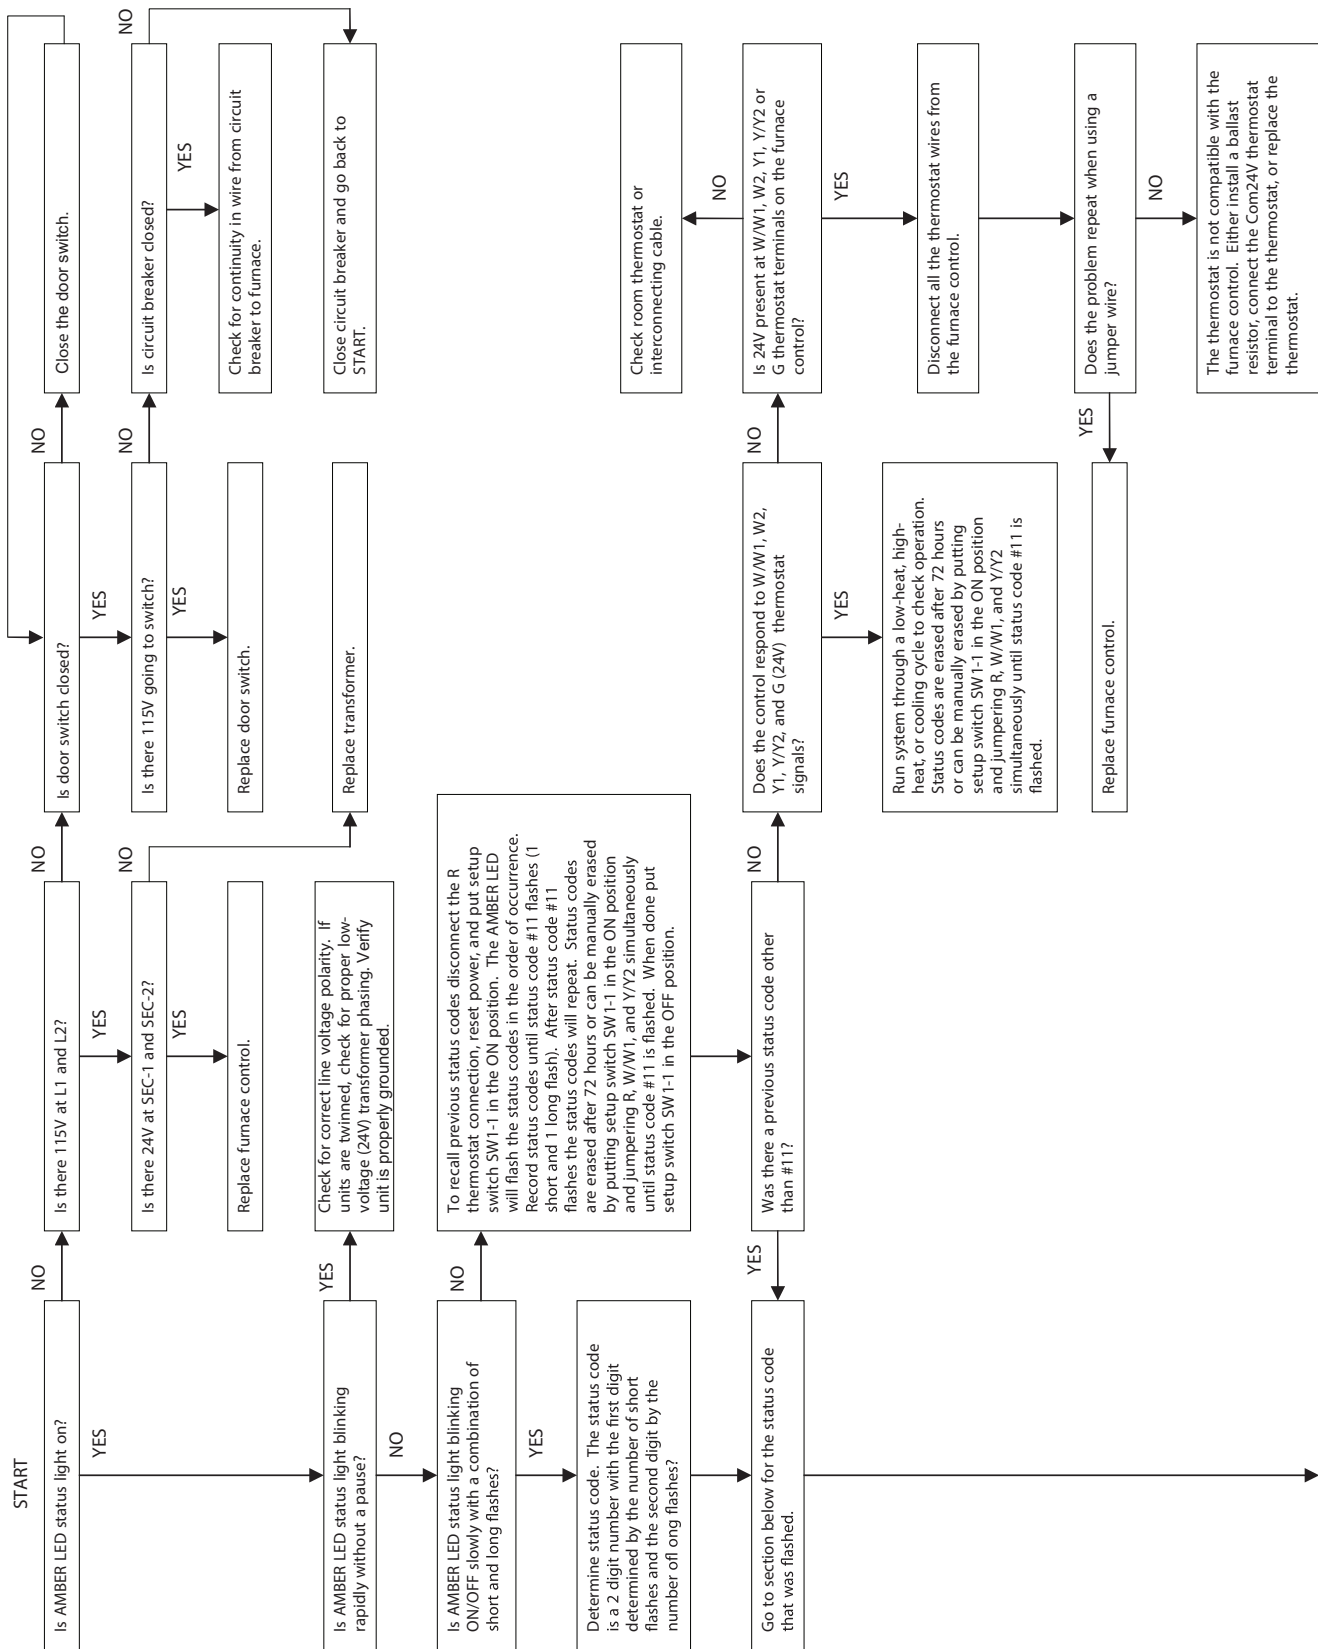


Fig. 75 – Troubleshooting Guide



A190174

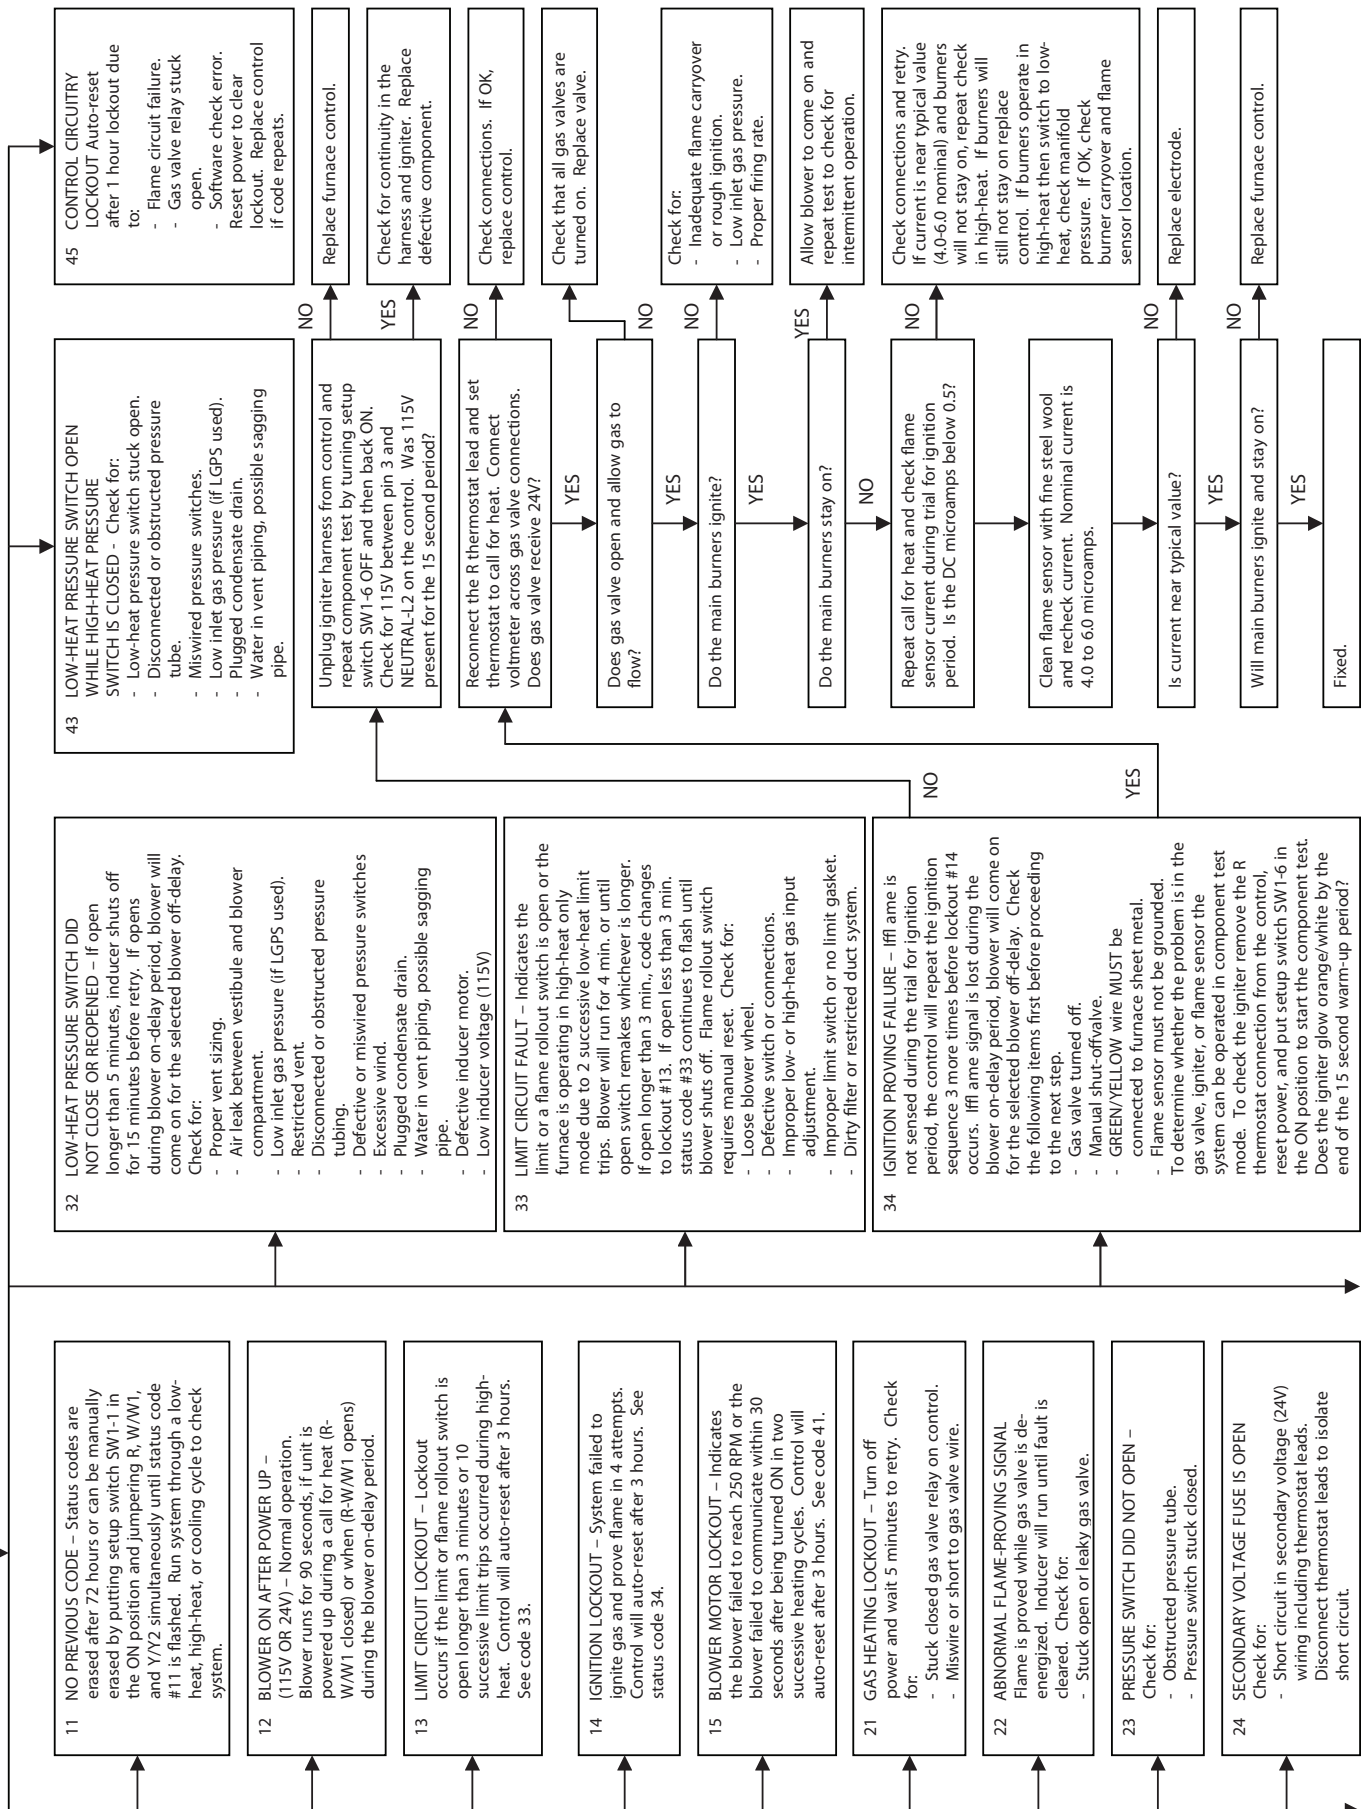

## Troubleshooting Guide (Continued)

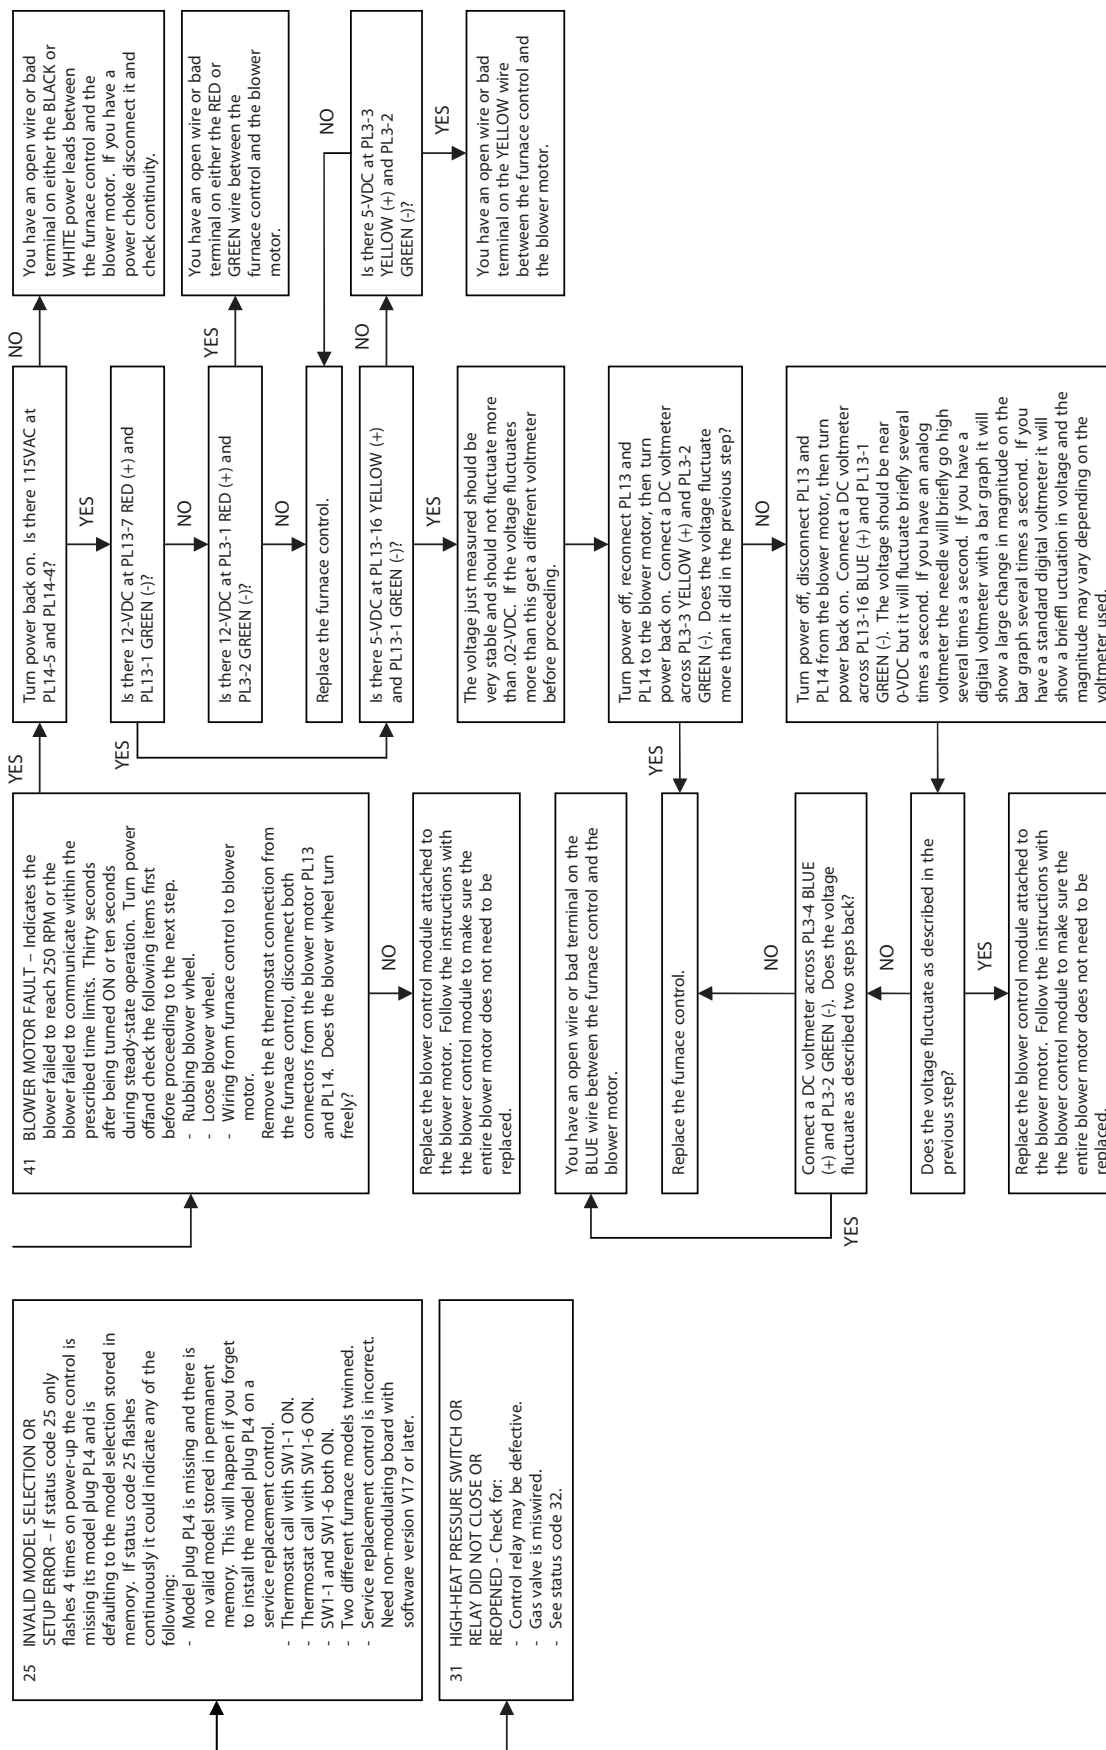

## Troubleshooting Guide (Continued)

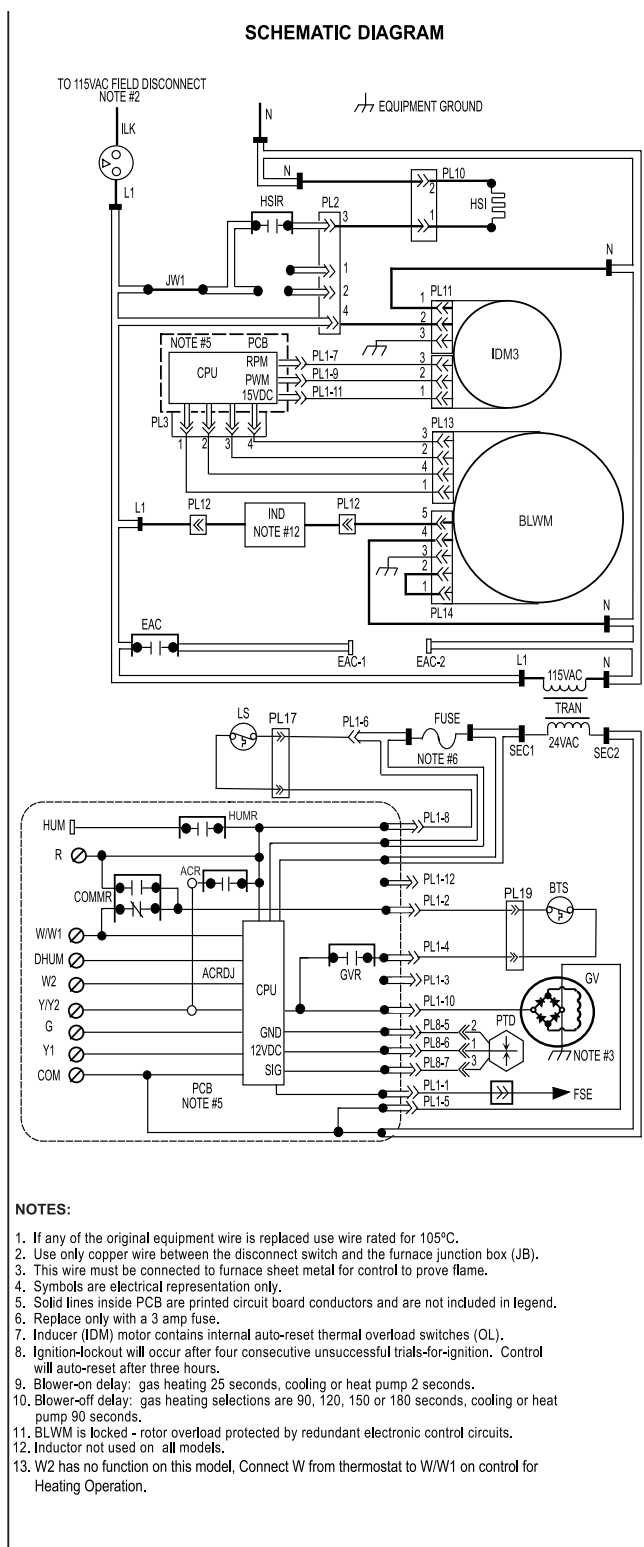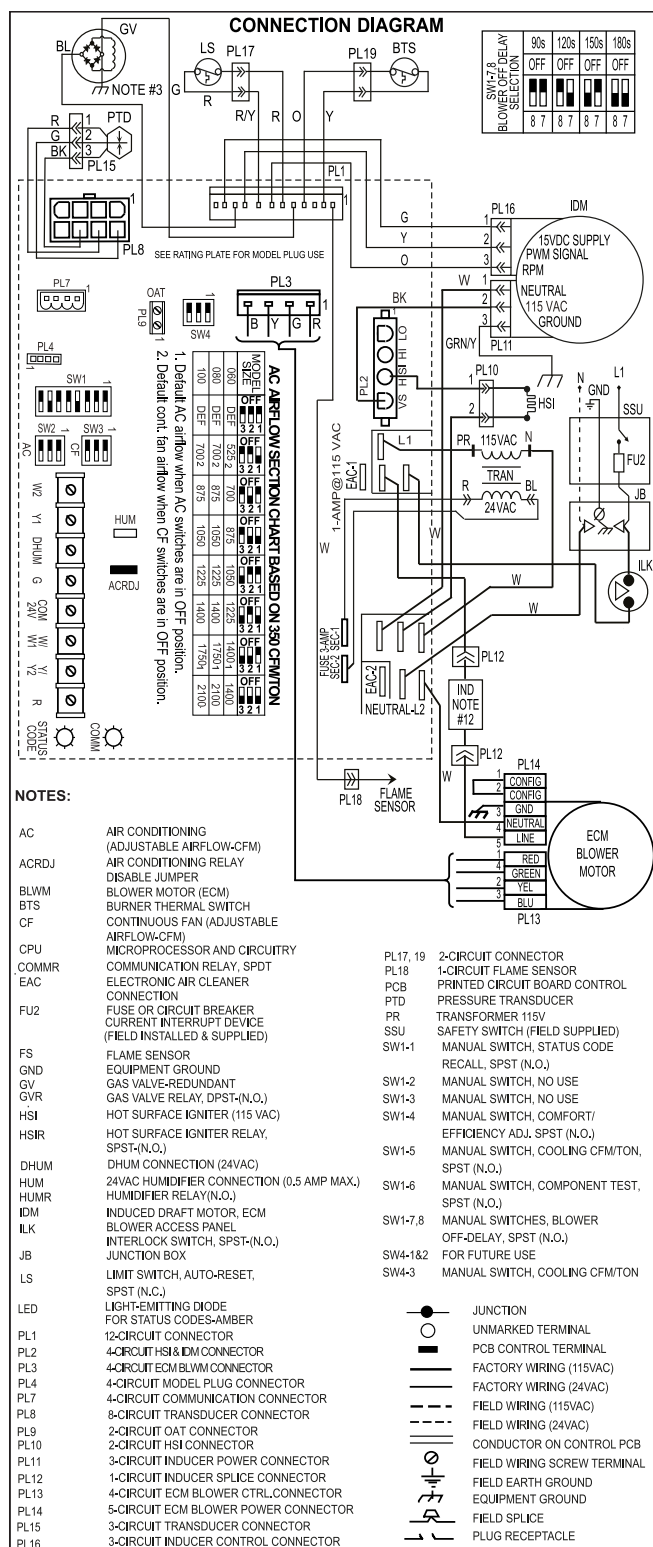

### Fig. 76 – Wiring Diagram

## SERVICE GUIDE

### LED CODES STATUS

#### CONTINUOUS OFF

Check for 115VAC at L1 and N, and 24VAC at SEC-1 and SEC-2

#### CONTINUOUS ON

Control has 24VAC power.

#### RAPID FLASHING

Line voltage (115VAC) polarity reversed. Check for poor or no ground (GND).

If status code recall is needed, disconnect the “R” thermostat lead, reset power, and put setup switch “SW1-1” in the ON position. To clear the status code history put setup switch “SW1-1” in the ON position and jumper thermostat terminals “R”, “W/W1”, and “Y/Y2” simultaneously until #11 is flashed.

**NOTE:** W2 has no function on this model, connect W from thermostat to W/W1 on control for Heating Operation.

EACH OF THE FOLLOWING STATUS CODES IS A TWO DIGIT NUMBER WITH THE FIRST DIGIT DETERMINED BY THE NUMBER OF SHORT FLASHES AND THE SECOND DIGIT IS THE NUMBER OF LONG FLASHES.

### LED ACTIVITY

11 NO PREVIOUS CODE - Stored status codes are erased automatically after 72 hours or as specified above.

12 BLOWER ON AFTER POWER UP (115VAC or 24VAC) - Blower runs for 90 seconds, if unit is powered up during a call for heat (R-W closed) or (R-W opens) during a blower on-delay period. If BTS is also open, the inducer will operate as well.

13 LIMIT CIRCUIT LOCKOUT - Lockout occurs if a limit is open. Control will auto-reset after three hours. Check for:

- Loose blower wheel
- Restricted vent
- Proper vent sizing
- Dirty filter or restricted duct system
- Defective switch or connections

14 IGNITION LOCKOUT - Control will auto-reset after three hours. Refer to status code #34.

15 BLOWER MOTOR LOCKOUT - Indicates Blower failed to reach 250 RPM or the blower failed to communicate with 30 seconds after being turned ON in two successive heating cycles. Control will auto reset after 3 hours. Refer to status code #41.

21 GAS HEATING LOCKOUT - Control will NOT auto-reset. Check for:

- Mis-wired gas valve
- Defective control (valve relay)
- 24VAC sensed at gas valve when should not be present

22 ABNORMAL FLAME - PROVING SIGNAL

- Flame is provided while gas valve is de-energized. Inducer will run until fault is cleared.

Check for:

- Leaky gas valve- Stuck-open gas valve

23 PRESSURE > 0.15” w.c. AT START-UP. Check for:

- Obstruction in pressure tubing or Transducer vent holes
- Defective Transducer-Transducer wiring

24 SECONDARY VOLTAGE FUSE IS OPEN. Check for:

- Short circuit in secondary voltage (24VAC) wiring

25 INVALID MODEL SELECTION OR SETUP ERROR - Indicated either the model plug is missing or incorrect. If code flashes 4 times on power-up control is defaulting to model selection stored in memory

26 BURNER THERMAL SWITCH (BTS) open - If switch is open during call for heat (W), then a permanent lockout will occur. Cycle power to reset lockout. Check for:

- Blocked burner inlet
- Blocked burner mesh
- Poor inducer flow- Excess wind

31 PRESSURE TRANSDUCER INPUT DOES NOT SENSE TARGET PRESSURE OR PRESSURE IS OUT OF RANGE. Check for:

- Excessive wind
- Proper vent sizing
- Restricted vent
- Defective inducer motor
- Inadequate combustion air supply
- Defective pressure transducer
- Low inlet gas pressure (if LGPS used)
- Low inducer voltage (115VAC)
- Frozen or blocked drain
- Disconnected or obstructed pressure tubing

34 GNITION PROVING FAILURE - Control will try ignition four times before lockout #14 occurs. If flame signal lost during blower on-delay period, blower will come on for the selected blower off-delay. Check for:

- Oxide buildup on flame sensor (clean with fine steel wool)
- Proper flame sense microamps (.5 microamps D.C. min., 4.0 - 6.0 nominal)
- Manual valve shut-off
- Low inlet gas pressure
- Control ground continuity
- Gas valve defective or turned off
- Flame sensor must not be grounded or touching casing
- Inadequate flame carryover or rough ignition
- Green/Yellow wire MUST be connected to furnace sheet metal

41 BLOWER MOTOR FAULT - Indicates the blower fails to reach 250 RPM or fails to communicate within 30 seconds after being turned ON, or the blower RPM falls below 250 RPM for more than 10 seconds or fails to communicate for more than 20 seconds during steady-state operation.

42 INDUCER MOTOR FAULT the RPM pulses are not detected from the inducer motor within 20 seconds after a heat request, the inducer is outside of its valid range of operation, or the inducer RPM signal was lost for 5 seconds during operation, Inducer exceeds model specific RPM limit. Check for:

- Proper vent sizing
- Restricted combustion air supply
- Failed inducer motor
- Improper or loose motor wiring or bad connection
- Frozen or blocked drain

45 CONTROL CIRCUITARY LOCKOUT Auto-reset after one hour lockout due to:

- Gas valve relay stuck open
- Flame sense circuit failure
- Software check error

Reset power to clear lockout. Replace control if status code repeats.

### LED CODES STATUS

11 Indicated the blower motor tested OK. Visual check of inducer motor and hot surface igniter required.

25 SETUP ERROR - Reference code 25 above.

41 BLOWER MOTOR FAULT - Indicates blower motor failed test. Check blower, wiring, and furnace control.

42 INDUCER MOTOR FAULT - Indicates inducer motor failed test. Check inducer, wiring, furnace control and tubing for poor connections. See code 42 above.

The repeat component test turn setup switch “SW1-6” OFF and then back ON. After component test is completed put setup switch “SW1-6” in the OFF position and reconnect the “R” thermostat lead.

### COMPONENT TEST

To initiate the component test sequence, shut OFF the room thermostat or disconnect the “R” thermostat lead. Reset power and then put setup switch “SW1-6” in the ON position to start the component test sequence. Once initiated the furnace control will turn the inducer ON at 25% duty cycle for 15 seconds then leave ON. The inducer motor will run for the entire test. The hot surface igniter and blower motor will be turned ON for 15 seconds each. When the component test is completed one or more of the above codes will flash.

## PARTS REPLACEMENT INFORMATION GUIDE

### Casing Group

Blower door  
Bottom plate  
Control door  
Door knob assembly  
Top filler plate

### Electrical Group

3-Amp fuse  
Circuit board  
Control box  
Door switch  
Junction box  
Limit switch(es)  
Transformer

### Blower Group

Blower housing  
Blower motor  
Blower wheel  
Cut-off plate  
  
Filter Group  
Filter(s)  
Media Cabinet (when used)

### Gas Control Group

Burner  
Flame sensor  
Gas valve  
Hot surface igniter  
Manifold  
Orifice

### Heat Exchanger Group

Containment plate  
Coupling box  
Heat exchanger assembly  
Primary HX cell panel  
Secondary HX assembly  
Tubing gaskets

### Inducer Group

Collector box  
Condensate trap  
Condensate trap elbow  
Gaskets  
Transducer  
Inducer motor  
Inducer wheel  
Vent elbow assembly

**TO OBTAIN INFORMATION ON PARTS:** Consult your installing dealer or classified section of your local telephone directory under “Heating Equipment” or “Air Conditioning Contractors and Systems” headings for dealer listing by brand name or contact:

#### **CARRIER**

Consumer Relations Department  
P.O. Box 4808  
Syracuse, New York 13221  
1-800-CARRIER

Have available the model number, series number, and serial number located on the unit rating plate to ensure correct replacement part.

### Model Nomenclature

| MODEL  | HEATING SIZE | MOTOR | WIDTH | VOLTAGE | MINOR SERIES | COOLING AIRFLOW (CFM) |
|--------|--------------|-------|-------|---------|--------------|-----------------------|
| 59CU5A | 060          | C     | 17    | -       | 1            | 16                    |

#### Training

My Learning Center is your central location for professional residential HVAC training resources that help strengthen careers and businesses. We believe in providing high quality learning experiences both online and in the classroom.

Access My Learning Center with your HVACpartners credentials at [www.mlctraining.com](http://www.mlctraining.com). Please contact us a [mylearning@carrier.com](mailto:mylearning@carrier.com) with questions.



## WARNING

### **FIRE, EXPLOSION, ELECTRICAL SHOCK AND CARBON MONOXIDE POISONING HAZARD**

Failure to follow this warning could result in dangerous operation, personal injury, death or property damage.

Improper installation, adjustment, alteration, service, or maintenance can cause personal injury, property damage, or death. Consult a qualified installer, service agency, or your local gas supplier for information or assistance. The qualified installer or service agency must use only factory-authorized replacement parts, kits, or accessories when modifying this product.

