MINI-MASTERZONE™ ZONING SYSTEM

MMP2

For Plug-In Damper Motors



2 Zones

Installation and Operating Instructions

ZONEFIRST®

CELEBRATING 50 YEARS OF COMFORT & SAVINGS

Controlling Your Comfort Room by Room

MINI-MASTERZONE™ ZONING SYSTEM

MMP2

Features

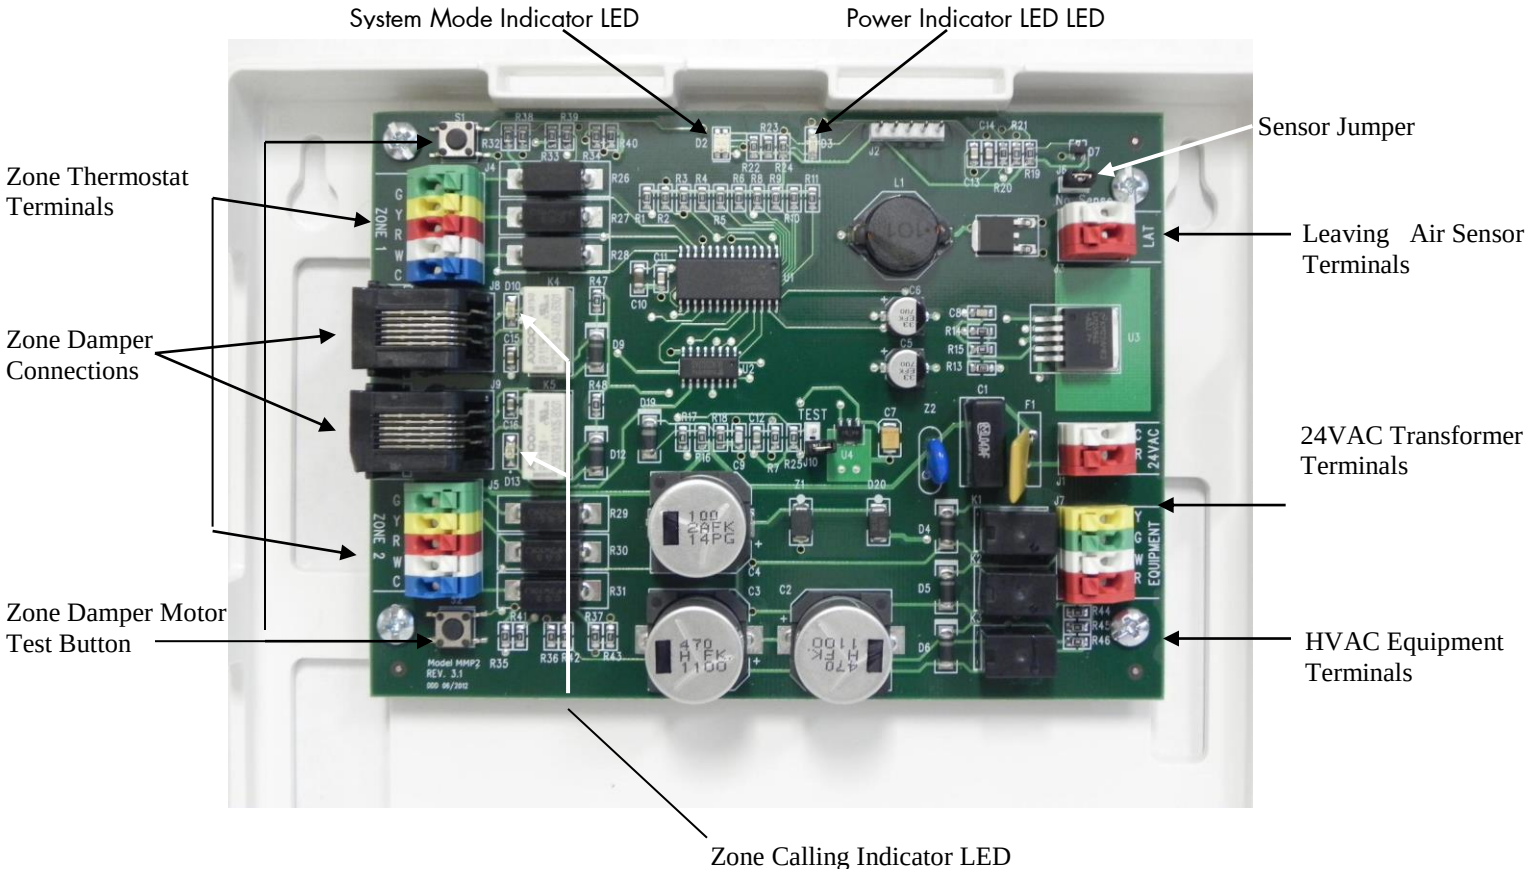

Table of Contents

Installation……2
Operation……3
HVAC Equipment Set-Up…… 3
Checkout…… 3
Wiring…… 3-4
Troubleshooting……4-5

 ©2017 ZONEFIRST®

INSTALLATION

The Mini-MasterZone™ Plug-In Damper Zoning System-2, Model MMP2, is a two (2) zone control panel for single stage heating only, cooling only or heating and cooling. The MMP2 can control any single stage gas-oil-electric furnace, hydro-air heating and air conditioning. The MMP2 panel is the central control panel where all zone dampers, zone thermostats, HVAC Equipment and power transformer are wired.

When installing the MMP2 panel it is important to pick a central location where it is most convenient to bring all the wires. Most often this is near the furnace or air handler and closest to power, the HVAC unit controls and the zone dampers when typically located at or near the plenum.

The MMP2 case and cover are made of sturdy ABS plastic and can be mounted to any flat surface. It is recommended that the panel be mounted to a wall or return plenum and NOT on the furnace or plenum where it will be in contact with the high heating temperatures. The panel can be located in an attic space or in an enclosed cabinet of a rooftop unit, provided the panel enclosed and not in direct exposure to the elements.

The cover easily removes from the case by pulling firmly and separating the cover from the case exposing the circuit board. There are 4 key-hole mounting points in each corner of the case. The case has openings in the rear of the case as well as the side for all wiring. Wiring can come from the back as well as the side in order to make a neat installation.

OPERATION

The MMP2 controls single stage heating and cooling HVAC Equipment. The MMP2 is compatible with any standard single stage thermostat and setback thermostats as well. The MMP2 has various features that make installation and checkout very simple for all of the board's functionality.

The MMP2's basic function is zone control. On a call for heating or cooling, the panel will accept the first call from any zone. Upon accepting this call the MMP2 will keep open the damper(s) to the zone calling, close the damper(s) to those zones not calling, activate the needed HVAC controls for heating or cooling, whichever is being called and not accept any calls for the opposite mode.

Any calls for the opposite mode will be locked out until the initial mode is either satisfied or a period of time has elapsed that is sufficient for the first mode to satisfy, a maximum of 20 minutes. A Patent Pending sequence determines the time the unit has been running or needs to continue to run in order to adequately provide conditioning for each mode. If a particular mode has already been calling for 20 minutes or longer and an opposite call comes in the MMP2 will immediately drop the mode, enter the purge mode in order to dissipate the conditioned air into the zones calling before switching over to provide the new conditioning call to its zones.

PURGE TIME

Once a call is satisfied the MMP2 drops the call for the heating or cooling unit controls, whichever was calling and hold the damper(s) to the zone(s) that were last calling during the Purge Mode. The Purge mode is nominally 2 minutes and allows the excess conditioned air in the plenum to be distributed only to the zone(s) that were last calling. This eliminates the problem of overshooting the temperature in the satisfied zones.

Once all zone thermostats are satisfied for heating and cooling, the MMP3 can now accept Fan calls allowing Continuous Air Circulation (CAC) in those zones where the thermostat's Fan Switch is set to

ON. These zone dampers will be OPEN while the dampers to the zones where the Fan Switch is set to AUTO will be CLOSED.

When all zone thermostats are satisfied for both Heating and Cooling, and all Fan switches are set to AUTO position, the HVAC unit will be off and all zone dampers will return to a normally open position. Once a zone calls for heating, cooling or fan, the dampers to the calling zones remain open and the dampers to the zones not calling will close.

HVAC Equipment Set-Up

The MMP2 is factory set for conventional fossil fuel (oil or gas) single stage heating and cooling.

Jumpers on the panel are for NO SENSOR and TEST. The NO SENSOR jumper must be placed on both pins when the sensor (ZPS) is not used. The TEST jumper (when placed on both pins) accelerates the panel timings in order to provide a quick checkout of the panel functions. During typical operating conditions this jumper **should not** be on both pins

CHANGEOVER TIMER

Whenever a call is made for either heating or cooling, the changeover timer is activated in order to track the amount of time heating or cooling is on. When an opposite call is made after a first call is existing the changeover timer calculates the amount of time the unit has already been supplying the first mode in order to determine how long it will hold off the opposite call. If an opposite call is made shortly after the first call, the opposite call may be held off for as much as 20 minutes. If the first call or subsequent calls for the first call mode has had that mode operating for up to 20 minutes already and an opposite call comes in after 20 minutes, the changeover timer will immediately recognize the opposite call, shutting off the current mode, enter the purge mode and automatically switch to the opposite mode.

The longer a call has been running up to 20 minutes, the shorter the wait time will be for an opposite call. If a call is over 20 minutes and an opposite call is made the changeover will be immediate following the purge time. This intelligent changeover timing makes the MMP2 unique to any other zoning system.

CHECKOUT

The MMP2 has unique features that simplify the checkout of the system and has LED readouts that constantly indicate the system operation. Once 24 Volt Power is applied to the panel the Green Power LED will illuminate. This will stay illuminated constantly when power is applied.

The System LED will provide several different indications based upon color and if it is flashing.

Heat ON	- RED
Heat Over Limit	- RED Flashing
Cool ON	- GREEN
Cool Over Limit	- Green Flashing
Fan ON	- AMBER
Purge	- AMBER Flashing

Each zone has its own small Green indicator LED next to each zone relay. This light is lit whenever the zone damper is to be open, either on a call or when all zones are satisfied.

 ©2017 ZONEFIRST®

WIRING

The MMP2 is very simple to wire and requires only a minimum number of connections. The MMP2 terminal blocks are screw-less and all wires can easily be pushed into their respective terminal by de-pressing the button for each point and releasing once the wire is seated. To remove the wire, just press its button again and remove the wire.

Zone Dampers – The MMP2 powers only the 12VDC plug-in dampers. Each damper comes with a modular cord and plugs (RJ11) already installed to allow each zone damper to just plug into the MMP2 panel. Additional dampers can be slaved to one another by using the dual ports (inter-changeable) on each MP12 actuator. Additional dampers are connected "daisy chained" from one damper to the next. A maximum of 10 dampers per zone is recommended.

Upon installation it is recommended that as each motor is connected that each motor is cycled, before connecting the next motor, to insure proper operation of that motor and to minimize troubleshooting looking for a possible bad motor or wire connection.

Plug-In Damper Wiring

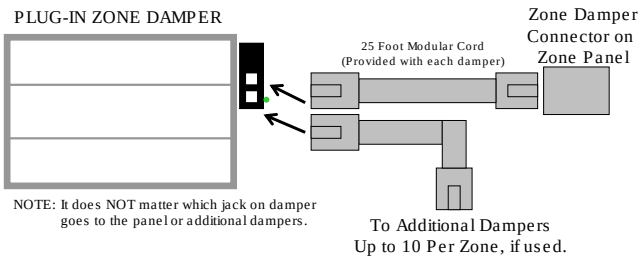

Zone Thermostats – The thermostats wiring for single stage can be four or five wire. The fifth wire being the C-Common terminal for 24 Volt powered thermostats. There are 5 terminals on the MMP2 for each thermostat, marked Y-G-R-W-C. This wiring is shown on Wiring Diagram 1 for single stage thermostats.

Zone Thermostat Wiring

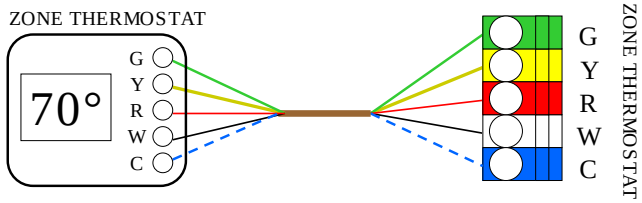

HVAC Equipment – The HVAC equipment will follow Wiring Diagram 2 for Single Stage Systems. The MMP2 can also control Heating Only and Cooling Only as well as both Heating and Cooling.

HVAC Equipment Wiring

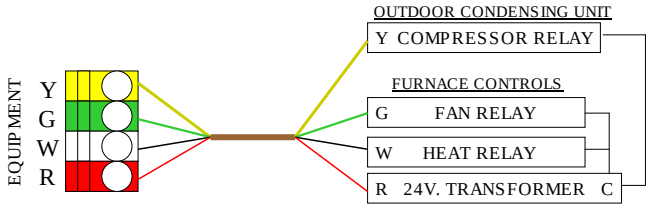

Transformer – A separate 24 Volt AC, 40VA Transformer is recommended to power the control panel, thermostats and dampers. Often the transformer on the HVAC unit only has enough power for its own controls. Therefore it is recommended a separate transformer be used to power this panel and the dampers wired to it.

Transformer Wiring

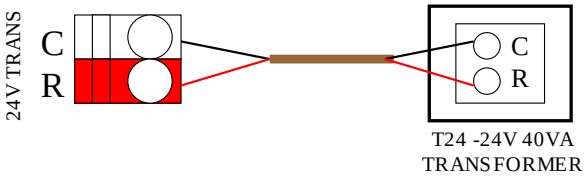

Zone Plenum Sensor

The Zone Mix-Air Sensor, Model ZPS, is a remote sensor that is located in the supply air duct to sense the leaving air temperature of the HVAC Unit. The ZPS is a high limit protection for the heating and a low limit protection for the cooling. When zoning, the airflow through the HVAC Unit is critical. The ZPS protects the equipment in low air flow situations as well as when by-pass air is being directed back into the return air duct.

The heating limit is fixed at 170°F. The cooling limit is fixed at 40°F. When the ZPS senses heating above its set point, or cooling below its set point, the MMP2 will drop both stages of heating or cooling. The ZPS must sense a 10°F fall for heating or rise for cooling before re-activating the first stages of heating or cooling.

The ZPS requires 2 wires from the sensor to the LAT terminals on the MMP2 panel. The ZPS probe can also be adjusted for length by loosening the end nut and sliding the probe thru the mounting plate in order for the probe to pass through any duct insulation

 ©2017 ZONEFIRST®

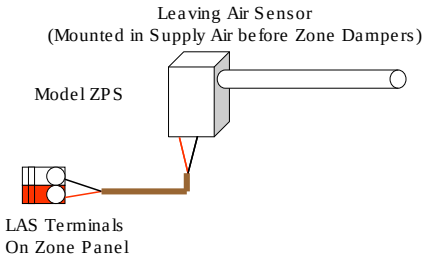

NOTE: If the ZPS is not used, the NO SENSOR jumper located just above the LAT terminals must be on the pins.

After installing the ZPS, use the chart supplied with the ZPS to check the Ohm reading for the appropriate duct temperature.

TROUBLESHOOTING

The MMP2 is a very simple control to troubleshoot, especially with the LED indicators. The only other device needed is a simple Volt/Ohm meter.

Almost all problems can be traced to an external component or wiring to the MMP2. While the MMP2 has been designed to operate under extreme voltage conditions and is fuse protected, like any computer the micro-processor can hang up and not operate properly.

Turn off the power to the panel for several seconds until the LEDs got out and then turn the power back on to see if the panel resets. In many instances this resolves the problem.

The first check is for 24VAC Power to the panel. When there is power the Green Power LED will be lit. If not check the transformer and the power supply to it.

Zone(s) Not Calling

Each zone has a Green LED next to the zone relay when it is calling. The LED being lit shows that the call is being recognized by the MMP2. If a zone is supposed to be calling and the Zone LED is not on, check for 24VAC across the thermostat terminal C and the Y, if a Cool call, W if a Heat Call, or G if a Fan call. If there is no voltage here at the panel the panel is not getting the signal from the thermostat. The problem is mis-wiring, a broken wire or a problem in the thermostat. To check the zone on the panel, place jumper from R to Y to simulate a Cool call, R to W to simulate a Heat call, or R to G to simulate a Fan call. By jumping these terminals the zone LED will activate.

Zone(s) Will Not Shut Off

If a zone will not stop calling, the Zone LED should still be on. Depending on the call disconnect the Y, W or G wire from the zone terminal strip on the panel. The call from that zone will drop out when the thermostat wire is removed. Check the thermostat wiring for a mis-wiring or short that keeps the zone calling.

If the thermostat wire is disconnected from the proper terminal on the zone and the zone LED remains lit, re-boot the panel to see if the call drops. If the call still stays on, turn power off to the panel for 10 seconds and then turn back on. Once power is restored and the thermostat is disconnected the call should drop from the zone, if not replace the panel.

Damper Motor Checkout Procedure

In order to determine the operation of the damper motors, the panel motor plug can be checked to determine if power is being supplied from the panel. If there is power at the motor plug, the problem may be a broken wire or poor connection in the cord or the motor itself.

To check the power to the motor from the damper plug on the panel, switch your meter to DC Volts. Note the wires on the plug and check across either Positive and Negative wires. Note that each plug has two positive leads and two negative leads. Both positive and both negative leads are wired together. The meter will read either Plus (+) or Minus (-) 12VDC depending if the damper is to be Open or Closed respectively.

DAMPER CLOSED

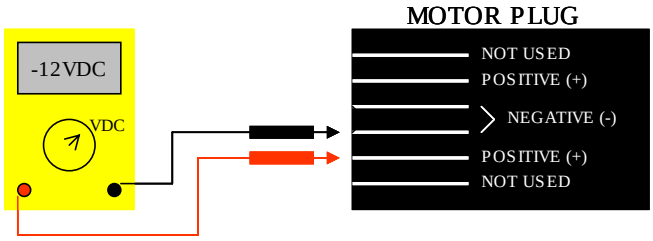

DAMPER OPEN

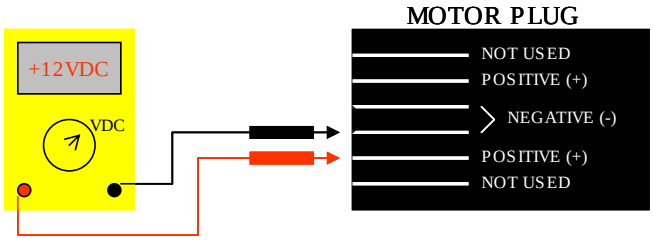

When using multiple dampers on a single zone, please note to have no more than 10 dampers on a single zone. Adding dampers beyond the recommended number may cause all dampers to be slow to operate and may not fully cycle between open and closed.

 ©2017 ZONEFIRST®

MMP2

Wiring Diagram

For Single Stage Heating/Cooling

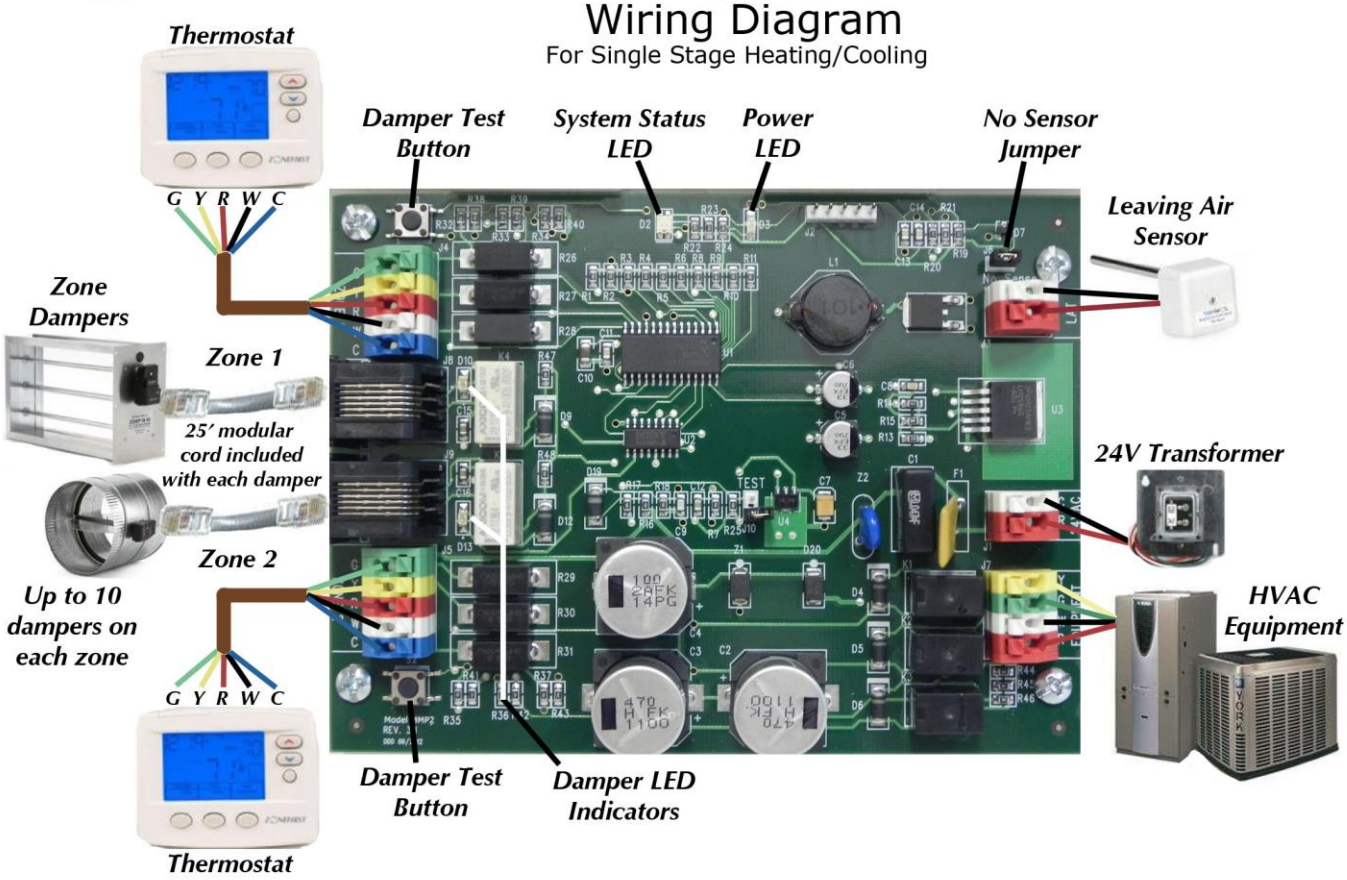

SYSTEM OPERATION: The MMP2 Zone Control provides for two zone heating and/or cooling. Use any standard thermostat and plug-in dampers for each zone. When either zone calls for heating, cooling and or the fan only, the opposite zone damper closes and the MMP2 activates the appropriate HVAC Controls. The Status LED is RED for Heat Call, GREEN for Cool Call and both light for a Fan Only call or in a time delay. Each zone has an LED that lights green whenever the zone damper is to be open. Each zone has a test button for each damper by powering it close and returning it open when released. For further information refer to the installation instructions with this panel or scan the code in the top right corner. For on the job assistance call 1-877- FIRSTZONE (347-7896). M-F, 7AM-5PM, ET.

Or visit us at www.zonefirst.com

Connect With Us

6 Aspen Drive • Randolph, New Jersey 07869-1103 USA

Telephone 1.201.794.8004 FAX 1.201.794.1359

www.zonefirst.com info@zonefirst.com

©2017 ZONEFIRST®