
RECTORSEAL

HVAC installation

SOLUTIONS

Mighty Bracket™

Innovative support tool makes mini-split installation a single person job.

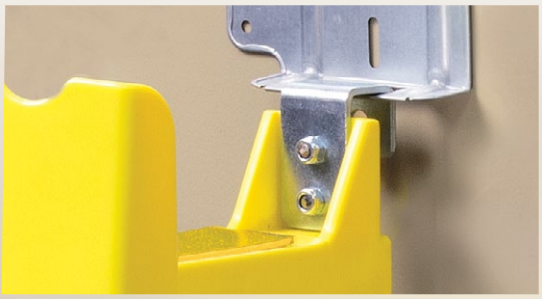

◀ Clips to the mounting bracket of most mini-split brands, holding the unit securely in place during installation. Will not damage walls.

Mighty Bracket™

Mini-split Installation Support Tool

US Patent 9,772,113 and 10,113,754
Austrtalia Patent AU2014265064

Mighty Bracket™

Mini-split installation support tool

Code	Description	Qty.
97705	Mini-split support tool	4

FEATURES

- Allows single person installation
- Simple clip on support
- Does not damage walls
- Use on most brands of mini-splits
- Folds for easy storage
- Includes tote bag




APPLICATION • Hook onto mini-split mounting plate to hold mini-split unit securely in place while installing refrigerant lines, condensate line and electrical hookup.

USER INSTRUCTIONS 1. Attach Mounting Hooks of Mighty Bracket to the mini-split mounting plate tabs. (If no tabs are present on the mounting plate, Mighty Bracket hooks can be attached by screws threaded into the wall stud.) 2. Place Foot Supports flat against the wall. (If necessary to avoid potential wall scratching, place clean towel or cardboard between support foot and wall surface) 3. Position Level Adjustment Pins to make Support Arm of the brackets horizontal. 4. Position lift Gates at the end of Support Arms to make sure the unit cannot slide off. 5. Place protective Sleeve Socks over Gates to avoid scratching the unit. 6. Set unit securely onto the top of the Support Arms. 7. Connect refrigerant lines using RectorSeal® NoKink™.* 8. Connect condensate drain piping and electrical wiring. 9. Carefully lift and place the indoor unit onto top tabs of mounting plate. 10. While ensuring unit does not fall, carefully remove Mighty Bracket and installation is complete.

US Patent 9,772,113 and 10,113,754
Austrtalia Patent AU2014265064

* When paired with RectorSeal® NoKink™, Mighty Bracket™ allows simple installation without damaging or kinking copper refrigerant lines.

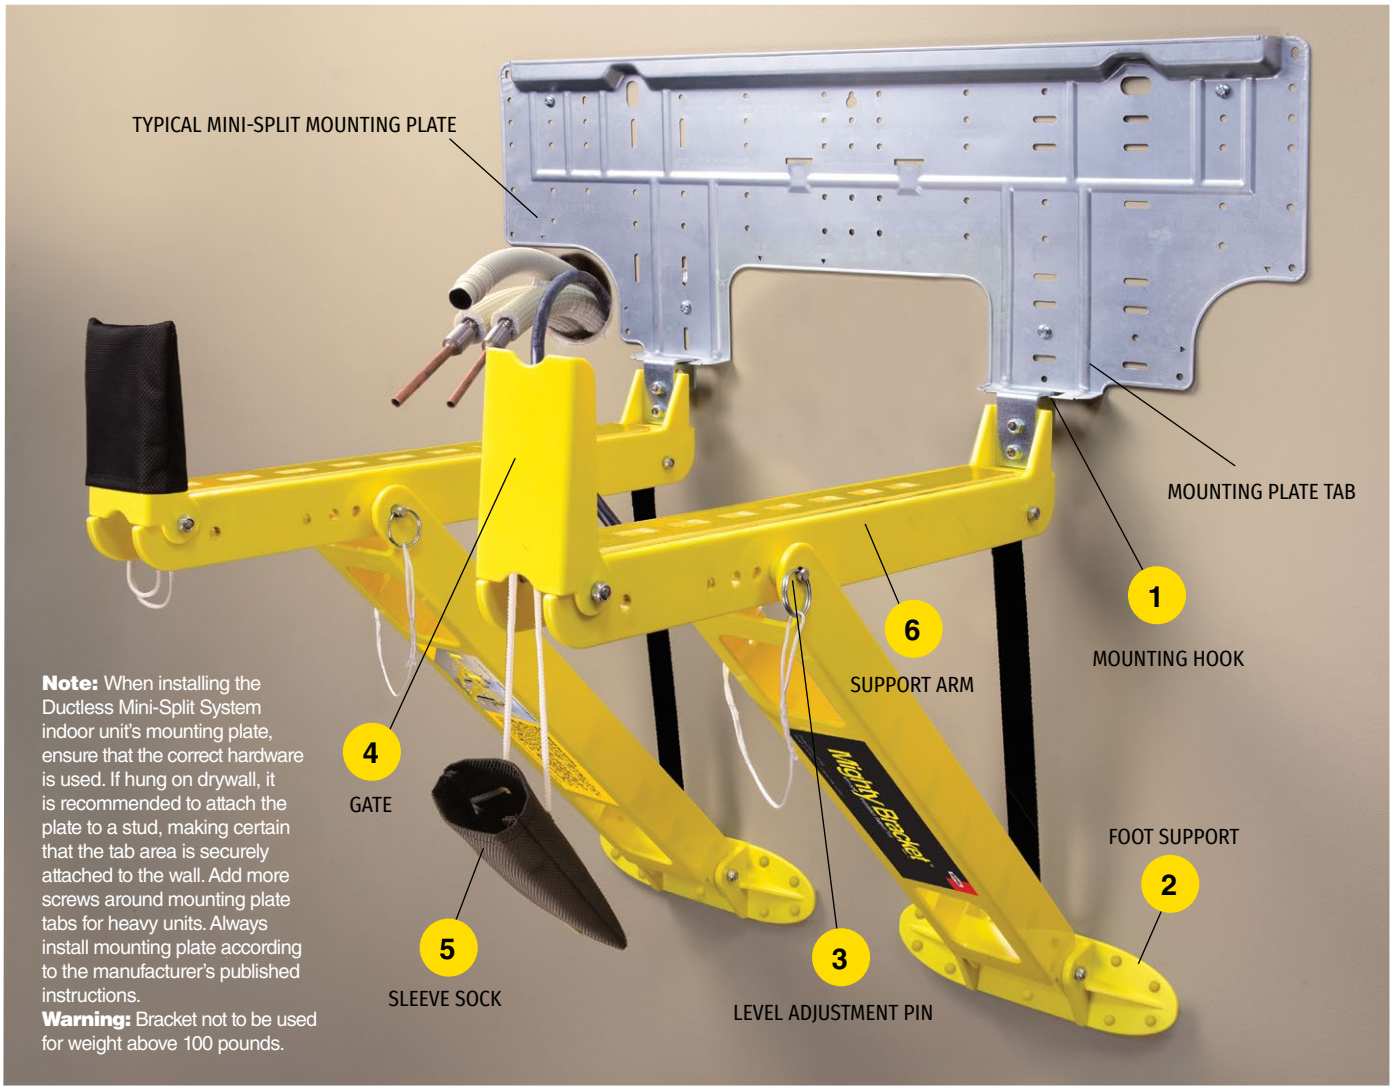

Note: When installing the Ductless Mini-Split System indoor unit's mounting plate, ensure that the correct hardware is used. If hung on drywall, it is recommended to attach the plate to a stud, making certain that the tab area is securely attached to the wall. Add more screws around mounting plate tabs for heavy units. Always install mounting plate according to the manufacturer's published instructions.
Warning: Bracket not to be used for weight above 100 pounds.

RectorSeal® 2601 Spenwick Drive - Houston, TX 77055 800-231-3345 rectorseal.com
RectorSeal Australia Pty Ltd. PO Box 5266 Brendale, Qld 4500 1300 77 2878 rectorseal.com.au

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensor's and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2023 RectorSeal. All rights reserved. R50372-0923