


REVISIONS				
NO.	REV.	DESCRIPTION	DATE	APPRV

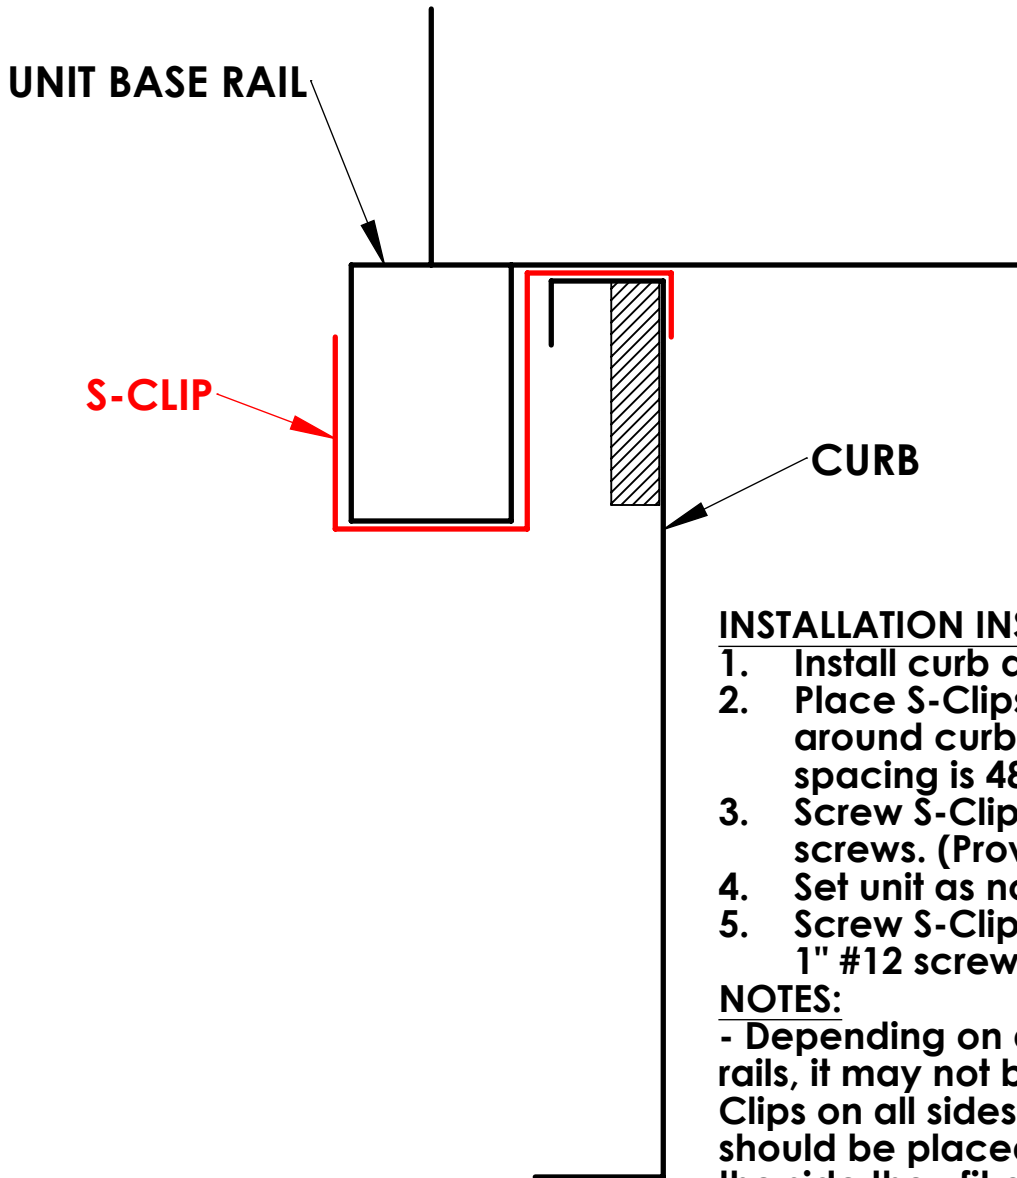

INSTALLATION INSTRUCTIONS:

1. Install curb as normal.
2. Place S-Clips evenly spaced around curb. CDI's recommended spacing is 48" or less.
3. Screw S-Clips to curb using 1" #12 screws. (Provided by others)
4. Set unit as normal.
5. Screw S-Clips to unit base rail using 1" #12 screws (Provided by others)

NOTES:

- Depending on design of unit base rails, it may not be possible to have S-Clips on all sides of the unit. Clips should be placed closer together on the side they fit or can be field-modified to work as necessary

APPROVALS		DATE		TITLE:	
DRAWN:		.			
CHECKED:		.			
MGMT:		.			
CDI 17560 TYLER ST NW ELK RIVER, MN 55330 (763)391-7790 (763)3917851		FILE NAME:		DRAWING NO.:	
		S-Clip Instructions		REV:	
DIMENSIONS ARE AS FOLLOWS: 1.000 in [25.40 mm]		3RD ANGLE PROJECTION 		ECO #: SCALE: 1:3 SHEET: 1 OF 1	