
DIMENSIONED AND TOLERENCED PER ANSI Y14.5M-1982

REVISIONS				
NO.	REV.	DESCRIPTION	DATE	APPRV

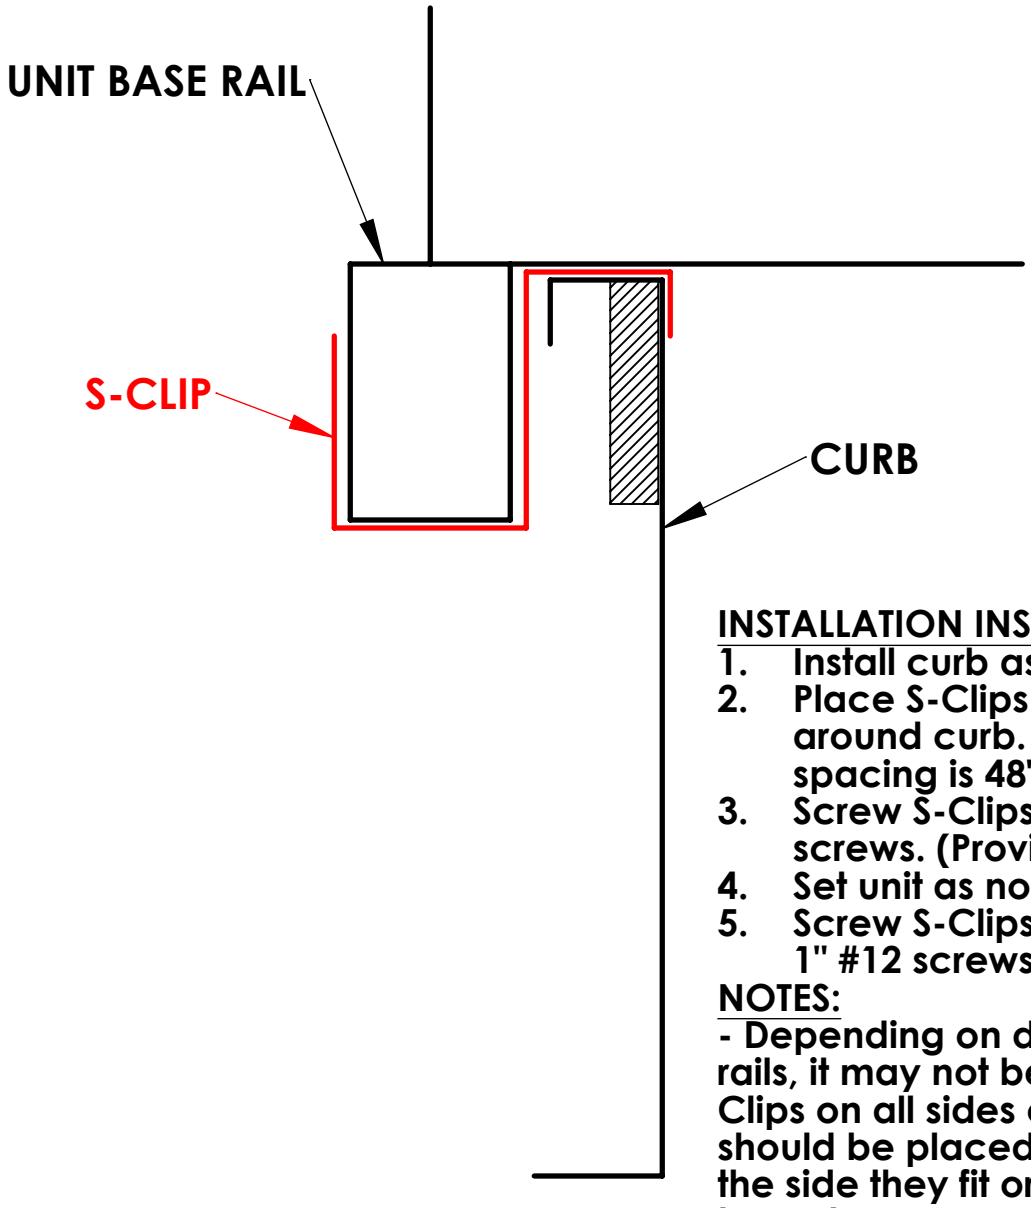

INSTALLATION INSTRUCTIONS:

1. Install curb as normal.
2. Place S-Clips evenly spaced around curb. CDI's recommended spacing is 48" or less.
3. Screw S-Clips to curb using 1" #12 screws. (Provided by others)
4. Set unit as normal.
5. Screw S-Clips to unit base rail using 1" #12 screws (Provided by others)

NOTES:

- Depending on design of unit base rails, it may not be possible to have S-Clips on all sides of the unit. Clips should be placed closer together on the side they fit or can be field-modified to work as necessary

APPROVALS	DATE
DRAWN:	
CHECKED:	
MGMT:	

TITLE:

DIMENSIONS ARE AS FOLLOWS: 1.000 in [25.40 mm]

3RD ANGLE PROJECTION

CDI
17560 TYLER ST NW
ELK RIVER, MN 55330
(763)391-7790
(763)3917851

FILE NAME: S-Clip Instructions

DRAWING NO.:

REV:

ECO #:

SCALE: 1:3

SHEET: 1 OF 1