17149_ins_BAPI_Guard

rev. 1/14/10

Overview

The **BAPI-Guard** prevents tampering, physical damage and unauthorized adjustment of thermostats. The attractive, low profile design is available in two sizes to fit most thermostats. It is made of thick, durable polycarbonate and features exceptional airflow, key lock protection, horizontal or vertical mounting and easy installation with hardware included.

Identification

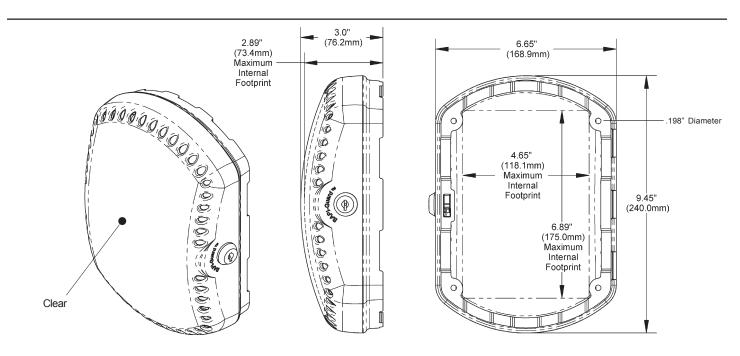**NOTE 1:** The BAPI-Guard (above) and BAPI-Guard 2 (below) are shown in a size relative to each other.

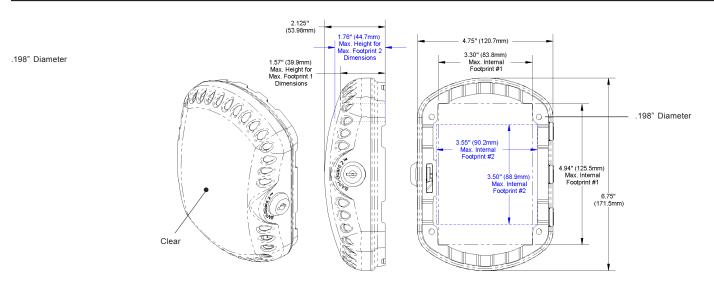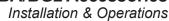**Fig 1:** BAPI-Guard Dimensions **(BA/BG)**   Mounting Hole Spacing:5.32" x 6.13"

Fig 2: BAPI-Guard 2 Dimensions **(BA/BG2)**   Mounting Hole Spacing: 3.76" x 4.02"

Specifications subject to change without notice.

Building Automation Products, Inc., 750 North Royal Avenue, Gays Mills, WI 54631 USA
Tel:+1-608-735-4800 • Fax+1-608-735-4804 • E-mail:sales@bapihvac.com • Web:www.bapihvac.com

1

Mounting

The BAPI-Guard's cover comes off the mounting base; it does not rotate on a hinge. To remove the cover open the lock by rotating the key 1/4 turn clockwise, open the cover about 15 degrees to the base and push off to the "hinge" side.

Place the base over the device to be protected and mark for the mounting holes. Cover device to be protected with a damp towel to prevent dust from getting into protected device.

For drywall, drill four 9/32-inch (7.1mm) holes. Insert the anchors until they are flush with the wall surface. Attach the base to the wall with the drywall screws. (See figure 3 below)

For concrete or cinder block, drill four 5/32-inch (4mm) holes, 1-3/4 inch (45mm) deep. Attach the base to the wall with the concrete screws. (See figure 3 below)
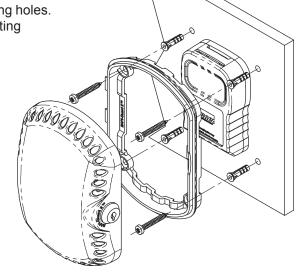
Fig 3: BAPI-Guard Mounting

Note 2: One key fits all BAPI-Guard locks. Order BAPI part number **BA/KEY16187** for replacement keys.
Note 3: You can only remove the key from the BAPI-Guard lock in the locked position.

Specifications

Material	Impact resistant Polycarbonate	**Typical Thermostats Accommodated**	
Construction	Two piece (Base & removable Cover)	**BAPI-Guard**	BA/BS, BA/AQS-R, BA/420COBAPI-Stat,
Venting	360º using base channels and multiple 1/4" Ovals	Honeywell	T7300, T7350, T7560, TH8000, THx200, C7232A
		Viconics - PECO	VT7600, VT7300, VT7200 - T170
Lock	Key operated cylinder w/hook latch	JCI	T600, A350, W351, P352, A319,
Key	Two keys included		A19ABC, A28AA
Replacement Key	BA/KEY16187	Telaire-Kele	8000, 9200 - RTC2P, CDAWLCD
Mounting	Four tabs in the base ring	Vaisala - GE	HMW – GEHxS, EHRH
Hardware Included	2-keys,	**BAPI-Guard 2**	Delta, BAPI-Stat 2, Decora,
	Four #10-1.5" drywall screws		PreCon, Siemens/Powers
	Four #10-1.5" concrete screws	Honeywell	TB6980, TB7980, T6575, T8575,
Cleaning	Water dampened cotton cloth as needed		TH5100, T87, TH3100, TH4100
	(Other chemicals could affect the sensor inside)	JCI	T4000, T22, T25, T26
		Columbus Elec	ET5, ETD5, UT8001
		PECO	T155, T158, T167, T168
Maintenance	None required.	Kele	CDKW, TP1M, KTR, EXECUTIVE
	(It may be worth checking the mounting screws once a year for tampering.)	TAC/BC	TK1000, TK5000, TK2200, 2212
		Vaisala - GE	GMW – 5001
Color	Clear center w/ etched side wall		
Agency	UL 94, V-0, RoHS		

Mounting Hole Spacing

BA/BG	5.32" X 6.13" (135 X 155.8 MM)
BA/BG2	3.76" x 4.02" (95.6 x 102 mm)

Specifications subject to change without notice.