FOR CONNECTING 1/4" COPPER OR POLY WATER LINE TO SILL COCK OR PIPE ADAPTER

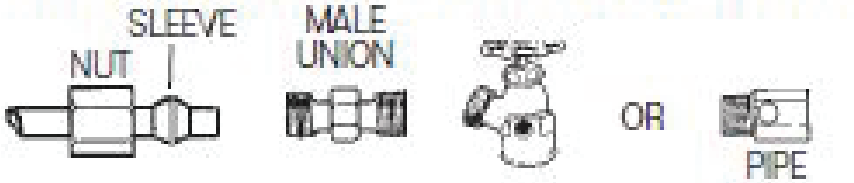

FOR COPPER TUBING: BRASS SILL COCK

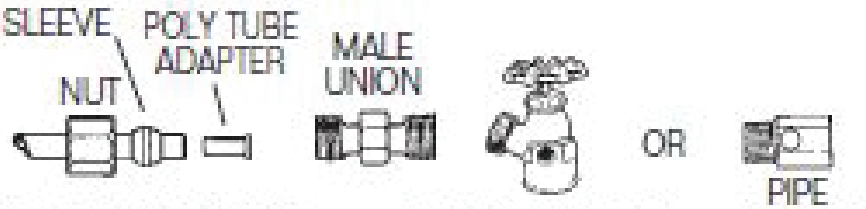

FOR POLY TUBING: BRASS SILL COCK

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

NOT FOR USE WITH POTABLE WATER LINES

1. Attach male union to sill cock, pipe adapter or other 1/8 FPT fitting.
2. Attach tubing:

Copper Tubing: 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto copper tube. 3. Tighten nut with a wrench.

Poly Tubing: 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto poly tube. 3. Insert poly tube adapter into end of tube. 4. Tighten nut with a wrench.

PN 9375 Form 993514-0519

0 26529 93750 4

www.dialmfg.com Made in China

© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov.