WATER SHUT OFF CONTROL VALVE FOR CONNECTING 1/4" COPPER OR POLY WATER LINE TO SILL COCK OR PIPE ADAPTER

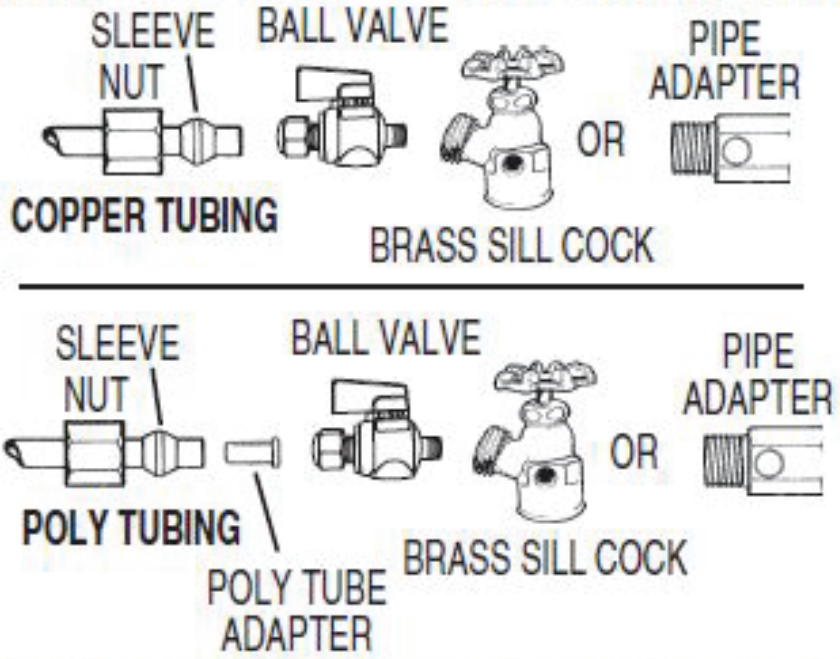

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

NOT FOR USE WITH POTABLE WATER LINES

1. Attach ball valve to sill cock, pipe adapter or other 1/8 FPT fitting. 2. Attach tubing: **Copper Tubing:** 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto copper tube. 3. Tighten nut with a wrench. **Poly Tubing:** 1. Cut the end of the tube square to insure proper fit. 2. Place nut and sleeve onto poly tube. 3. Insert poly tube adapter into end of tube. 4. Tighten nut with a wrench.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

PN 9426 Form 99063-0519

0 26529 94260 7

www.dialmfg.com Made in China

© Copyright 2019 Dial Mfg., Inc. Phoenix, AZ