INSTALLATION DATA
ANS Z21.20
AUTO IGNITION SYSTEMS

NOTE: Install and position Uni-Couple® so that pilot burner flame envelopes top 3/8” to 1/2” of the tip.

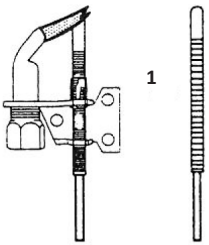

SPRING CLIP BRACKET

No adaptor required. Just snap Uni-Couple in place. Retainer clip may be used to replace old one if required.

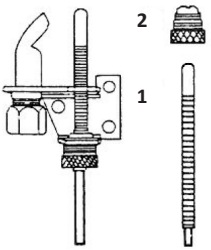

THREADED BRACKET

Screw zip-nut adaptor (2) into bottom of pilot bracket (1). Push Uni-Couple into place in bracket.

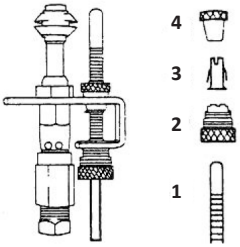

UNTHREADED BRACKET

Push zip-nut adaptor (2) onto Uni-Couple tip as shown and position near bottom. Insert tip into bracket. Place retainer clip (3) on tip with flange down. Place stabilizer (4) with taper down on retainer clip and push assembly down into pilot bracket.

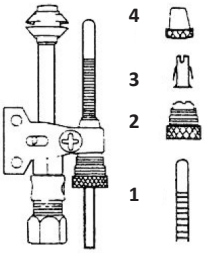

CLAMP BRACKET

Push Zip-Nut adaptor (2) onto Uni-Couple tip (1) as shown and position near bottom. Place retainer clip (3) on tip with flange down. Place stabilizer (4) with taper up on retainer clip and push assembly down on Uni-Couple tip. Loosen clamp and insert. Tighten clamp.

191 E. North Avenue
Carol Stream Illinois 60188 USA
Customer Service
Telephone 1.800.304.6563
Facsimile 1.800.426.0804
HVACCustomerService@robertshaw.com

For Technical Service
Telephone 1.800.445.8299
Facsimile 1.630.260.7294
TechnicalService@robertshaw.com

Robertshaw®, Ranco®, Paragon®, Uni-Couple® and Uni-Line® are trademarks of Robertshaw its subsidiaries and/or affiliated companies. All other brands mentioned may be the trademarks of their respective owners.

www.uni-line.com
www.robertshaw.com

©2014 Robertshaw

07/14 –1-951 RevB