


AC CURRENT SWITCHES

RIBXG SERIES

Current Switches, Split Core, Fixed, Adjustable, or Self-Calibrated, Up to 150 Amps Sensing Range, Terminal Strip or Wire Lead Output

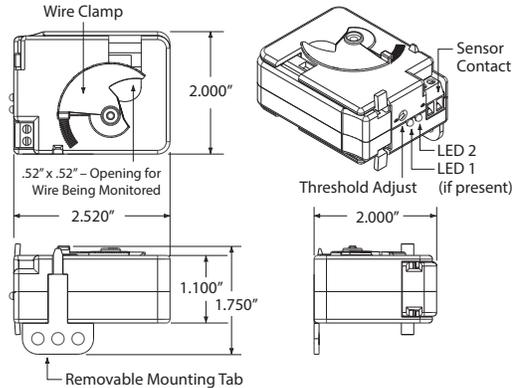

SPECIFICATIONS

Operating Temperature: -30 to 140° F
Humidity Range: 5 to 95% (noncondensing)
Max Sense Voltage: 600 Vac

Mounting/Installation: Removable mounting tab provided. The wire clamp locks against the wire being monitored, securing the unit in place.

Sensor Contact Status: Current below threshold: Open
Current above threshold: Closed


Origin: Made of US and non-US parts
Approvals: UL Listed, C-UL, CE, RoHS, UL916 (All models)
UL864, California State Fire Marshal (RIBXGTF, RIBXGTA, RIBXGTA-SCAL, RIBXGA-ECM)

Sensor Contact:

- Solid State Contact
- When sensor contact is off (open), leakage: <30 uA @ 30Vac/dc
- When sensor contact is on (closed), voltage drop: < .3 Vac/dc @ .1 Amp < 1.6 Vac/dc @ .4 Amp

SELF-CALIBRATING AC SWITCHES (MODELS WITH -SCAL SUFFIX)

The SCAL unit begins the 30 second self-calibration process the first time current is applied in the operating range. The threshold is then set. Subsequent calibrations may be performed by moving SW1 to the position opposite of its current position with or without current applied (hands can be safely away from live voltage). Once current begins flowing, or if it already is, the calibration process will begin. At the end of the 30 seconds, amperage will be read and set as the threshold. SW2 in the ON position provides a 15% (+/-3%) differential. In the OFF position, it provides a 25% (+/-3%) differential. SW2 can be selected at anytime and does not affect the threshold setting. Current in-range closes the sensor contact. Current above or below range opens the sensor contact.

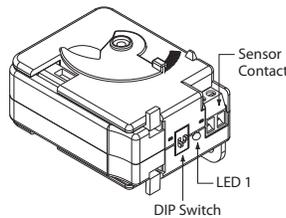

Example: With a current of 10 amps set as the threshold and a 15% differential, sensor contact will be closed between 8.5 amps and 11.5 amps and open outside of this range. A small amount of hysteresis is provided to prevent dithering near the differential limits.

-SCAL LED TABLE

LED Off	No Current
2 Winks	Current Below Range
3 Winks	Current In Range
4 Winks	Current Above Range
Continuous Winks	Calibration in Progress

RIBXG SERIES SELECTION GUIDE

Model #	Sensing Range	Type	Threshold	Sensor Contact Type	Switching Voltage Range	Max Switching Current	Sensor Contact Termination	LED 1	LED 2
RIBXGF	.35-150 Amp	Split Core	Fixed, .35 Amp	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Wht/Yel 16 ~ 18 AWG Wire Leads		
RIBXGFL*	.75-150 Amp	Split Core	Fixed, .75 Amp	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Wht/Yel 16 ~ 18 AWG Wire Leads	Over Trip Point	
RIBXGTF	.35-150 Amp	Split Core	Fixed, .35 Amp	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Terminal Strip, Accepts #14-22 AWG Wire		
RIBXGTFL*	.75-150 Amp	Split Core	Fixed, .75 Amp	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Terminal Strip, Accepts #14-22 AWG Wire	Over Trip Point	
RIBXGA	.75-150 Amp	Split Core	Adjustable	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Wht/Yel 16 ~ 18 AWG Wire Leads	Over Trip Point	Under Trip Point
RIBXGTA	.75-150 Amp	Split Core	Adjustable	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Terminal Strip, Accepts #14-22 AWG Wire	Over Trip Point	Under Trip Point
RIBXGA-SCAL	3-150 Amp	Split Core	Self-Cal.	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Wht/Yel 16 ~ 18 AWG Wire Leads	See -SCAL Table	
RIBXGTA-SCAL	3-150 Amp	Split Core	Self-Cal.	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Terminal Strip, Accepts #14-22 AWG Wire	See -SCAL Table	
RIBXGTA-ECM	.25-150 Amp	Split Core	Adjustable	Solid State Switch SPST	30 Vac/dc	.4 Amps Max	Terminal Strip, Accepts #14-22 AWG Wire	Over Trip Point	Load Current Detcted

* = Not approved by California State Fire Marshal